

# Stand Alone Digital Video Recorder

## H.264 Realtime DVR 4, 8, 16 Channel Models

## User's Manual



## FCC Compliance Statement

**Notice to Users:** This equipment has been tested and found to comply with the limits for a Class A digital device. Pursuant to Part 15 of the FCC Rules, these limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

### **CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The equipment complies with the requirement of FCC CFR 47 PART 15 SUBPART B, Class A.


## Explanation of Graphical Symbols



This symbol indicates the presence of important operating and maintenance (servicing) instruction in the literature accompanying the product.



This symbol indicates the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

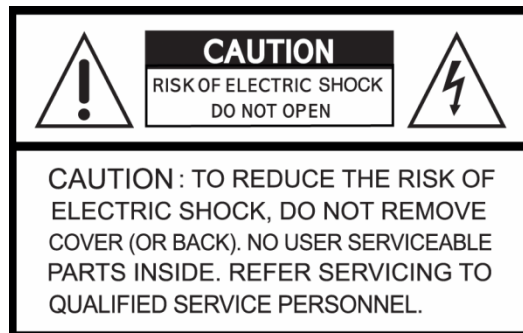


## Warnings

- Installation and servicing should be performed only by qualified and experienced personnel.
- Power off the DVR when connecting cameras, audio, or sensor cables.
- The manufacturer is not responsible for any damage caused by improper use of the product or failure to follow instructions for the product.
- The manufacturer is not responsible for any problems caused by or resulting from the user physically opening the DVR for examination or attempting to fix the unit.
- The manufacturer may not be held liable for any issues with the unit if the warranty seal is removed.

## Cautions

- This product has multiple-rated voltages (110V and 220V). See installation instructions before connecting to the power supply.
- This product uses a Lithium battery.
- To avoid any risk of explosion, do not replace the battery on the main board by anything other than a Lithium battery.
- Dispose of used batteries according to the manufacturer's instructions.
- This equipment and all communication wirings are intended for indoor use only.
- To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture.

## WEEE(Waste Electrical and Electronic Equipment)

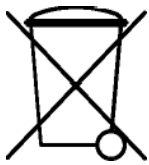

Customers in European Union countries are advised to dispose this product, at the end of its useful life, as per applicable local laws, regulations and procedures.

## Important Safeguards

1. **Read Instructions**  
All safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions**  
The safety and operating instructions should be retained for future reference.
3. **Cleaning**  
Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.
4. **Attachments**  
Never add any attachments and/or equipment without manufacturer approval as such additions may result in the risk of fire, electric shock, or other personal injury.
5. **Water and/or Moisture**  
Do not use this equipment near water or in contact with water.
6. **Accessories**  
Do not place this equipment on an unstable cart, stand or table. The equipment may fall, causing serious injury to a child or adult and serious damage to the equipment.  
Wall or shelf mounting should follow the manufacturer's instructions and should use a mounting kit approved by the manufacturer.



Move this equipment and cart combination with care. Quick stops, excessive force and uneven surfaces may cause the equipment and cart combination to overturn.

7. **Power Sources**  
This equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power, please consult your distributor or local power company.
8. **Power Cords**  
Operator or installer must remove power, BNC, alarm and other connections before moving the equipment.
9. **Lightning**  
For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges.
10. **Overloading**  
Do not overload wall outlets and extension cords to avoid the risk of fire or electric shock.

#### **11. Objects and Liquids**

Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock.

Never spill liquid of any kind on the equipment.

#### **12. Servicing**

Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.

#### **13. Damage Requiring Service**

Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or the plug has been damaged
- If liquid is spilled or objects have fallen into the equipment
- If the equipment has been exposed to rain or water
- If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.
- If the equipment has been dropped or damaged the cabinet.
- When the equipment exhibits a distinct change in performance—this indicates a need for service.

#### **14. Replacement Parts**

When replacement parts are required, ensure the service technician uses replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

#### **15. Safety Check**

Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.

#### **16. Field Installation**

This installation should be made by a qualified service person and should conform to all local codes.

#### **17. Correct Batteries**

##### **WARNING**

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.  
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

#### **18. Operating Temperature**

An operating temperature range is specified so that the customer and installer may determine a suitable operating environment for the equipment.

#### **19. Elevated Operating Ambient Temperature**

If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the specified operating temperature range.

#### **20. Reduced Air Flow**

Installation of the equipment in the rack should be such that the amount of airflow required for safe operation of the equipment is not compromised.

#### **21. Mechanical Loading**

Mounting of the equipment in the rack should be such that a hazardous condition is not caused by uneven mechanical loading.

#### **22. Circuit Overloading**










Consideration should be given to connection of the equipment to supply circuit and the effect that overloading of circuits might have on over-current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

#### **23. Reliable Earthing (Grounding)**

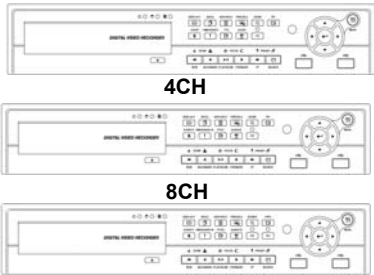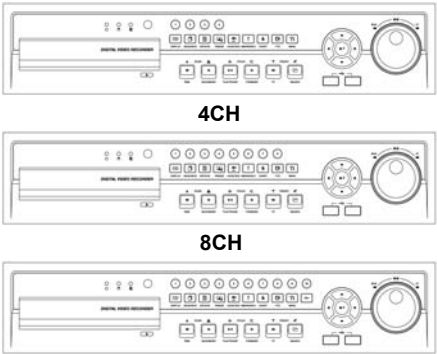Reliable grounding of rack mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (for example, use of power strips).



## THE LIST OF CONFIGURATION

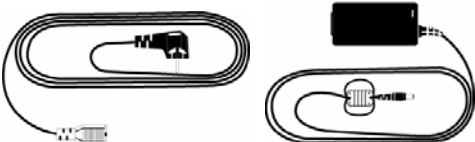DVR Set	<p><b>A Type</b></p>  <p><b>B Type</b></p> 
CD (Software/Manual)	
Remote Controller	
Manual	
Screws	
HDD Brackets (Optional)	
Data Cable (SATA Cable)	
Power Cable	

# Operation Precautions

## ● Power Off

- Do not turn DVR off, or plug off the power adapter while DVR is in operation (record/playback). Otherwise, it may cause permanent damage to the equipment. Please click (↔) **SETUP>SYSTEM>Shutdown** sequentially and then remove the power after DVR is shutdown completely. It is safe to wait for 5 seconds before turning the power on again.
- Do not turn DVR off, or plug off the power adapter while External storage device (e.g., USB memory stick, removable external hard disk and the like) in use. Otherwise, it may cause permanent damage to the equipment. Make sure that the power switch is in the "ON" position until data storage is completed. Please be aware that removing the storage device cause the same damage to the equipment.
- Do not turn DVR off, or plug off the power adapter during the format of the hard disk. Otherwise, it may cause permanent damage to the equipment. Make sure that the power switch is in the "ON" position until the formatting of the disk is completed.

## ● HDD Installation/Addition/Moving/Replacement/Removal

- For installation/addition/replacement/Removal of HDD (DVD-RW), make sure that DVR is turned off. Otherwise, it may cause permanent damage to the HDD (DVD-RW).
- When you want to power DVR off, please click (↔) **SETUP>SYSTEM>Shutdown** sequentially and then remove the power after DVR is shut down completely.
- **Installation/Addition/Moving/Replacement:** You should start 'HDD initialization' including formatting. Otherwise, DVR won't recognize the hard disk and may begin to function abnormally. Please follow the below procedure for 'HDD initialization'.
  - ① (Date/Time setup) Set up the current date and time (**SETUP>SYSTEM>Admin>Date/Time**).
  - ② (Initialization of system setup) All setup values are restored to original factory default settings. (**SETUP>SYSTEM>Information>Status>Setup>Default**).
  - ③ (HDD format) HDD format is done by **SETUP>SYSTEM>Admin>Storage>Format**. If there are more than two HDDs, each must be formatted, separately. When the format is completed, DVR will auto-reboot.
- **Removal:** Follow the Remove procedure even when a pre-installed hard disk has been removed. **SETUP>SYSTEM>Admin>Storage>Format**, click (↔) 'Removed' item under the discrete Format headings of a corresponding HDD to discard 'HDD' item. When the Remove procedure is completed, DVR will auto-reboot.

## ● Date/Time Change

- Any change in Date/Time is immediately applied onto live video (LIVE), but the date/time when the recording was done are not changed.
- Make sure that you reboot DVR after adjusting the Date/Time.
- Also, do not forget to execute **SETUP>SYSTEM>Shutdown** in sequence before reboot.

## ● Upgrade

- Do not upgrade until you install a hard disk drive. Make sure you upgrade when the hard disk drive is in proper operation.

## ● Using a Mouse

- **Left mouse button:** have the same function as **Enter (↔)** on the Front panel of DVR
- **Central button (wheel):** have the same function as **Search** key on the Front panel of DVR (display search menu)
- **Right mouse button:** display a number of 'Function keys' (please see 'Input Device and Screen Icons>Using a mouse' in this manual)

## ● PLAY/PAUSE Key

- Press the **PLAY/PAUSE** key to one-touch playback on the viewing screen (playback the recorded video from the last one minute).
- Every time you press the **PLAY/PAUSE** key during playback mode, it is changed to '1X PLAY' and 'PAUSE'. The displayed sign on the screen also changes from ► to II.
- If you want to change mode (1X PLAY, REW, FF, BACKWARD, FORWARD) during playback, always press the **PLAY/PAUSE** key first (please see if the sign II is shown on the screen).
- Press the **PLAY/PAUSE** key to back up. Make sure that the backup is done in 'PAUSE' mode.

## ● Camera Title

- Camera Title displayed in Record and Playback modes of DVR is set to CAM1 ~CAM16. Registering camera title in setup menu (**DEVICES>Camera/PTZ>Title**) is to make every setup process easier.

# Table of Contents

## SERVER

<b>1. Product Features</b>	<b>8</b>	4.2.4 System Log	26
1.1 Unpacking	8	4.2.5 Exit	27
1.2 Service	8	4.2.6 Shutdown	27
1.3 System Connection Diagram	8	4.3 DISPLAY	27
<b>2. Installation</b>	<b>10</b>	4.3.1 OSD	27
2.1 Hard disk and DVD-RW Installation	10	4.3.2 Main Monitor	28
2.1.1 SATA Port	10	Full Seq	
2.1.2 No Jumper Designation	10	Quad Seq	
2.1.3 HDD Installation	10	X9 Seq	
2.1.4 DVD-RW Installation	11	4.3.3 Spot Monitor	29
2.2 Connector Wiring	11	4.3.4 Spot Monitor Control on Display Mode	29
2.2.1 Video In/Out Connections	11	4.4 DEVICES	30
2.2.2 Monitor Connections	11	4.4.1 Network	30
(Video Out, VGA, SPOT)		LAN	
2.2.3 Audio Connections	11	DDNS	
2.2.4 TCP/IP(Ethernet) Connections	11	Port	
2.2.5 Alarm Connections	11	Notification	
2.2.6 RS-485/422 Connections	11	4.4.2 Camera/PTZ	33
2.2.7 USB Connections	11	4.4.3 Audio	34
2.2.8 Factory Reset Switch	12	4.4.4 Alarm In	34
2.2.9 Power Supply Connections	12	4.4.5 Alarm Out	34
2.2.10 Connection Guideline	12	4.4.6 Serial In	35
<b>3. Input Device and Screen Icons</b>	<b>13</b>	4.5 RECORD	35
3.1 Keys and LEDs	13	4.5.1 Settings	35
3.2 Camera Select Keys for 4/8 channel DVR	14	Continuous	
3.3 Front Panel	14	Event	
3.4 Using a Remote Control	15	Emergency	
3.5 Using a Mouse	15	4.5.2 Schedule	37
3.6 Screen Icons	16	4.5.3 Pre Alarm	38
<b>4. Setup</b>	<b>17</b>	4.5.4 Motion Detection	38
4.1 Login/Logout	17	4.5.5 Holiday	39
4.2 SYSTEM	18	4.6 LINK	40
4.2.1 Information	18	4.6.1 Alarm In	40
Status		4.6.2 Motion Event	41
Version		4.6.3 Video Loss	41
Record		4.6.4 System Event	42
4.2.2 Admin	21	4.6.5 Popup Link	43
Date/Time		<b>5. Operation Instruction</b>	<b>44</b>
NTP		5.1 Viewing	44
Storage		5.1.1 First Image	44
4.2.3 Account	24	5.1.2 View Formats	44
New Group		5.1.3 Digital Zoom	45
Login Settings		5.1.4 Freeze Live Image	45
New User		5.1.5 Pan/Tilt Control	45
		5.1.6 System Log	46
		5.1.7 Key Lock	46

5.1.8	Emergency Recording	47
5.2	Search	47
5.2.1	Date/Time Search	47
5.2.2	Calendar Search	47
5.2.3	Event Search	48
5.3	Playback	49
5.4	One-touch Playback	50
5.5	Archive	50
5.6	Color Control and Position	51
5.7	Alarm Out Control	52

## **CMS**

<b>6.</b>	<b>Program Installation</b>	<b>54</b>
6.1	System Recommendation	54
6.2	Program Installation Method	54
6.3	Login	55
<b>7.</b>	<b>Function and Instructions</b>	<b>56</b>
<b>8.</b>	<b>Watch Mode</b>	<b>57</b>
8.1	Login Screen	57
8.2	Local Setting	57
8.2.1	System Setup	57
8.2.2	Remote Site	58
8.3	Live Video	60
8.3.1	Network Connect	60
8.3.2	Watch Mode	61
8.3.3	Multi Screen	62
8.3.4	Screen Color Adjustment	62
8.3.5	Audio	62
8.3.6	System LOG	62
8.3.7	Alarm Out	63
8.3.8	One Touch Recording	63
8.4	PTZ Control	63
8.5	Health Check	64
8.5.1	Camera Connection and Operating Status	65
8.5.2	HDD Connection and Its Operating Status	65
8.5.3	Recording Status	65
8.5.4	Motion Recording Status	65
8.5.5	Alarm In Connection and Operating Status	65
8.5.6	Alarm Out Connection and Operating Status	65
8.6	Remote Setting	65
<b>9.</b>	<b>Search Mode</b>	<b>67</b>
9.1	Search Screen	67
9.2	Remote Search	67
9.3	Local Search	68
9.4	Event Search	68
9.5	Playback	69
9.5.1	Playback Control Button	69
9.5.2	Print	69
9.5.3	Save	70
9.5.4	Archive	70

<b>10.</b>	<b>Others</b>	<b>72</b>
10.1	Viewer	72
10.2	E Map	72
10.3	Watermark Check System	73
10.4	Estimator	74

## **Keyboard Controller**

11.1	Keyboard Controller	76
11.2	PTZ/DVR Control Mode	76
11.2.1	PTZ Control Mode	76
11.2.2	DVR Control Mode	77
11.3	Keyboard Controller Setting	77
11.4	Q/A	78
11.4.1	When a Key dose not Work after Setup	78
11.4.2	When Tx Blinks Continually on the LED Window	78
11.5	Keyboard System Connection	79
11.6	Consideration	79
11.7	Display Channel Change	79
11.8	System Configuration Diagram	80
11.8.1	Configuration Diagram I	80
11.8.2	Configuration Diagram II	81
11.8.3	Configuration Diagram III	81

## **Serial In**

12.1	Usage of Serial-In Function	83
12.2	Connection method in each series	83
12.3	Connection Diagram	83
12.4	Link	84
12.4.1	Link Setup	84
12.4.2	Schedule Setup	85
12.5	Setup	85
12.5.1	Title	85
12.5.2	Port Setting	86
12.5.3	OSD Display	86
12.5.4	Pattern Setting	86
12.6	Search	89

## **CMS Web Client**

13.1	Setup and Login	91
13.2	Live Display	91
13.3	Playback Screen	92

## **Mobile CMS**

14.1	Setup and Login	95
14.2	Installation	95
14.3	Site Configuration	97
14.4	Connect	99
14.5	Uninstall	99

# 1. Product Features

## 1.1 Unpacking


- This equipment is an electronic appliance, so it should be handled with special care.
- After unpacking, please check if all the following items are included.
  - DVR Main body
  - **A Type** Power Supply Adapter (DC 12V, 3.33A) and Power Supply Cable
  - **B Type** Power Supply Adapter (DC 12V, 5A) and Power Supply Cable
  - Remote Control With 2 AAA batteries
  - Installation CD (CMS Software & User's Manual)

## 1.2 Service

- If there is any problem in the product, please refer servicing to a supplier or a distributor with qualified service personnel.


## 1.3 System Connection Diagram

### A Type - 4 / 8 / 16 Channel Series DVR

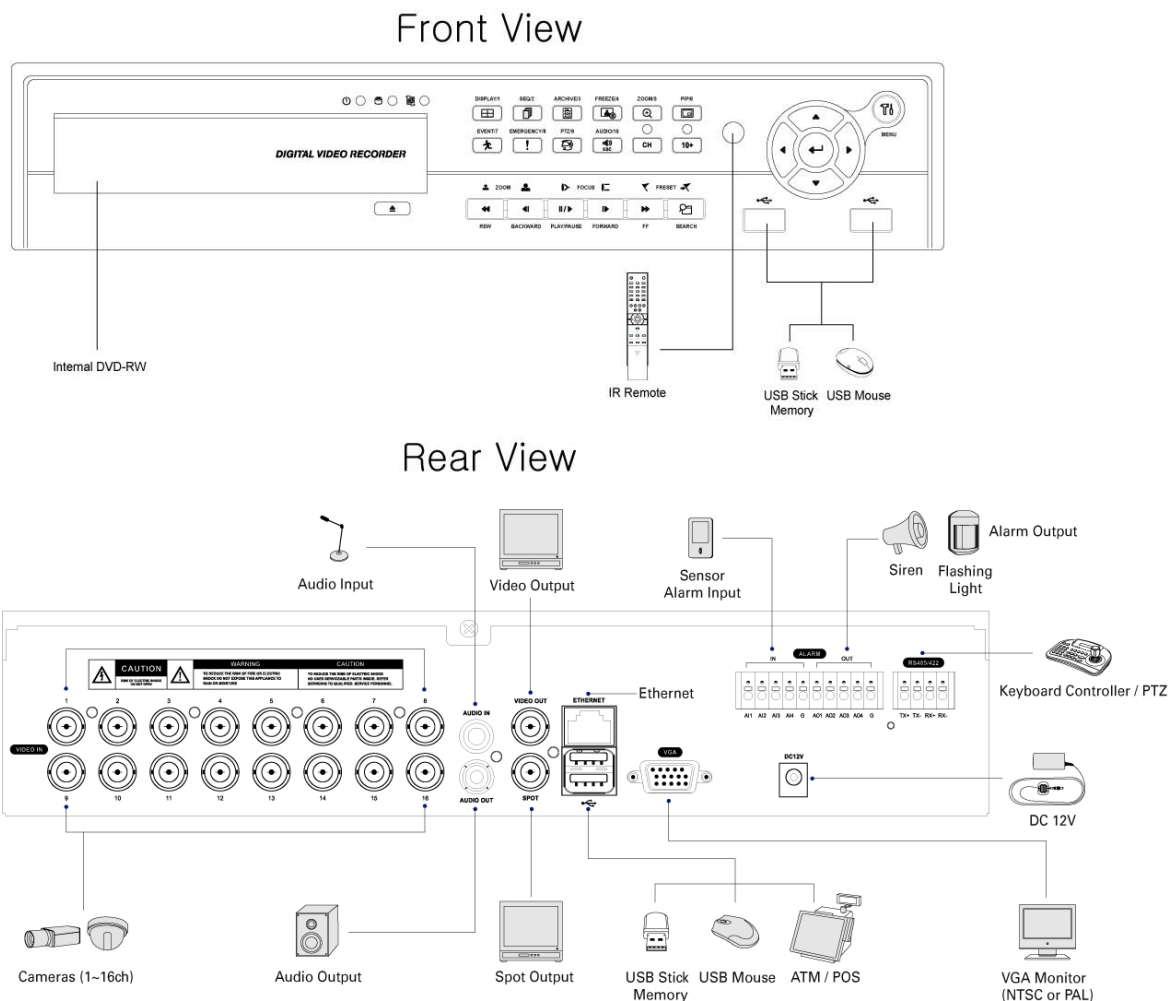


## B Type - 4 / 8 / 16 Channel Series DVR

### Front View

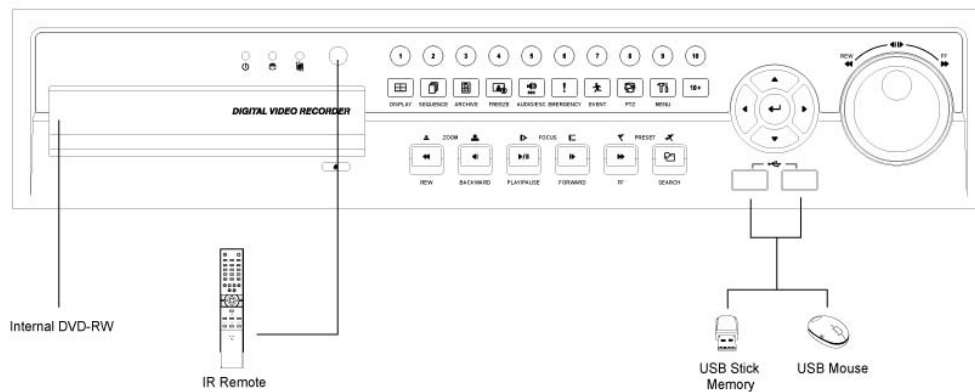

### Rear View

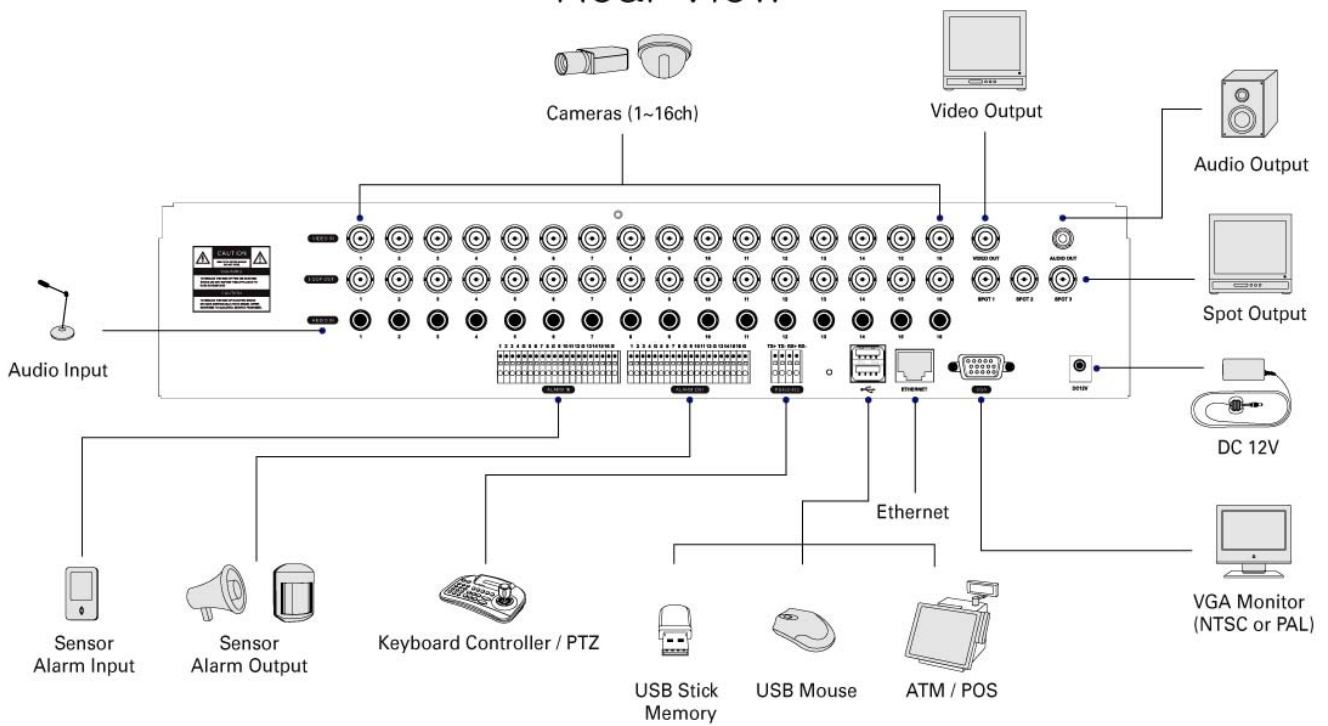

## 2. Installation

### 2.1 Hard disk and DVD-RW Installation

#### 2.1.1 SATA Port

- Main substrate of this DVR has three SATA ports: they are indicated as SATA 1,2 and SATA 3.( **A Type** )  
Main substrate of this DVR has four SATA ports: they are indicated as SATA 1,2 and SATA 3,4.( **B Type** )
- Up to two SATA devices (hard disk and DVD-RW) are connected in Serial to the SATA ports, but the devices must be connected correct SATA port.
- Please mount DVD-RW at the **SATA 3 port**.( **A Type** DVR)  
Please mount DVD-RW at the **SATA 4 port**.( **B Type** DVR)
- Refer to below table to mount a hard disk and DVD-RW.

#### A Type

	Storage		SATA 1,2 Port		SATA 3 Port
	HDD	DVD-RW	1	2	3
<b>A Type 4/8/16 Channel DVR</b>	1	1	HDD	----	DVD-RW
	2	1	HDD	HDD	DVD-RW

#### B Type

	Storage		SATA 1,2 Port		SATA 3,4 Port	
	HDD	DVD-RW	1	2	3	4
<b>B Type 4/8/16 Channel DVR</b>	1	1	HDD	----	----	DVD-RW
	2	1	HDD	HDD	----	DVD-RW
	3	1	HDD	HDD	HDD	DVD-RW
	4	0	HDD	HDD	HDD	HDD

#### 2.1.2 No Jumper Designation

- SATA device does not use jumper. You only need to connect SATA device to SATA port according to HDD/ DVD-RW you have. A connector for designation is located between the 7-pin SATA connector and the 15-pin Power connector.

#### 2.1.3 HDD Installation

- Securely fix a hard disk by using bracket and screws provided herewith.
- Please do not use any different hard disk cables (data cable and power supply cable) other than ones we provide. Otherwise, it may cause damage to the hard disk.

#### CAUTION

Install hard disk after DVR power is off. Otherwise, it may cause permanent damage to the hard disk. To turn off DVR, please click (↔) SETUP>SYSTEM>Shutdown. Also, wait for 5 seconds before plugging in power supply again.

#### CAUTION

- For installation/addition/replacement/Removal of HDD (DVD-RW), make sure that DVR is turned off. Otherwise, it may cause permanent damage to the HDD (DVD-RW).
- **Installation/Addition/Moving/Replacement:** You should start 'HDD initialization' including formatting. Otherwise, DVR won't recognize the hard disk and may begin to function abnormally. Please follow the below procedure for 'HDD initialization'.
  - ① (Date/Time setup) Set up the current date and time (SETUP>SYSTEM>Admin>Date/Time)
  - ② (Initialization of system setup) All values in setup are restored to factory default settings (SETUP>SYSTEM>Information>Status>Setup>Default).
  - ③ (HDD format) HDD format is done by SETUP>SYSTEM>Admin>Storage>Format. If there are more than two HDDs, each must be formatted, separately. When the format is completed, DVR will auto-reboot.
- **Removal:** Follow the Remove procedure even when a pre-installed hard disk has been removed. In SETUP>SYSTEM>Admin>Storage>Format, click (↔) 'Removed' item under the discrete Format headings of a corresponding HDD to discard 'HDD' item. When the Remove procedure is completed, DVR will auto-reboot.

### 2.1.4 DVD-RW Installation

- Securely fix DVD-RW by using bracket and screws provided herewith.
- Please do not use any different DVD-RW cables (data cable and power supply cable) other than the ones we provide. Otherwise, it may cause damage to the DVD-RW.
- Only one DVD-RW can be used. Mount it at the SATA 3 port. (**A Type** DVR)  
Only one DVD-RW can be used. Mount it at the SATA 4 port. (**B Type** DVR)

#### CAUTION

Install DVD-RW hard disk after DVR power is off. Otherwise, it may cause permanent damage to the hard disk. To turn off DVR, please click (↔) SETUP>SYSTEM>Shutdown. Also, wait for 5 seconds before plugging in power supply again.

## 2.2 Connector Wiring

### 2.2.1 Video-In/Out Connections

- Connect a camera to '**VIDEO IN**'.
- If you want to link camera input to another device, please connect the camera to '**LOOP OUT**'.
- Assure the '**VIDEO IN**' and '**LOOP OUT**' are connected properly, not oppositely.

(NOTE)

LOOP OUT function use Only **B Type** model.

### 2.2.2 Monitor Connections (Video Out, VGA, SPOT)

- Use with CCTV monitor and computer monitor. Please connect the CCTV monitor to '**VIDEO OUT**', the computer monitor to '**VGA**', respectively. If necessary, you may connect another CCTV monitor to '**SPOT**'.

### 2.2.3 Audio Connections

- Connect an audio device to '**AUDIO IN**' and a speaker system to '**AUDIO OUT**'. Please use a speaker system with volume adjustable.

### 2.2.4 TCP/IP(Ethernet) Connections

- Connect to '**ETHERNET**' connector with the LAN cable.
- When connect to Internet, use an ordinary LAN cable (Non-cross cable). However, when connect directly to your PC, please use only 'Crossover cable'.

### 2.2.5 Alarm Connections

- Connect Alarm Input (Sensor) to '**AI 1~AI 4(AI 16)**' connectors and connect Sensor Common to '**G**' connector.
- Connect Alarm Output (buzzer, siren, etc.) to '**AO 1~AO 4(AO 16)**' connectors and connect Common to '**G**' connector.
- Connect Pan/Tilt receiver (or Pan/Tilt camera) to '**RS-485/422**' connector. Please observe proper (+) and (-) polarity.

### 2.2.6 RS-485/422 Connections

- PTZ Camera connector
- Please use TX+, TX-, RX+ and RX- terminals.

### 2.2.7 USB Connections

- There are four identical USB (2.0) ports in front and in rear. You may connect an external hard disk, an external USB, DVD-RW and a USB memory stick to the USB ports.
- When you use an external hard disk, please assure the connecting cable is not longer than 1.8m (6 ft).



### 2.2.8 Factory Reset Switch

- Reset the switch to restore all setup values of menus to factory default settings. You may also use this switch to initialize System Log file.
- The switch is located in a pin hole on the left-hand side of the USB connector of the back panel.
- Put the clip pin into the switch hole on the monitor (Live) screen and keep pressing until you feel the switch has clicked.

#### **CAUTION**

PRESS FACTORY RESET SWITCH ONLY IN LIVE MODE. NEVER PRESS IN SETUP MODE.

### 2.2.9 Power Supply Connections























- **A Type:** Plug the power supply adapter (DC 12V, 3.33A) which include in this product to 'DC12V' connector and plug another side to power source. Adapter input voltage is a free volt (100 VAC ~ 240 VAC). Please do not use any different power supply adapter because it may cause the DVR to malfunction.
- **B Type:** Plug the power supply adapter (DC 12V, 5A) which include in this product to 'DC12V' connector and plug another side to power source. Adapter input voltage is a free volt (100 VAC ~ 240 VAC). Please do not use any different power supply adapter because it may cause the DVR to malfunction.

### 2.2.10 Connections Guideline

- **Video Out Connector:** If only the monitor is connected to VIDEO OUT connector, please set the impedance switch on the rear side of the monitor to 75 ohms to prevent abnormally bright or collapsed images. If you want to connect another device (e.g., a recorder) to the back of the monitor, please set the impedance switch on the rear side of the monitor to HIGH Z (High Impedance) and set the last device to 75 ohms.
- **Alarm Input Connector:** Do not input any type of voltage to the AI 1~AI 4 (AI 16) connectors.


## 3. Input Device and Screen Icons

### 3.1 Keys and LEDs

KEYS	PTZ KEY	Operating mode	Setup mode
▲, ▼, ◀, ▶		• Control Pan/Tilt rotation of up/down/left/right in PTZ mode	• Up/Down/Left/Right on screen cursor control
1 ~ 8		• Camera select keys : (4/8 channel DVR)	
1 ~ 10	 	• Camera select keys : (16 channel DVR)	
DISPLAY		• Select sequence mode	
SEQUENCE		• Channel sequence mode on/off (Main Monitor)	
SEARCH		• Video search mode on/off	
ARCHIVE		• Copy video data into the external storage device	
FREEZE		• Screen freeze mode on/off	
AUDIO/ESC		• Audio on/off (Viewing/Playback) • Select audio channel: Press AUDIO key and then channel key • ESC	
EMERGENCY		• Emergency recording on/off	
EVENT		• System Log display on/off	
PTZ		• Pan/Tilt control mode on/off	
MENU		• Enter the Main Menu (Setup mode)	
REW		• Fast reverse playback (changes to x16, x32 with each press) • Zoom Out in PTZ mode	
BACKWARD		• Frame-by-frame reverse still image playback • Zoom In in PTZ mode	
PLAY/PAUSE		• Viewing mode: One-touch playback (playback the recorded video from the last one minute) • Playback mode: 1X PLAY/PAUSE • Focus Near in PTZ mode	
FORWORD		• Focus Far in PTZ mode • Exit Window without saving	
FF		• Fast forward playback (changes to x16, x32 with each press) • Save Preset in PTZ mode	
FORWARD		• Frame-by-frame forward still image playback • Go to in PTZ mode	
Power LED (Red)		• Light off: DVR off • Light on: DVR on	
HDD LED (Green)		• Light off: Stop recording • Blink : Recording/Playback modes (HDD Access), Archive in operation	
Network LED (Yellow)		• Light off: failed to connect to Ethernet • Blink: Connected to Ethernet	


## 3.2 Camera Select Keys for 16 channel DVR.

### A Type model

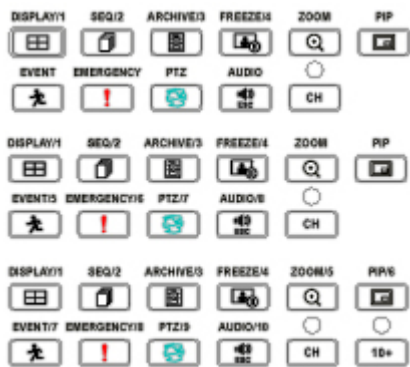

- Below shows how to select camera channel for 4 channel DVR
  - Select Camera No. 1~4: press **CH** key and use **1~4** key
- Below shows how to select camera channel for 8 channel DVR
  - Select Camera No. 1~8: press **CH** key and use **1~8** key
- Below shows how to select camera channel for 16 channel DVR
  - Select Camera No. 1~9: press **CH** key and use **1~9** key
  - Select Camera No. 10~16: press **CH** key and use **10+**, **1~6** key


### B Type model

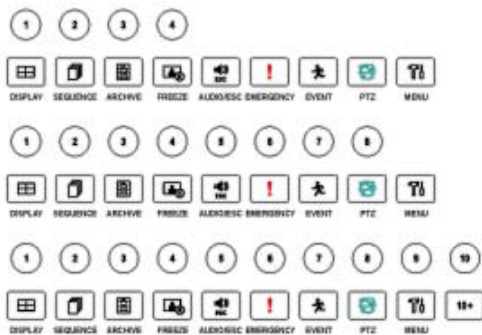


- Below shows how to select camera channel for 4/8/16channel DVR
- Below shows how to select camera channel for 4 channel DVR
  - Select Camera No. 1~4
- Below shows how to select camera channel for 8 channel DVR
  - Select Camera No. 1~8
- Below shows how to select camera channel for 16 channel DVR
  - Select Camera No. 1~10: use **1~10** direction key
  - Select Camera No. 11~16: press **10+/\*** and use **1~6** direction key

## 3.3 Front Panel


### A Type model

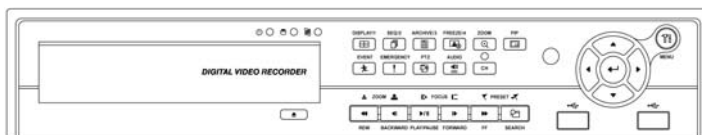

4 Channel DVR

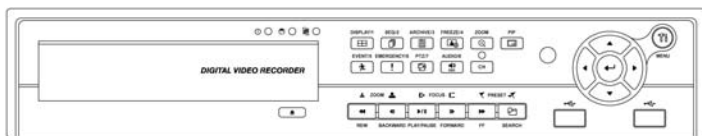


8 Channel DVR

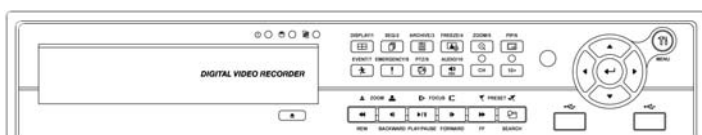


16 Channel DVR


## B Type model

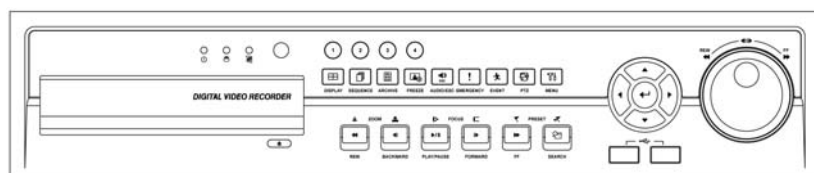

4 Channel DVR

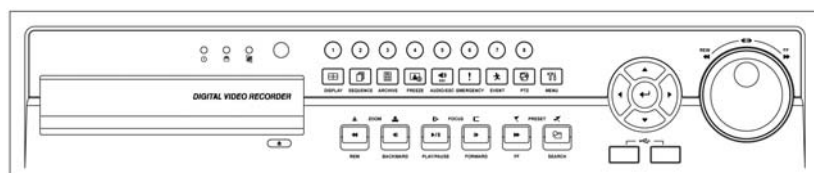

8 Channel DVR

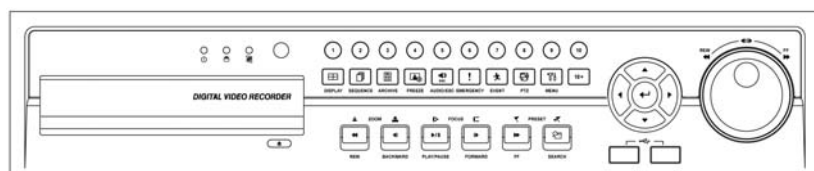

16 Channel DVR

### 3.4 Using a Remote Controller













- Usage of a remote controller is same as the front panel keys.
- Follow the procedure below when you use the remote controller for multi DVRs.
  - ① Check System ID (e.g., between 1 and 999) of the DVR you wish to use (SETUP>SYSTEM>Information>Status>System ID).
  - ② Holding up the remote controller to face towards the DVR and press the System ID numbers one by one, while pressing ID button on the remote controller. Note that the System ID is a **3-digit number**. Button '10' functions the same as '0'. (e.g.: If System ID is 3, you should press **10>10>3** buttons in sequence while pressing the ID button)

### 3.5 Using a Mouse

- Mouse provides an easier access to adjustment. Refer to below for proper use.
- Left mouse button functions the same as **Enter** (↵) key on the front panel of DVR.
- Right mouse button displays the following "Function keys" on your screen.
- Click Search menu at "Function Keys" the same as **Search** key on the front panel of DVR. Press the button, then the Search menu will appear on your screen.

Name of Key	Function	Name of Key	Function
<b>Display</b>	Same as panel key	<b>Event</b>	Same as panel key (indicate System Log)
<b>Sequence</b>	Same as panel key	<b>Search</b>	One-touch playback (same function with <b>(PLAY/PAUSE)</b> )
<b>Spot</b>	Same as panel key	<b>Setup</b>	Same as panel key
<b>Zoom</b>	Same as panel key	<b>Emergency</b>	Same as panel key
<b>Freeze</b>	Same as panel key	<b>Shutdown</b>	Pre-step before Power off (SETUP>SYSTEM>Shutdown)
<b>PIP</b>	Same as panel key	<b>Cancel</b>	Cancel Function key menu
<b>PTZ</b>	Same as panel key		


### 3.6 Screen Icons

Icon	Description	Icon	Description
	Continuous recording mode		In Audio recording
	Event recording mode (Alarm In/Motion)		CMS access indication/ No. of accesses (up to 4)
	In recording		In channel sequencing
	PTZ registration / PTZ mode		Lock
	Remote Controller		Setup in HDD Overwrite mode
	Setup in HDD No Overwrite mode (HDD Full)		Setup in HDD No Overwrite mode (recording)


## 4. Setup

### 4.1 Login/Logout

- At the default setting of DVR, you have to input the password to enter the set up menu.
- Please press SETUP key to enter the setup menu and the following screen will appear.

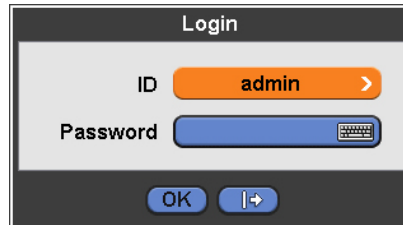

- In order to use all functions and privileges, login is as ID: admin.
- Default Password is "1111".
- At Setup>System>Account, click Login Settings button and you can set for Login window. When you use Setup, Archiving, Search, Shutdown, Network menu, you can limit general users' approach by the login window (See 4.2.3 Account).
- At Setup>System>Account menu, if you add a user, that user's ID will appear and you can login as its general ID.
- After login successfully, following screen will appear:

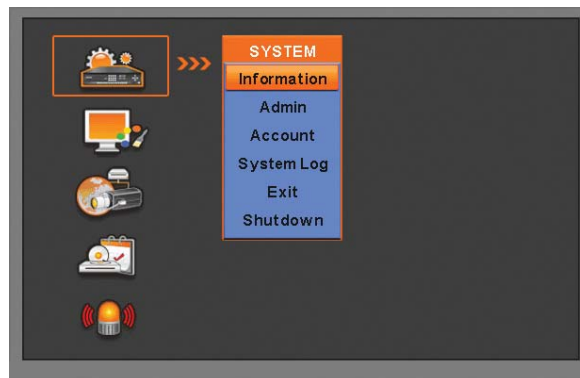

- Recording continues during setup.
- Main menu consists of 5 sub menus.  
(SYSTEM / DISPLAY / DEVICES / RECORD / LINK)
- There is no factory default in the case of passwords.
- To escape from the setup menu, please click(←) on SYSTEM>Exit on the screen. Then, the following dialogue box will appear.



- Please choose 'OK' to log out.
- You may select the Main menu with ◀, ▶ direction keys or mouse click. Please click (←) the submenu to choose a submenu under the Main menu.


(NOTE)

Press AUDIO/ESC in the setup screen, start operation alike CANCEL (ESC).  
It will not operate live or playback mode but only in the setup menu.

## 4.2 SYSTEM

### 4.2.1 Information

- Please click (←) SYSTEM>Information and the following screen will appear.

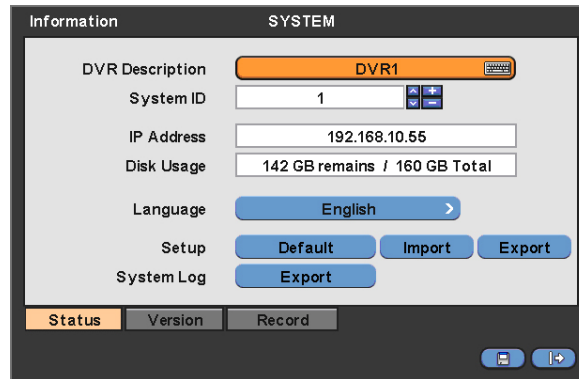

#### Status

#### Site Description

- Decide name of DVR.
- Please click (←) keyboard icon on Site Description frame and the following virtual keyboard will appear.



- Please click (←) desired letters (characters) on the virtual keyboard to input.
  - ① Use to erase one character every time.
  - ② Use to erase the whole sentence.
- Please choose 'OK' to confirm the input and choose 'Cancel' to cancel.

#### System ID

- Control DVRs by one remote controller by setting DVR IDs.
- Please click (←) ▲, ▼ direction keys on the right-hand side of the System ID frame to set the ID of DVR. Take any whole number **between 1 and 255**.
- While pressing (+) or (-) button, the System ID value increases or decreases by 10 units.

#### Language

- Please click (←) Language frame to choose desired language and press (←) key again.

#### Setup

- **Default:** Click (←) Default frame to restore all setup values of menus to factory default settings. Please note that System Log is not initialized.

(NOTE)

This has a different function from Factory Reset Switch on the back panel of DVR in that System Log is not initialized.


- **Import:** Copy the Menu setup stored in USB memory stick into DVR. Please plug in the memory stick and then click (↵) Import.
- **Export:** Store the Menu setup of DVR in USB memory stick. Please plug in the memory stick and then click (↵) Export.
- When you are working on Default, Import, Export, a message box will ask the progress and click the confirmation icon, then a message box will show whether its success or failure.

### System Log

- **Export:** Store the System Log contents in USB memory stick. Please plug in the memory stick and then click (↵) Export.
- When you are working on Default, Import, Export, a message box will ask the progress and click the confirmation icon, then a message box will show its success or failure.

### Version

- When you complete Status data input, please click (↵) Version and the following screen will appear.

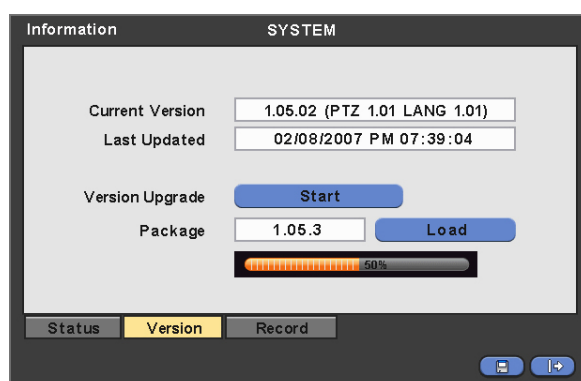

### Version Upgrade

- You may upgrade DVR software.
- Please follow the Upgrade procedure below.
  - ① Plug USB memory stick having upgrade file into DVR.
  - ② Click (↵) Load frame. Then, software version stored in the USB will appear on the left-hand side.
  - ③ Click (↵) Start frame to start the upgrade.
  - ④ When the upgrade is completed, a dialogue box pops up. Please choose 'OK' and DVR will auto-reboot.

#### CAUTION


DO NOT UPGRADE UNTIL YOU INSTALL A HARD DISK DRIVE. MAKE SURE YOU UPGRADE WHEN HDD IS IN PROPER OPERATION.

#### CAUTION

PLUGGING OUT USB DEVICE OR FORCED POWER-OFF MAY CAUSE PERMANENT DAMAGE.

### Record

- When you complete Version input, please click (↵) Record. Then, the following screen will appear.

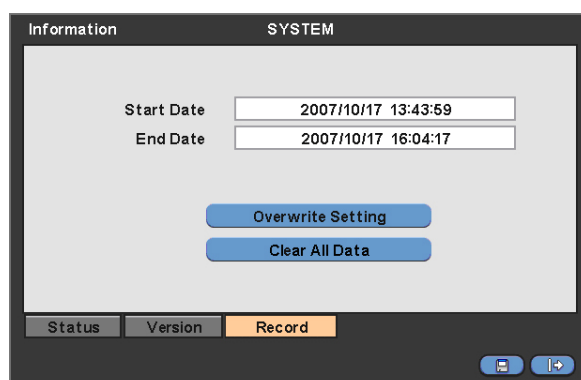





- The screen shows start time and end time of recorded data.



## Overwrite Setting

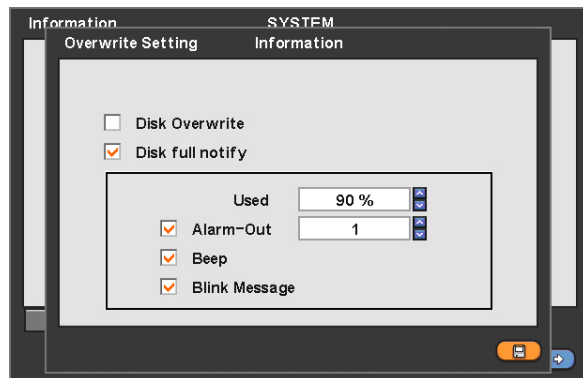- Click(↔) Overwrite Setting button and the following screen will appear.



- You may set for beeping or notifying messages that notify the used percentage of disk.
- Check Disk Overwrite and you may activate the overwrite function.  
This function makes restart the recording from the beginning when the HDD is full. The previous recorded data will be erased from the first one. Following icon will display in bottom of live mode .
- ① Uncheck (☐) Disk Overwrite, recording will stop automatically when the HDD is full.
- ② At the Overwrite mode, when HDD capacity is full,  icon will appear and the recording is going on,  will appear.
- ③ If you change this setting, the warning message will appear. Then click (↔) "confirmation" button and you may change the setting.
- If you check (☒) Disk full notify item, the warning message will appear as the used amount of disk.
  - ① **Used**  
You may set the certain value of HDD usage for notification. It will notify at that point. The values are from 50 ~ 100%.
  - ② **Alarm-Out**  
The Alarm-out will happen at the used amount of HDD which is specified at Used.
  - ③ **Beep**  
Check (☒), the warning sound will happen at the used amount of HDD which is specified at Used.
  - ④ **Blink Message**  
Check (☒), the warning message "Disk Used(xx%)!" will appear on the OSD.

### (NOTE)

Notify setting does not affect saving the recorded data. It only gives notification and keep recording until hard disk is full.

### (NOTE)

For more specific setting about Alarm-out, use Setup>DEVICES>Alarm Out.

## Clear All Data

- Use to delete or purge all normal recorded data from database. Please follow the procedure below.
  - ① Click (↔) Clear All Data frame.
  - ② When a dialogue box asking "Remove All Data?" shows, choose 'OK'.
  - ③ Then, Progress window will appear and the process starts.
  - ④ When all data are deleted, a dialogue box asking "Are you sure to remove log?" will pop up.
  - ⑤ Choose 'OK' to delete all the recorded data as well as System Log.


### (NOTE)

This might take a while to completely delete all data. In case of 80GB HDD for example, it takes about 90 seconds.

- When you finish all the necessary inputs to SYSTEM menu, please click (↔) 'OK' on the bottom to go back to SETUP screen.

## 4.2.2 Admin

- Please click (↔) SYSTEM>Admin and the following screen will appear.

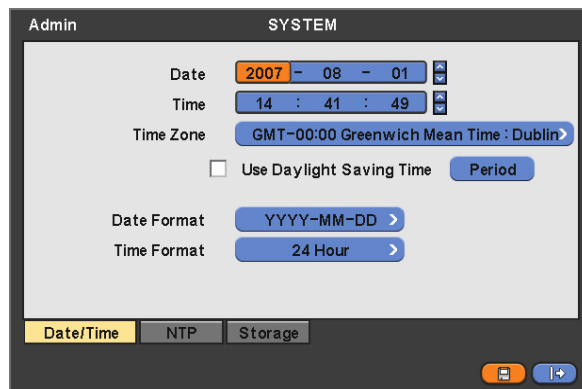

### Date/Time

#### Date

- This menu will allow you to adjust the settings.
- Please follow the procedure below for time adjustment.
  - ① Click (↔) items (Y, M, D) you want to change. A designated item will be highlighted in a box (Y: Year, M: Month and D: Date).
  - ② Adjust the number by clicking (↔) ▲, ▼ buttons on the right-hand side.
  - ③ Repeat the same procedure to change Y, M and D.

#### Time

- This menu will allow you to adjust the current time. The adjustment procedure is same as of Date.

#### CAUTION


IF ADJUSTED DATE/TIME IS PRIOR TO RECORDED DATA, DATA AFTER NEW DATE/TIME MAY BE ERASED.

#### CAUTION

ANY CHANGE IN DATE/TIME IS IMMEDIATELY APPLIED ON VIEWING SCREEN (LIVE), BUT THE DATE/TIME WHEN THE RECORDING WAS DONE ARE NOT CHANGED. MAKE SURE TO REBOOT DVR AFTER CHANGING THE DATE/TIME. DO NOT FORGET TO EXECUTE SHUTDOWN (SYSTEM>Shutdown) BEFORE REBOOT.

#### Time Zone

- Please click (↔) Time Zone frame to see the list of nations and choose one.
- Click (↔) a check box next to Use Daylight Saving Time. When you live in a region to observe DST, please check it (i.e. ☑).
- If DST is observed, please click (↔) Period and the following screen will appear.

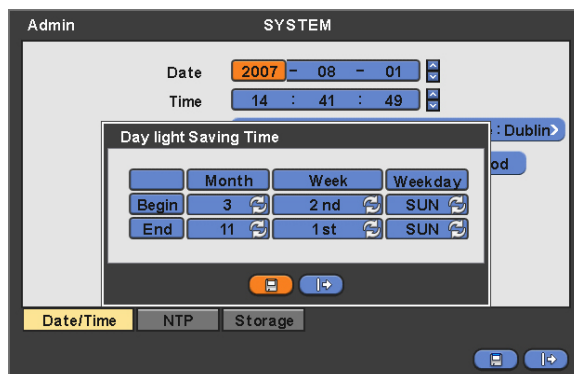

- Adjust the dates of beginning (Begin) and end (End) of DST by 'Month/Week/Weekday'.
- Click (↔) the numbers in 'Month/Week/Weekday' for adjustment.
- Choose 'OK' to confirm the setting.

### Date Format

- Set date indication format. Please click (↔) Date Format frame to select a format you like from the list.

### Time Format

- Set time indication format. Please click (↔) Time Format frame to select a format you like from the list.

### NTP

- When you complete Date/Time input, please click (↔) NTP and the following screen will appear.

The screenshot shows the 'Admin SYSTEM' window. At the top, there are two tabs: 'Date/Time' and 'NTP', with 'NTP' being the active tab. Below the tabs, there are two main sections. The first section has a checkbox labeled 'Run as Server' which is currently unchecked. Below this is another checkbox labeled 'Use NTP', which is also unchecked. To the right of 'Use NTP', there is a text field for 'NTP Server' containing the IP address '65.23.154.62' and a small keyboard icon to its right. Below the 'NTP Server' field is a dropdown menu for 'Interval' set to '12 Hour'. The second section contains two rows: 'System Clock' with a text field showing '2007/08/01 14:41:49' and a 'Sync' button to its right; and 'Server Clock' with a text field showing 'Not connected' and a 'Connect' button to its right. At the bottom of the window, there are three buttons: a red 'OK' button, a blue 'Cancel' button, and a blue 'Save' button.

- This menu is for accurate setting of time of day clock in DVR.
- You may check ☒ only one of Run as Server and Use NTP.
  - **Run as Server:** NPT cannot be used in a non-networked environment (Intranet environment). In this case, DVR with Run as Server functions as Time Server.
  - **Use NTP:** Connect to Internet to synchronize DVR clock with Network Time Server's clock.

### NTP Server

- Click (↔) keyboard icon in NTP Server frame and the virtual keyboard will appear. Input IP address of NTP server.

#### (NOTE)

Currently used NTP is administered by pool.ntp.org and its IP address is 65.23.154.62. However, users are allowed to use IP address of any NTP site.

### Interval

- Set clock-update-interval from NTP Server. Normally, you can adjust 1 hour up to 24 hours.

### System Clock


- Display DVR clock.

### Server Clock

- Display NTP Server's clock if Internet is not connected to Server Clock. If not, please click (↔) Connect button.
- When Server Clock is displayed, please click (↔) Sync button to synchronize NTP Server's clock with DVR clock.
- Choose 'OK' to confirm the clock synchronization.

### Storage

- When you complete NTP input, please click (↔) save and the following screen will appear.
- Set S.M.A.R.T. (Self-Monitoring Analysis and Reporting Technology) function for HDD format and auto-display of HDD information. DVD-RW is not shown here.

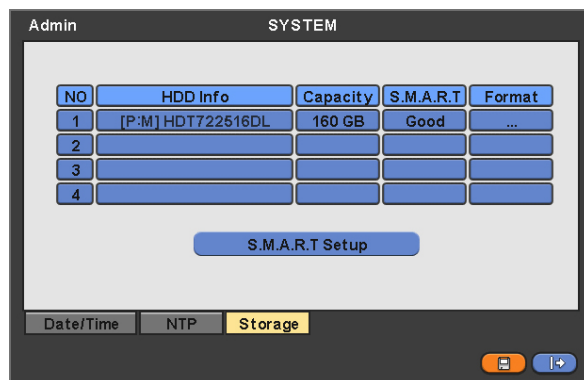

- Four rows will show as follows:
  - 1: SATA 1 Port
  - 2: SATA 2 Port
  - 3: SATA 3 Port
  - 4: SATA 4 Port( B type model only )

### Format

- You must format when you:
  - install new HDD
  - add another HDD
  - replace HDD
  - move HDD (change installation port)
  - remove HDD
- Click (↔) Add/Remove frame in Format column and choose 'OK' on the dialogue box to start formatting.
- Following format, DVR will auto-reboot. If there are more than 2 HDDs, please format each of HDDs. DVR will auto-reboot when all the HDDs are formatted.
- If the frame changes to '---' after reboot, it means formatting has been properly done.

### CAUTION


EXECUTE REMOVE PROCEDURE EVEN WHEN YOU REMOVE PREVIOUSLY INSTALLED HDD. THE REMOVE PROCEDURE IS THE SAME AS THE FORMAT PROCEDURE DESCRIBED ABOVE.

### S.M.A.R.T

- Click the frame on S.M.A.R.T column and temperature and HDD damage will show.

### S.M.A.R.T Setup

- Please click (↔) S.M.A.R.T Setup and the following screen will appear.

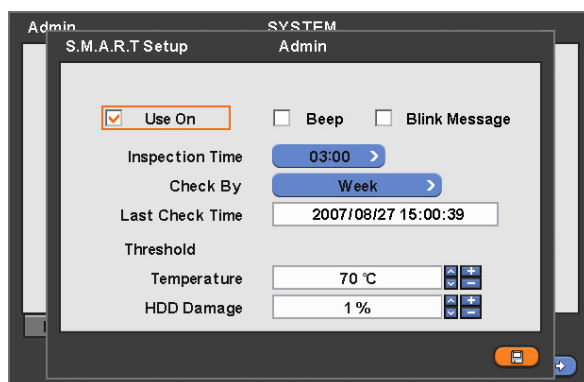

- Check the square box ☒ next to Use On. Through S.M.A.R.T function, make alarm message, indicating HDD damage, will show.
- Check ☒ Beep, it will give the alarm sound, indicating HDD damage, as the SMART setup.
- Check ☒ Blink Message, the alarm message will blink on the OSD, as the SMART setup.
- If you uncheck Used on, Beep, Blink Message will be unchecked automatically. Only when you check ☒ Used on, you can

set Beep, Blink Message function.


- Click (↔) Inspection Time frame to set inspection time.
- Click Check by frame to select inspection interval.
- Last Check Time: show the time of the last inspection.
- Click (↔) ▲, ▼ direction buttons on the right-hand side of Temperature frame to adjust to maximum temperature for the HDD used in DVR. In general, it is **55°C**.
- Click (↔) ▲, ▼ direction buttons on the right-hand side of HDD Damage frame to set the permissible level of HDD damage (%). HDD is a very crucial element for DVR recording, so set the permissible level within 1% to 2% to assure maximum safety.

While pressing (+) or (-) button on the rightmost side of Temperature or HDD Damage item, a target value increases or decreases by 10 units.

- Choose 'OK' to confirm the setting.


#### 4.2.3 Account

- Please click (↔) SYSTEM>Account and the following screen will appear.

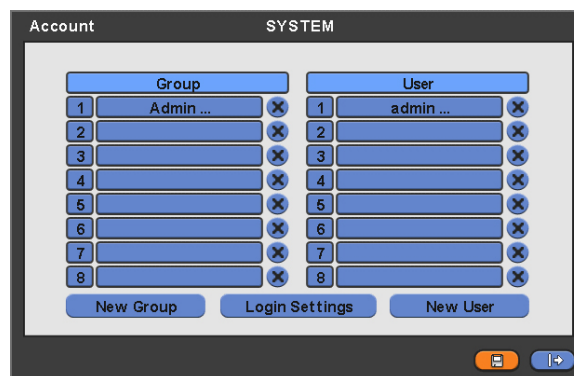

##### New Group

- Please click (↔) New Group and the following screen will appear.

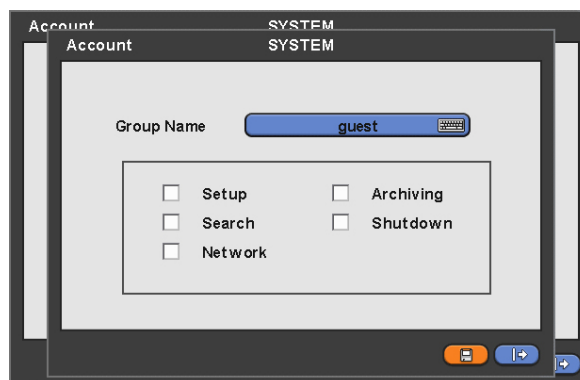

- Click (↔) keyboard icon on the right-hand side of Group Name frame. Then, the virtual keyboard will show. Please click (↔) desired characters (up to 8 characteristics) on the virtual keyboard.
- Do provisioning for Group Name by selectively checking ☒ some of the following items (Setup, Search, Network, Archiving and Shut Down).
- Choose 'OK' to confirm the setting.


##### Login Settings

- Please click (↔) Login Settings and the following screen will appear.
- Selectively enable password protection for important operations (Setup, Search, Network, Archiving and Shut Down). Please check ☒ the operations you wish to enable password protection.

##### CAUTION


YOU WILL NOT BE ASKED TO ENTER YOUR PASSWORD FOR OPERATION(S) WHERE PASSWORD PROTECTION IS NOT ENABLED.

- Choose 'OK' to confirm the setting.

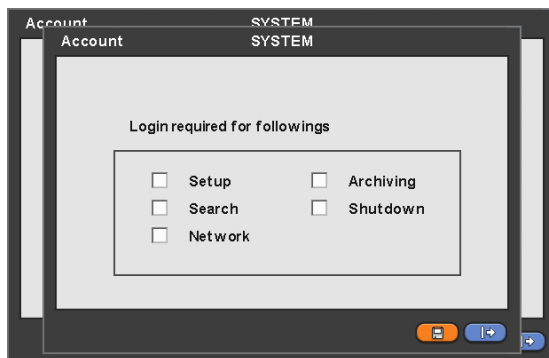


### New User

- Please click (↔) New User and the following screen will appear.
- Click (↔) the keyboard icon on the right-hand side of User Name frame and the virtual keyboard will appear. Click desired characteristics (up to 8 characteristics) on the virtual keyboard.
- Input Password and Confirm.

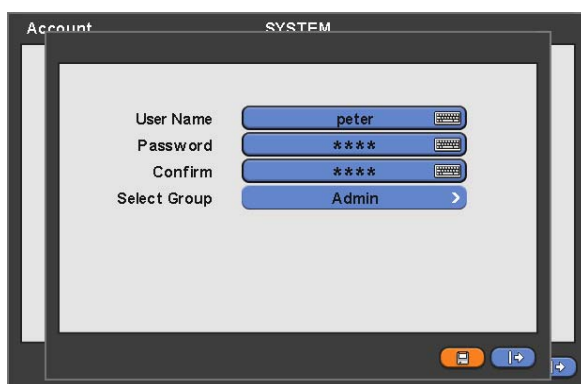


- Choose 'OK' to confirm the setting. Then, lists of Group and User will show as follows.

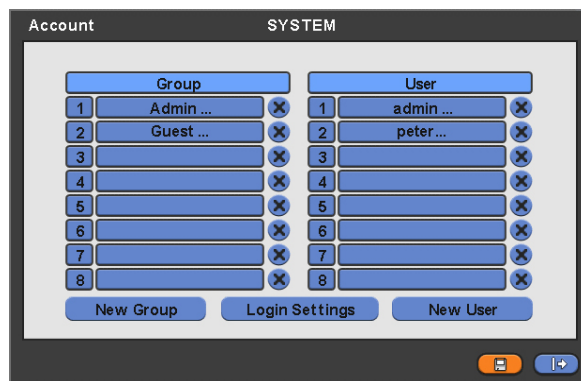


- Click (↔) X to delete the set Group or User.
- You may create up to 8 Groups and 8 Users.
- Choose 'OK' to confirm the setting.


### Password Resetting

- Click ID on User column. The following screen will appear.

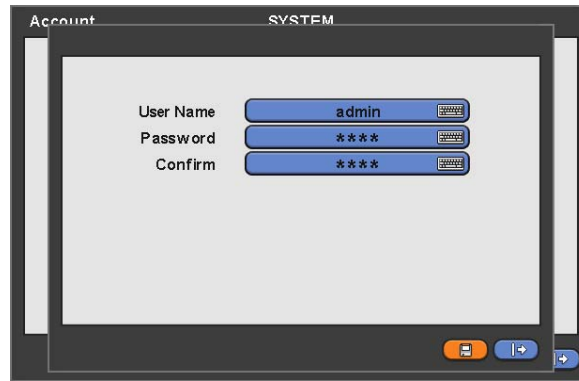


- This is a screen for password resetting
- Input password by clicking the keyboard icon on the right-hand side of the frame.

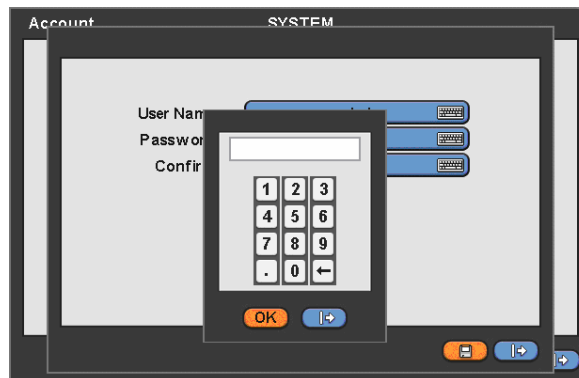

- Use  key if you wish to erase password on keyboard.

#### 4.2.4 System Log

- Please click (↔) SYSTEM>System Log and the following screen will appear.

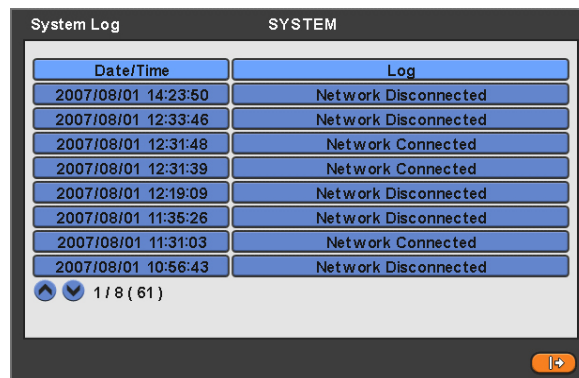

- System Log System Log displays diverse events.
  - Setup (Menu) Enter/Exit
  - Playback Mode Enter/Exit
  - Network Access Enter/Exit
  - Archive Success/Fail
  - System Start/shut down
  - S.M.A.R.T. Check
  - NTP Sync/ Server Success/Fail
  - Send E-mail Success/Fail
  - HDD Format Success/Fail
  - Data clear Success/Fail

- USB Upgrade Success/Fail
- DVR Setup Change by Remote
- Before/After Time Adjust
- System Log removal procedure is as follows:
  - Execute Clear All Data in SYSTEM>Information>Record and choose 'OK' on the popup dialogue box. Please note that all normal recorded video data are deleted from database.
  - Press Factory Reset Switch on the back panel. Please note that the entire menu setup is also defaulted.

#### 4.2.5 Exit

- Please click (↔) SYSTEM>Exit and choose 'OK' on the popup dialogue box to exit from the setting.

#### CAUTION

ANY CHANGES MADE IN SETUP ARE APPLIED AFTER EXIT.

#### 4.2.6 Shutdown

- Shutdown is a function to help you safely turn off DVR. Please use the proper shut down procedure to avoid damaging to our DVR system. Do not remove the power during shut down.


#### CAUTION

DO NOT TURN DVR OFF WITHOUT USING THE PROPER SHUT DOWN PROCEDURE. OTHERWISE, IT MAY CAUSE DAMAGE TO YOUR DVR. ALWAYS REMOVE THE POWER AFTER SHUT DOWN.

- Click (↔) SYSTEM>Shutdown and then choose 'OK' on the dialogue box to confirm.
- When you select Shutdown menu, the OSD menu on the screen disappears.
- Reboot the DVR after Shutdown. Turn off the DVR and wait for 5 seconds before restart.


### 4.3 DISPLAY

- Please click (↔) DISPLAY and the following screen will appear.

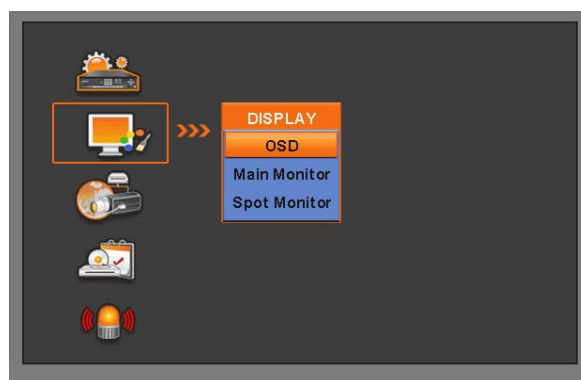

#### 4.3.1 OSD

- Please click (↔) DISPLAY>OSD and the following screen will appear.

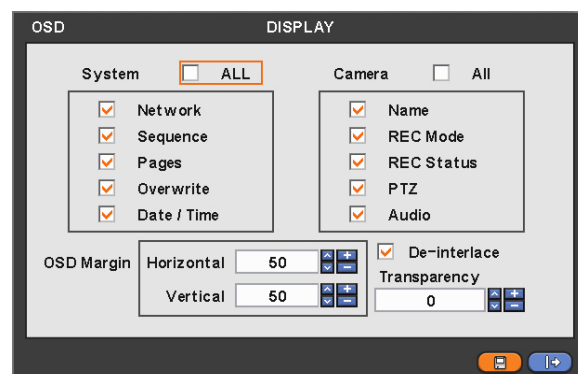



- The OSD menu will allow you to configure full features (i.e., on/off every letter and icon) displayed on the screen.
- Letters and icons are divided under System and Camera categories. If you click (←) 'All', all items are on/off at once.

#### OSD Margin

- The OSD Margin menu will allow you to adjust the position of OSD (letters) on the monitor. Use it when some of letters are dropped out and invisible on the monitor.
- Adjust Horizontal to change margin between both ends of the monitor on horizontal side and OSD. Margin range is between **0 and 50**, with a larger number representing greater margin.
- Adjust Vertical to change margin between both ends of the monitor on vertical side and OSD. Margin range is between **0 and 50**, with a larger number representing greater margin.
- While pressing (+) or (-) button, a target value increases or decreases by 10 units.

#### De-Interlace


- This function changes playback display into Progressive Scan or Interlace Scan. Check (☑) De-Interlace, then frame will display as the Progressive Scan and shows the better picture quality.

#### Transparency

- The Transparency menu will allow you to alpha-blending of OSD menu on the monitor. Transparency is the quality that an object or substance has when you can see through it.
- Transparency range is between **0 and 100**, with a larger number representing can see through it. (default 0)
- While pressing (+) or (-) button, a target value increases or decreases by 10 units.

### 4.3.2 Main Monitor

- Please click (←) DISPLAY>Main Monitor and the following screen will appear.

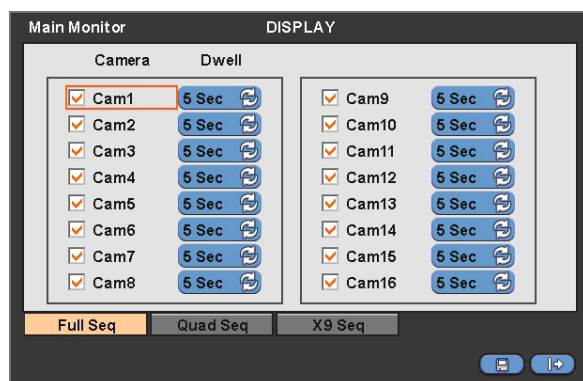

- The Main Monitor menu will allow you to adjust channel sequencing interval of Main monitor.

#### Full Seq

- Adjust interval for 'Full screen sequencing'.
- Check ☑ check box next to the camera you want to include in sequencing. Any camera with unchecked check box will be excluded from channel sequencing.
- Adjust the rotation interval of camera by clicking Dwell column. The rotation interval changes to **3>5>10>15>30>60 seconds** by each press.

#### Quad Seq

- Use only with 8 / 16 channel DVRs.
- Adjust interval for 'X4 Split Screen sequencing'.
- Check ☑ check box next to the camera you want to include in sequencing. Any camera with unchecked check box will be excluded from channel sequencing.
- Adjust the rotation interval of camera by clicking Dwell column. The rotation interval changes to **3>5>10>15>30>60 seconds** by each press.
- '4 Split Screen sequencing' is disabled in the following modes.
  - **8 channel DVR:** 3x3 Mode
  - **16 channel DVR:** 4x4 Mode


#### X9 Seq

- Use only with 16 channel DVR.
- Adjust interval for 'X9 Split Screen sequencing'.

- Check ☒ check box next to the camera you want to include in sequencing. Any camera with unchecked check box will be excluded from channel sequencing.
- Adjust the rotation interval of camera by clicking Dwell column. The rotation interval changes to **3>5>10>15>30>60 seconds** by each press.
- '9 Split Screen sequencing' is disabled in 4X4 Mode.

#### 4.3.3 Spot Monitor

- Please click (←) DISPLAY>Spot Monitor and the following screen will appear.

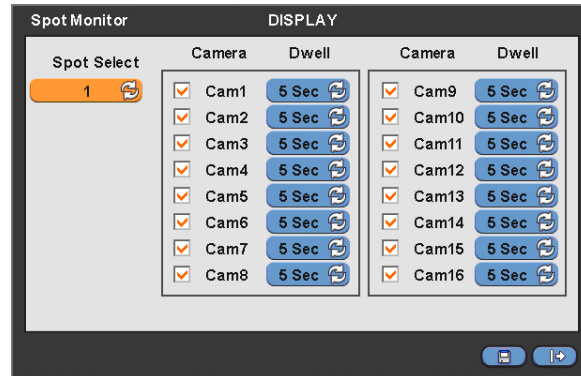


- This menu will allow adjust interval of channel sequencing of Spot monitor.
- Click (←) Spot Select to choose Spot monitor to be set up.
- Check (check box next to the camera you want to include in sequencing. Any camera with unchecked check box will be excluded from channel sequencing.
- Adjust the rotation interval of camera by clicking Dwell column. The rotation interval changes to **3>5>10>15>30>60 seconds** by each press.

#### 4.3.4 Spot Monitor Control on Display Mode

- **A Type** : Every click of the "SPOT" menu item on mouse right click menu will indicate "SP", "SP1" on the right bottom of main monitor.
  - SP mode: Sequential display is activated as configured on spot monitor Setup menu.
  - SP1 mode: Displayed channel on Spot monitor 1 can be changed by pressing channel button.  
Sequence stops at "SP1" mode
- **B Type** : Every click of the "SPOT" menu item on mouse right click menu will indicate "SP", "SP1", "SP2" and "SP3" on the right bottom of main monitor. After "SP3", the it shows nothing. And system gets out of spot monitor control mode.
  - SP mode : Sequence is activated as configured on spot monitor Setup menu.
  - SP1 mode : Displayed channel on Spot monitor 1 can be changed by pressing channel button.  
Sequence stops at "SP1" mode.
  - SP2 mode : Displayed channel on Spot monitor 2 can be changed by pressing channel button.  
Sequence stops at "SP2" mode.
  - SP3 mode : Displayed channel on Spot monitor 3 can be changed by pressing channel button.  
Sequence stops at "SP3" mode.


## 4.4 DEVICES

- Please click (↔) DEVICES and the following screen will appear.

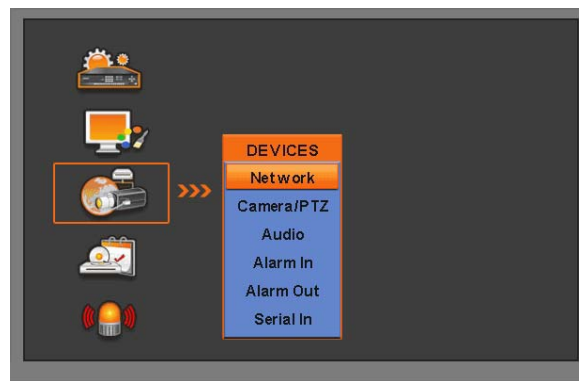

### 4.4.1 Network


- Please click (↔) DEVICES>Network and the following screen will show.

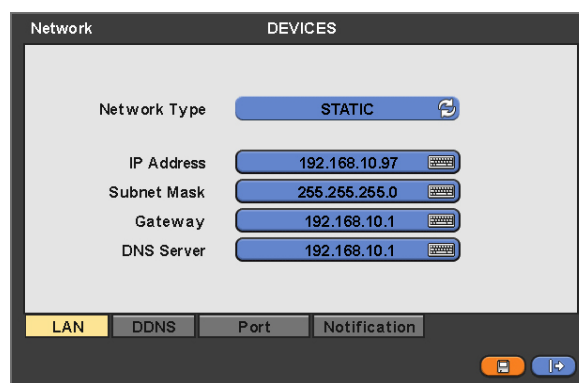

#### LAN

##### Network Type

- Please click (↔) Network Type. Every time you click (↔), it changes to Static (fixed IP) and DHCP (floating IP).
- In Static, user must manually set the static IP address for use.
  - Set IP Address, Subnet Mask and Gateway. Please ask your network administrator for more details.
  - To input address, please click (↔) and execute the keyboard icon on the right-hand side of each frame.

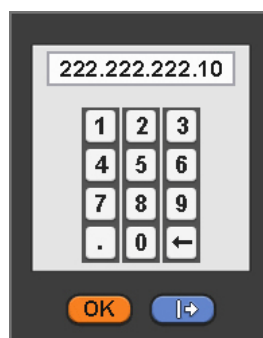

- In DHCP, IP Address, Subnet Mask, Gateway and DNS Server will have input automatically.

##### DNS Server


- When you set Network Type to DHCP, DNS server will be inputted automatically.
- When you set Network Type to Static, please click (↔) the keyboard icon on the right-hand side of DNS Server frame and manually input the address.

**CAUTION**


NOTE THAT DNS SERVER ADDRESS IS IP ADDRESS OF YOUR COMMUNICATIONS COMPANY NAME SERVER PROVIDING INTERNET SERVICE. IT IS NOT THE IP ADDRESS OF DDNS SERVICE SITE.

**DDNS**

- Please click (↔) DDNS and the following screen will appear.

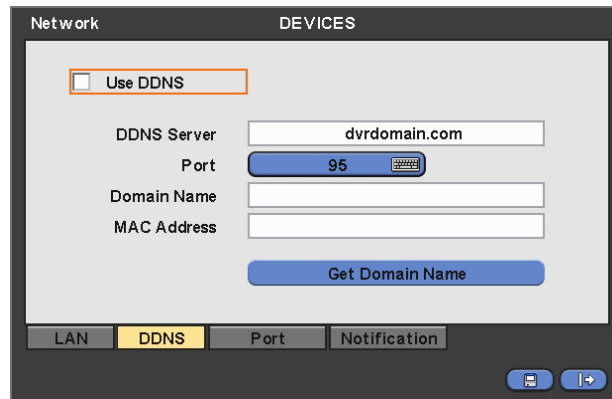


- 'Floating IP system', although being predominantly used over Internet, is very inconvenient for users because its address varies every time you access. The best alternative is DDNS (Dynamic Domain Naming System) which uses name (domain name) instead of IP address (numbers). DDNS automatically recognizes ever changing, floating IP addresses, so it will allow easy Internet access.
- Check ☒ a checkbox of Use DDNS to use DDNS function.
- As for DDNS Server, dvrdomain.com name will be showing as default.
- As for Port, 95 is shown by default. If '95' is disenable, please consult with a product distributor.

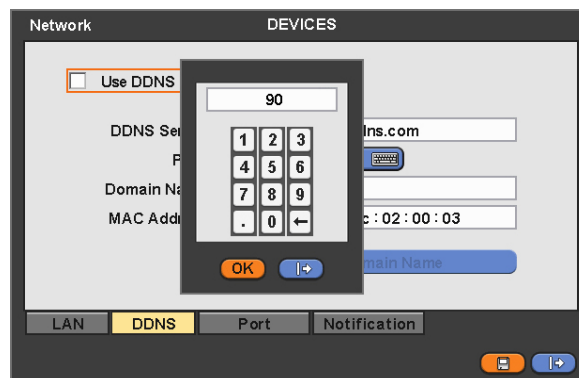

- When you press Get Domain Name button, Domain Name and MAC Address value will automatically display after 10 seconds.
- Choose 'OK' to confirm the setting.

**Port**

- Please click (↔) Port and the following screen will appear.

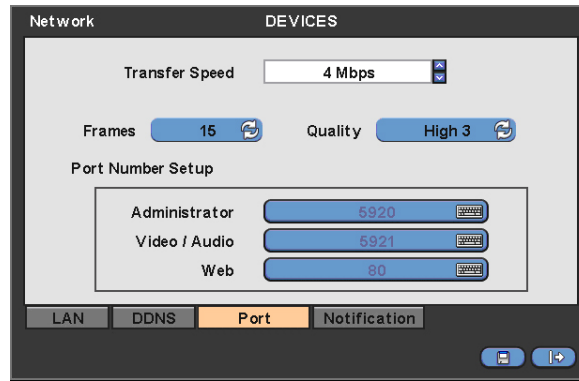

- Transfer Speed is used for setting a mean transfer speed per unit of time between a client and a DVR.
- Set a proper Transfer Speed for a current configuration state of the network for the client to be able to playback DVR screen in optimum state.
- There is a total of 14 different transfer speeds you may choose. (bps: bit per second)  
56 kbps, 128 kbps, 256 kbps, 512 kbps,  
1 Mbps, 2 Mbps, 4 Mbps, 8 Mbps, 10 Mbps, 20 Mbps, 40 Mbps, 80 Mbps, 100 Mbps, Unlimited
- Network video transmission speed and quality can be configured by pressing “Frames” and “Quality” buttons as follows.
  - Frames : 1, 2, 3, 4, 5, 7, 15 frames for NTSC(1, 2, 3, 4, 5, 6, 12 frames for PAL)
  - Quality : Std. 1, Std. 2, Std. 3, Std. 4 (standard), High 1, High 2, High 3, Super 1, Super 2, Super 3
- The Port Number Setup menu will allow you to set Administrator and Port Number for Video/Audio and Web Port.
- For Port Number Setup, please get an approval of the network administrator in connection with CMS program.  
Port Number:
  - **Administrator:** 5000~9999
  - **Video / Audio:** 5000~9999
  - **Web:** 80~4999

#### CAUTION

YOU CANNOT CHANGE Port Number DURING CMS ACCESS TO DVR.

#### CAUTION

CHANGES BEING MADE ARE APPLIED AFTER YOU COMPLETE SETUP TO EXIT.


#### CAUTION

IF Port Number IS CHANGED, YOU MUST ALSO CHANGE Port Number OF CMS (Central Monitoring Station) PROGRAM.

- Choose ‘OK’ to confirm the setting.

#### Notification

- Please click (↵) Notification and the following screen will appear.

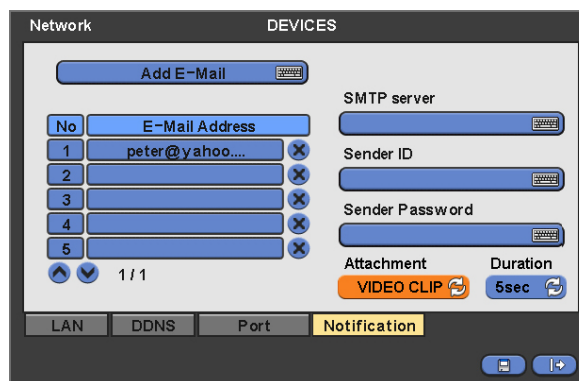

- The Notification menu will allow you to set transmission of Event occurred in DVR via E-Mail.
- Click (↵) the keyboard icon on the right-hand side of Add E-Mail frame and the virtual keyboard will appear. Please register

E-Mail address. E-Mail address should contain @.


- Click (↵) the keyboard icon on the right-hand side of SMTP Server frame and the virtual keyboard will appear. Please register IP of SMTP Server (mail server on the sender side) (e.g., kornet.net).
- Click (↵) the keyboard icon on the right-hand side of Sender ID frame and the virtual keyboard will appear. Please register an ID to the sender mail server (e.g., tony123).
- Click (↵) the keyboard icon on the right-hand side of Sender Password frame and the virtual keyboard will appear. Please register a password having registered to the sender mail server.
- When an event occurs, you can send an email to a designated mail address by clicking Attach button and selecting Data to be transmitted. You may select one of JPEG, VIDEO CLIP, None modes. In case of transmitting VIDEO CLIP Data, set the duration of time for recoded images in Duration item (e.g., 1 sec, 3 sec, 5 sec).

#### CAUTION

According to the various local conditions, some e-mail servers may not work correctly with this function.

### 4.4.2 Camera/PTZ

- Please click (↵) DEVICES>Camera/PTZ and the following screen will appear.

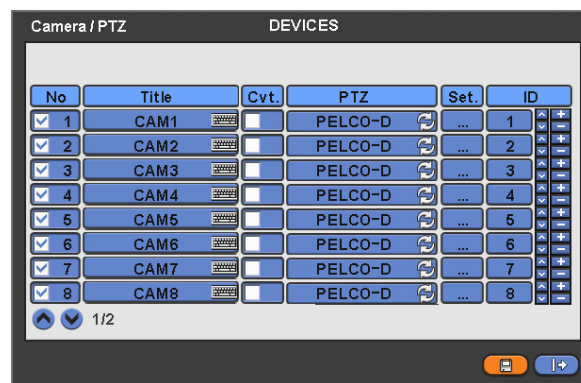


- Give titles to cameras and choose PTZ protocols.
- Click (↵) the keyboard icon on the right-hand side of each frame on Title column and the virtual keyboard will appear. Then, register titles of cameras.
- If you check ☒ a check box on No column, a video of the corresponding camera is recorded and displayed on the monitor. However, if you do not check the checkbox, both recording and monitor display stop. Then, DVR picture, instead of a recorded video, will be displayed on the monitor.

#### CAUTION

WHEN YOU EXCLUDE A CORRESPONDING CAMERA VIDEO FROM RECORDING AND MONITOR DISPLAY (CHECK A CHECK BOX ☐) , MAKE SURE CHANNELS OF LARGE NUMBERS ARE EXCLUDED FIRST.

- If you check ☒ a check box on Covert column, a video is recorded but is not displayed on the monitor.
- Click (↵) each frame on PTZ column to select PTZ protocols connected to a corresponding camera.
- Click (↵) each frame on Set to set PTZ Settings connected to a corresponding camera.

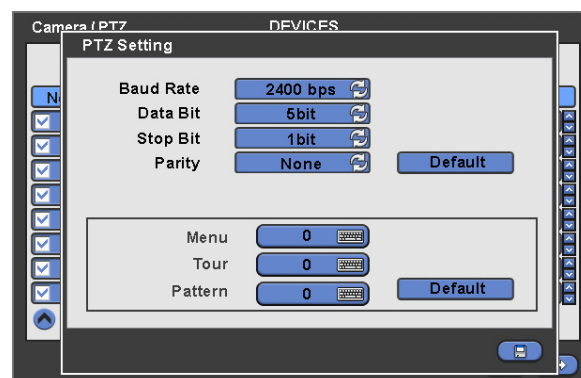


- If you click (Default), proper number of selected PTZ will appear automatically. Please choose 'OK' to confirm the setting.
- Menu, Tour and Pattern help you to use OSD function of PTZ camera.

PTZ camera itself supports OSD menu, use the setup value to more easily enter and use the OSD menu even in DVR. If OSD enter command is 95 + PSET for example, designate 95 for Menu item, if shortcut key to use Tour function is 71 ~79 + PSET, designate 70 for Tour item and if shortcut key to use Pattern function is 81 ~ 89 + PSET, designate 80 for Pattern item. The setting information herein is used for PAN/TILT control in 5.1.5 (to be described). If you click Default, basic setup values are given (i.e., Menu: 95, Tour: 70, Pattern: 80). For further details on setting, please refer to the PTZ camera manual.

- Click (↔) ▲, ▼ direction buttons on the right-hand side of the ID column to set ID number (i.e., 0 ~ 9999) of each PTZ.
- While pressing (+) or (-) button, ID increases or decreases by 10 units.
- Choose 'OK' to confirm the setting.

#### 4.4.3 Audio


- Please click (↔) DEVICES>Audio and the following screen will appear.

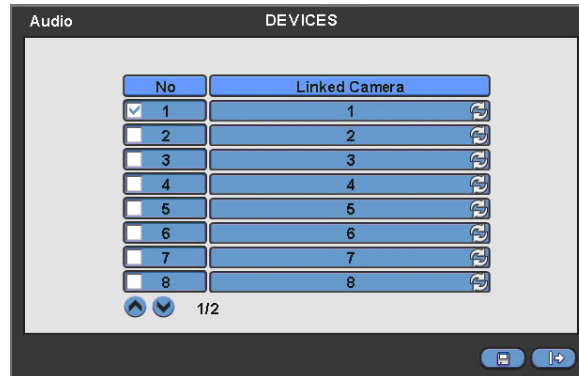

- The Audio menu will allow you to choose whether to record Audio.
- When you check ☒ a check box on No column, corresponding audio and video are recorded. However, if you do not check the check box, recording stops.
- Choose 'OK' to confirm the setting.

#### 4.4.4 Alarm In

- Please click (↔) DEVICES>Alarm In and the following screen will appear.

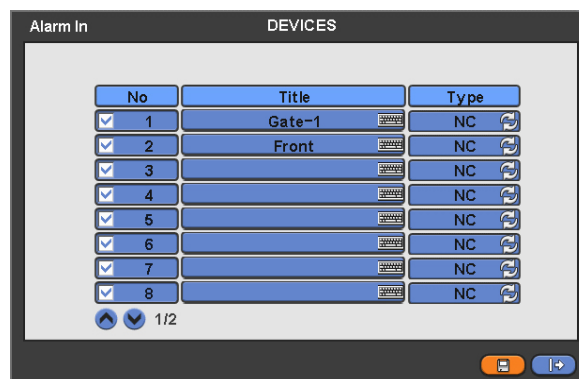


- The Alarm In menu will allow you to give title and to select the type of Alarm input.
- Click (↔) the keyboard icon on the right-hand side of each frame on Title column and the virtual keyboard will appear. Then, please register the title of Alarm input.
- When you check ☒ a check box on No column, a corresponding Alarm starts operating. However, if you do not check the check box, the operation stops.
- Click (↔) each frame on Type column to select type of a corresponding Alarm input.
  - **NO**: contact is normally open (Normally open)
  - **NC**: contact is normally closed (Normally closed)
- Choose 'OK' to confirm setting.

#### 4.4.5 Alarm Out

- Please click (↔) DEVICES>Alarm Out and the following screen will appear.

- The Alarm Out menu will allow you to give title and to select the type and duration of Alarm output.

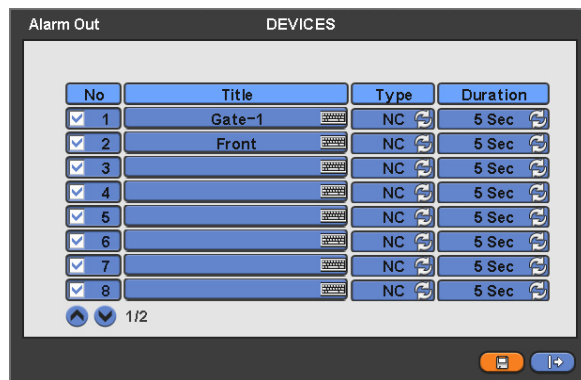

- Click (↵) the keyboard icon on the right-hand side of each frame on Title column and the virtual keyboard will appear. Then, please register the title of Alarm output.
- When you check ☒ a check box on No column, a corresponding Alarm output starts operating. However, if you do not check the check box, the operation stops.
- Click (↵) each frame on Type column to select type of a corresponding Alarm output.
  - **NO**: contact is normally open (Normally open)
  - **NC**: contact is normally closed (Normally closed)
- Click (↵) each frame on Duration column to select duration (i.e., **1 second ~3 hours**) of a corresponding Alarm output.
- Choose 'OK' to confirm the setting.


#### 4.4.6 Serial In

(NOTE)

Please refer to "12. Serial In".

### 4.5 RECORD


- Please click (↵) RECORD and the following screen will appear.

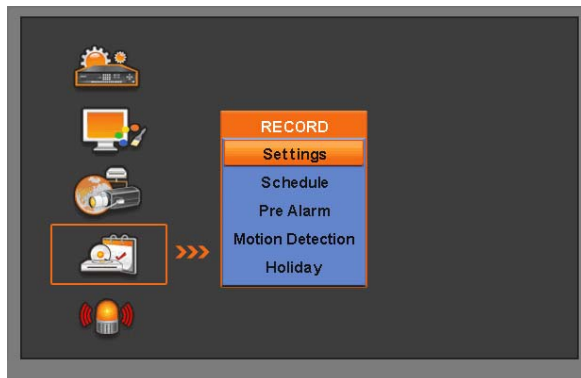

#### 4.5.1 Settings

- Please click (↵) RECORD>Settings and the following screen will appear.



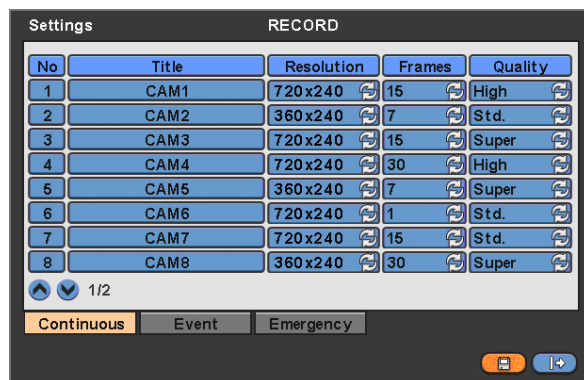

- There are three kinds of recording mode.
  - Continuous:** record continuously.
  - Event:** record only when Sensor or Motion calls.
  - Emergency:** record when you press **EMERGENCY** key.

### Continuous


- The Continuous menu will allow you to set recording mode.
- Each frame on Title column shows camera title registered in DEVICES>Camera/PTZ. You cannot change camera titles here.
- Click (↔) each frame on Resolution column to select recording resolution of a corresponding camera. You may select one of **720x480, 720x240 and 360x240**.
- Click (↔) each frame on Frames column to select recording rate of a corresponding camera. Recording rate varies by camera. Below lists the maximum recording rate of each camera.

NTSC(PAL)	360x240	720x240	720x480
4 Channel DVR	120(100)	120(100)	60(50)
8 Channel DVR	240(200)	120(100)	60(50)
16 Channel DVR	480(400)	240(200)	120(100)

- Click (↔) each frame on Quality column to select recording quality of a corresponding camera. You may select one of **Super, High and Std.**
- Choose 'OK' to confirm the setting.

### Event

- Please click (↔) Event and the following screen will appear.

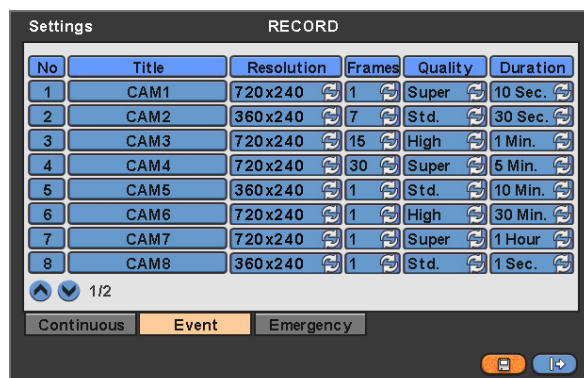


- The Event menu will allow you to set Event videos.
- Each frame on Title column shows camera title registered in DEVICES>Camera/PTZ. You cannot change camera titles here.
- Click (↔) each frame on Resolution column to select recording resolution of a corresponding camera. You may select one of **720x480, 720x240 and 360x240**.
- Click (↔) each frame on Frames column to select recording rate of a corresponding camera. Recording rate varies by camera. Below lists the maximum recording rate of each camera.

NTSC(PAL)	360x240	720x240	720x480
4 Channel DVR	120(100)	120(100)	60(50)
8 Channel DVR	240(200)	120(100)	60(50)
16 Channel DVR	480(400)	240(200)	120(100)

- Click (↔) each frame on Quality column to select recording quality of a corresponding camera. You may select one of **Super, High and Std.**
- Click (↔) each frame on Duration column to select recording duration (i.e., **1 second ~3 hours**) of a corresponding camera.
- Choose 'OK' to confirm the setting.

### Emergency

- Please click (↔) Emergency and the following screen will appear Emergency.
- The Emergency menu will allow you to set Emergency videos.
- Each frame on Title column shows camera title registered in DEVICES>Camera/PTZ. You cannot change camera titles here.

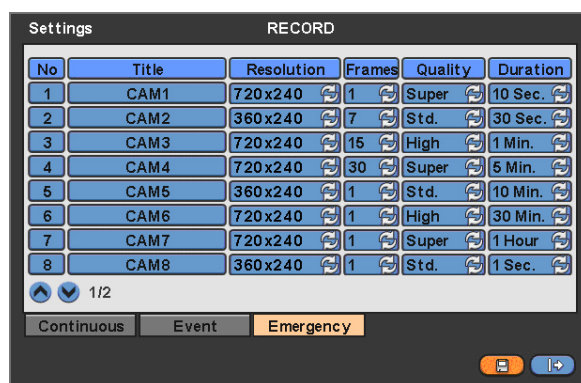


- Click (↔) each frame on Resolution column to select recording resolution of a corresponding camera. You may select one of **720x480, 720x240 and 360x240**.
- Click (↔) each frame on Frames column to select recording rate of a corresponding camera. Recording rate varies by camera. Below lists the maximum recording rate of each camera.

NTSC(PAL)	360x240	720x240	720x480
4 Channel DVR	120(100)	120(100)	60(50)
8 Channel DVR	240(200)	120(100)	60(50)
16 Channel DVR	480(400)	240(200)	120(100)

- Click (↔) each frame on Quality column to select recording quality of a corresponding camera. You may select one of **Super, High and Std.**
- Click (↔) each frame on Duration column to select recording duration (i.e., **1 second ~3 hours**) of a corresponding camera.
- Choose 'OK' to confirm the setting.

### 4.5.2 Schedule

- Please click (↔) RECORD>Schedule.
- Each weekday is composed of 24 'Time blocks'. Each block represent 1 hour.
- Click (↔) Camera frame to select Camera No. 1.
- Please set the recording mode as follows:
  - ① Check (a check box next to your desired recording mode (i.e., Continuous, Alarm, Motion and PreAlarm)). If you want to stop recording, please clear all check boxes.
  - ② Click block, row, column or all (square box) to register your desired recording mode.
    - Click (↔) a block and only the block will be registered.
    - Click (↔) a row (S~H) and the entire row will be registered.
    - Click (↔) a column (00~23) and the entire column will be registered.
    - Click (↔) a square box (top-left side between 'S' and '00') and all the rows/columns will be registered.

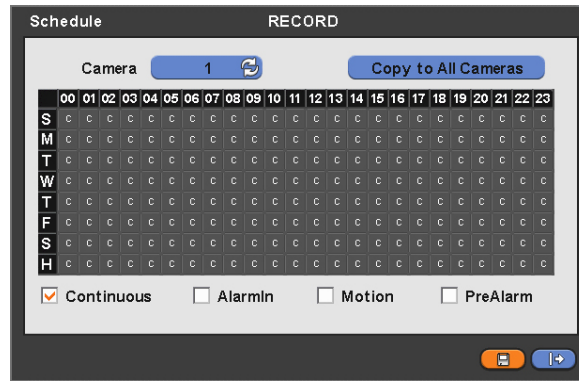

- Repeat the procedure for Camera Nos. 2 to 16. If you want every camera to have the same mode, please click (↔) Copy to All Camera.
- Below lists symbols of the respective recording modes.

C	Continuous
A	Alarm In
A <sup>+</sup>	Alarm In / Continuous
A <sup>++</sup>	Alarm In / PreAlarm
M	Motion
M <sup>+</sup>	Motion / Continuous
M <sup>++</sup>	Motion / PreAlarm
M <sub>A</sub>	Motion / Alarm In
M <sup>+</sup> <sub>A</sub>	Motion / Alarm In / Continuous
M <sup>++</sup> <sub>A</sub>	Motion / Alarm In / PreAlarm


- Choose 'OK' to confirm the setting.

(NOTE)

Holiday (H) registration is done with a separate menu.

### 4.5.3 Pre Alarm

- Please (↔) RECORD>Pre Alarm and the following will appear.
- Pre Alarm is effectively used when you selected recording mode by Alarm or Motion.
- The Pre Alarm will allow you to check, during playback, the previously recorded video before the record start time.

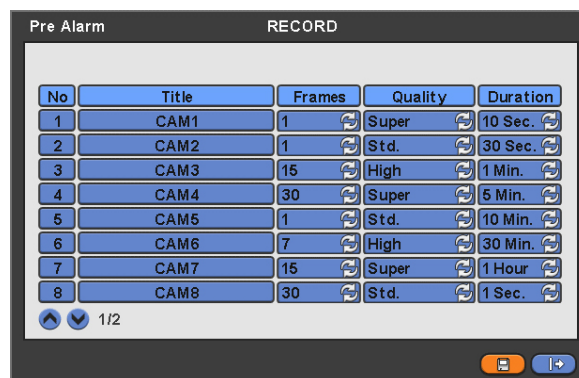

- Each frame on Title column shows camera title registered in DEVICES>Camera/PTZ. You cannot change camera titles here.
- Click (↔) each frame on Resolution column to select recording resolution of a corresponding camera. You may select one of **720x480, 720x240 and 360x240**.
- Click (↔) each frame on Frames column to select recording rate of a corresponding camera. Recording rate varies by

camera. Below lists the maximum recording rate of each camera.

NTSC(PAL)	360x240	720x240	720x480
4 Channel DVR	120(100)	120(100)	60(50)
8 Channel DVR	240(200)	120(100)	60(50)
16 Channel DVR	480(400)	240(200)	120(100)

- Click (←) each frame on Quality column to select recording quality of a corresponding camera. You may select one of **Super, High and Std.**
- Click (←) each frame on Duration column to select recording duration (i.e., **1 second ~ 3 hours**) of a corresponding camera.
- Choose 'OK' to confirm the setting.

#### 4.5.4 Motion Detection


- Please click (←) RECORD>Motion Detection and the following screen will appear.



- The Motion Detection menu will allow you to set Motion detection alarm.
- Press **SETUP** key (or right mouse button) and the SETUP menu will appear.
- SETUP menu descriptions.
  - **Camera:** select camera for setup.
  - **Sensitivity:** select sensitivity (Low, Normal and High)
  - **Reverse Vert:** activate the entire column at the cursor's position.
  - **Reverse Horz:** activate the entire row at the cursor's position.
  - **Select All:** active all blocks.
  - **Deselect All:** deactivate all blocks.
  - **Copy to All Cameras:** The present channel setup applies to all other cameras. Only when you click save button, the changed setup can be saved.
  - **Save:** save the new settings and go back to previous menu (page).
  - **Exit:** ignore the new settings and go back to previous menu (page).
  - **Cancel:** cancel Motion Setup menu.
- Choose 'OK' to confirm the setting.

#### 4.5.5 Holiday


- Please click (←) RECORD>Holiday and the following screen will appear.

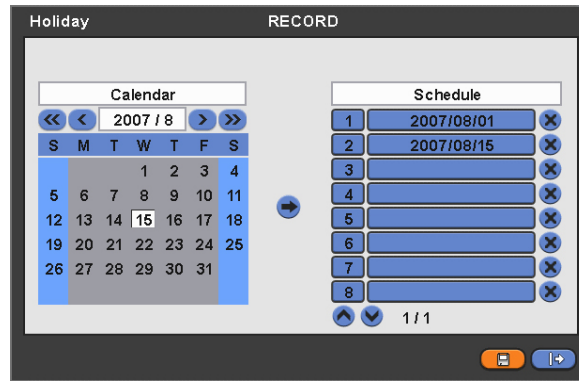

- The Holiday menu will allow you to register holidays. Please follow the registration procedure below.
  - Use arrow buttons in the Month Calendar to select Year and Month of holiday to be registered.
    - ▶▶: search subsequent 'Year'
    - ◀◀: search previous 'Year'
    - ▶: search subsequent 'Month'
    - ◀: search previous 'Month'
  - Click (↔) on date you need to register as holiday.
  - Click (↔) ADD button and the date you just clicked on will be copied to the Schedule frame for registration.
  - If you want to cancel the registration of a certain holiday, please click ☒ button next to the Schedule frame.
- Since holidays may vary every year, we recommend you to update on a regular basis.
- Choose 'OK' to confirm the setting.

## 4.6 LINK

- Please click (↔) LINK and the following screen will appear.

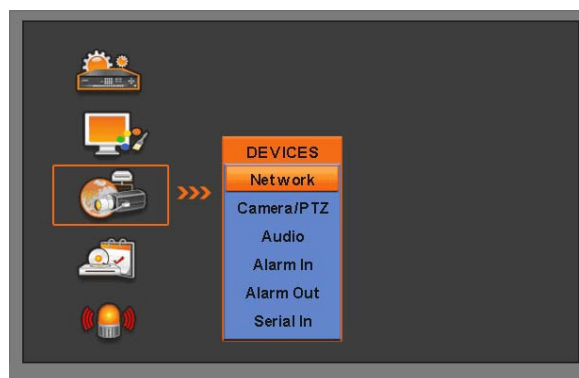

- The LINK menu will allow you to set recording modes of all kinds of alarms (Sensor, Motion Event, Video loss, System Event, etc.), alarm output, e-mail notification and the like.

### 4.6.1 Alarm In

- Please click (↔) LINK>Alarm In and the following screen will appear.
- Select cameras for recording while the motion sensor is in operation and alarm outputs and set up E-mail addresses for notification.
- Link Notification displays E-mail addresses registered in DEVICES>Network>Notification.
- Please follow the setup procedures below.
  - Click (↔) Alarm In frame and select Alarm In 1.
  - Select cameras for recording when Alarm In 1 is on. Please check ☒ a check box under Link Camera. More than two cameras can be set.
  - Select alarm outputs to be worked when Alarm In 1 is on. Please check ☒ a check box under Link Alarm Out. More than two alarm outputs can be set.
  - Select E-mail addresses for notification when Alarm In 1 is on. Please check ☒ a check box under Link Notification. More than two E-mail addresses can be set.
  - Repeat the above procedure for Alarm In 2~ Alarm In 4 (Up to 16 for **Type B**).

- Choose 'OK' to confirm the setting.


#### 4.6.2 Motion Event

- Please click (↔) LINK>Motion Event and the following screen will appear.

- Select cameras for recording while the motion sensor is in operation and alarm outputs and set up E-mail addresses for notification.
- Link Notification displays E-mail addresses registered in DEVICES>Network>Notification.
- Please follow the setup procedures below.
  - ① Click (↔) Motion Event frame and select Motion Event 1.
  - ② Select cameras for recording when Motion Event 1 is on. Please check ☒ a check box under Link Camera. More than two cameras can be set.
  - ③ Select alarm outputs to be worked when Motion Event 1 is on. Please check ☒ a check box under Link Alarm Out. More than two alarm outputs can be set.
  - ④ Select E-mail addresses for notification when Motion Event 1 is on. Please check ☒ a check box under Link Notification. More than two E-mail addresses can be set.
  - ⑤ Repeat the above procedure for Motion Event 2~ Motion Event 4 (Up to 16 for **Type B**).
- Click(↔)By Duration box to set up the recording duration and prevent recording caused by event.  
The duration time can be controlled by previous setting mode: RECORD>Settings>Event
- Choose 'OK' to confirm the setting.

#### 4.6.3 Video Loss


- Please click (↔) LINK>Video Loss and the following screen will appear.

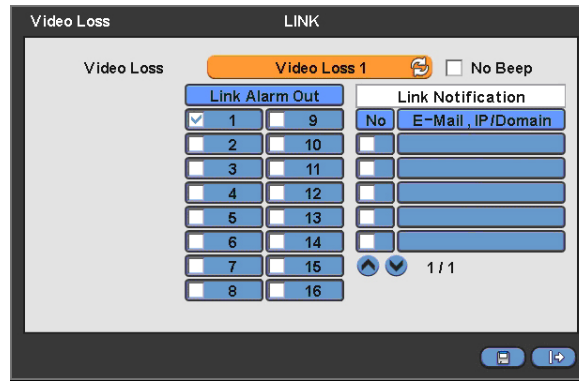

- Select cameras for recording while the motion sensor is in operation and alarm outputs and set up E-mail addresses for notification.
- Link Notification displays E-mail addresses registered in DEVICES>Network>Notification.
- Please follow the setup procedures below.
  - ① Click (↔) Video Loss frame and select Video Loss 1.
  - ② Select cameras for recording when Video Loss 1 is on. Please check ☒ a check box under Link Camera. More than two cameras can be set.
  - ③ Select alarm outputs to be worked when Video Loss 1 is on. Please check ☒ a check box under Link Alarm Out. More than two alarm outputs can be set.
  - ④ Select E-mail addresses for notification when Video Loss 1 is on. Please check ☒ a check box under Link Notification. More than two E-mail addresses can be set.
  - ⑤ Repeat the above procedure for Video Loss 2~ Video Loss4 (Up to 16 for **Type B**).
- Click No Beep ☒ to deactivate alert sounds from video loss. Apply to all channel.
- Choose 'OK' to confirm the setting.

#### 4.6.4 System Event


- Please click (↔) LINK>System Event and the following screen will appear.

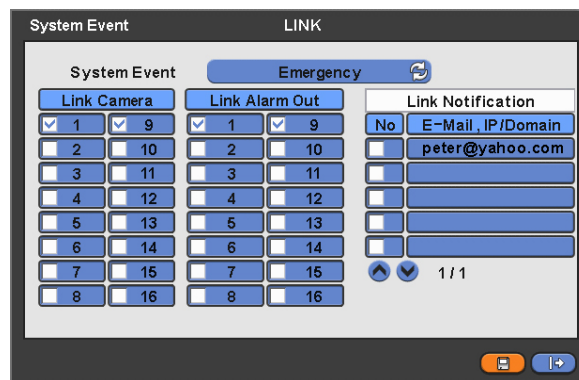

- Select recording cameras and alarm outputs while Emergency recording using **EMERGENCY** key and set E-mail addresses for notification.
- Link Notification displays E-mail addresses registered in DEVICES>Network>Notification.
- Please follow the setup procedures below.
  - ① System Event frame displays Emergency, which you do not have to change.
  - ② Select cameras for recording when emergency occurs. Please check ☒ a check box under Link Camera. More than two cameras can be set.
  - ③ Select alarm outputs to be worked when emergency occurs. Please check ☒ a check box under Link Alarm Out. More than two alarm outputs can be set.
  - ④ Select E-mail addresses for notification when emergency occurs. Please check ☒ a check box under Link Notification. More than two E-mail addresses can be set.
- Choose 'OK' to confirm the setting.

#### 4.6.5 Popup Link

- Please click (←) LINK>Popup Link and the following screen will appear.

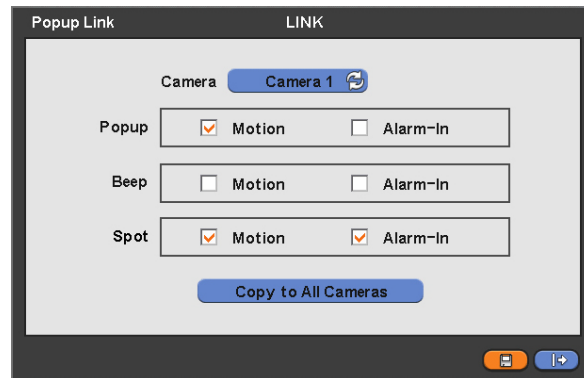

- When Motion or Alarm-In is detected, you can select a popup or beep sound for warning, or have a particular channel of interest to pop-up on Spot Screen.
- Please follow the setup procedures below.
  - ① Select camera
  - ② **Popup**: Please Check ☒ a check box under making the popup screen for main monitor.
  - ③ **Beep**: Please Check ☒ a check box under making beep sound.
  - ④ **Spot**: Please Check ☒ a check box under making the popup screen for spot monitor
- Click Copy to All Cameras button, then the present channel setup will apply to all other cameras.
- Choose 'OK' to confirm the setting.




## 5. Operation Instructions

### 5.1 Viewing

#### 5.1.1 First Image

- Power on DVR and the following live video will appear, while viewing and recording at the same time.

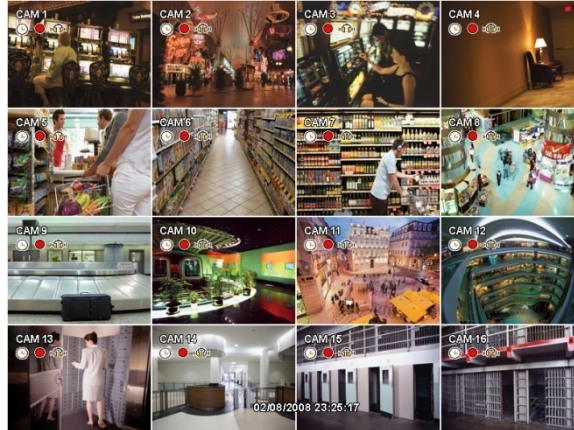

- The screen will display date/time and icons below.

Icon	Description
	Continuous recording mode
	Event recording mode (Alarm In/Motion)
	In recording
	PTZ registration/PTZ mode
	In Audio recording
	CMS Access Indication/No. of accesses (up to 4)
	In channel sequencing
	Setup in HDD Overwrite mode
	Setup in HDD None Overwrite mode(recording)
	Setup in HDD None Overwrite mode(HDD Full)

- On the right bottom side of the screen, disk usage will show by %.
- On the left low side of the screen, , , , , icon will show as the progress.
- At the normal state, HDD Overwrite mode is on and icon shows.
- When Overwrite mode is off (see 4.2.1 Information>Record>Overwrite Setting), will show. And when the disk becomes full, the icon will be changed into .
- Click Emergency recording button, icon will show.
- Click Audio button, icon will show. And click channel button, then you can change only audio channel. **(Only B type)**

#### 5.1.2 View Formats

- The available view formats when the Main Monitor is in viewing mode include Full Screen, Split Screen, Channel Sequencing Screen and PIP screen.

– **Full Screen:** Please press camera select key (1~16) to view the corresponding camera image in full view format.

(NOTE)

Using a mouse: Double click to view the corresponding camera image in full view format and click one more time to back to Split Screen.

- **Split Screen:** Please press **DISPLAY** key and the available split screens (or multi-window view formats) will display alternately (i.e., 2x2, 3x3 and 4x4).
- **Channel Sequencing:** Please press **SEQUENCE** key to display images in sequencing view format periodically. This automatic sequence function is not limited to the full screen format, but can be used in any view mode. In 8 channel DVR, 4-camera sequencing view mode is possible and in 16 channel DVR, 4 or 9-camera sequencing view modes are possible.

### 5.1.3 Digital Zoom

- Activate mouse menu with right click at live mode and click ZOOM.
- Use **direction** keys to view certain parts on the zoomed screen.
- The digital zoom function works only in the full screen. Please do not use the digital zoom function in split screen format, channel sequencing mode or PIP mode.


### 5.1.4 Freeze Live Image








- Press **FREEZE** key while viewing live image to pause the image.
- The Freeze function works only in the full screen or split screen formats. Please do not use this function in channel sequencing mode or in PIP mode.

### 5.1.5 Pan/Tilt Control

- Press **PTZ** key to adjust PTZ cameras connected to DVR. Pan/Tilt mode is available only in the full screen format.






- In Pan/Tilt mode, the  icon is displayed on the bottom of the screen.
- Following is the key usage found in Pan/Tile mode.

Key	Function
▲, ▼, ◀, ▶	Up/Down/Left/Right rotation
	Zoom out
	Zoom in
	Focus near
	Focus far
	Iris Close
	Iris Open
	Save Preset
	Go to the Preset
<b>Menu</b>	Go to OSD main menu
<b>Tour</b>	Run Group Tour 1~9

<b>Patt.</b>	Run Pattern 1~9
--------------	-----------------

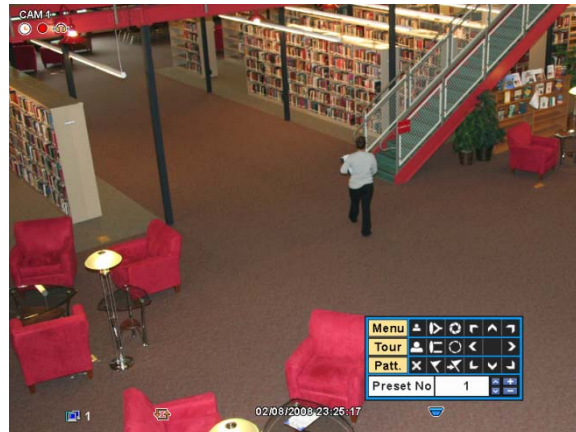- To use a mouse in Pan/Tile mode, please move the cursor to the lower portion near the center of the screen. To use front button in Pan/Tilt mode, please push setup button. A key pad control will show as follows:



- To save current camera number, select Preset No and  button click.
- To move to preset, select preset No and  button click. You would like to move.
- Available 1 ~ 255 Preset numbers can saved it depends on camera specification.
- As explained earlier in 4.4.2. press Menu button to pop-up PTZ camera OSD setup screen and set up Tour and Pattern items.

Since these functions make use of a memory function of the camera itself, you should set them in Camera OSD.

Once you complete the setup, close the Camera OSD menu.

You can conveniently use Tour and Pattern functions simply by clicking Tour and Pattern buttons.

Particulars on how to setup each function on OSD Menu are found in the manual of a corresponding camera.

(NOTE)

Suppose a command for using Tour function is 71 ~ 79 + PSET and if you had set Tour to 70, use Preset No: 1 ~ 9 + Tour button to benefit the Tour function (70 + 1~9).



### 5.1.6 System Log

- Press **EVENT** key and the System Log screen will appear.

System Log	
SYSTEM	
Date/Time	Log
2007/08/01 14:23:50	Playback Exit
2007/08/01 12:33:46	Playback Enter
2007/08/01 12:31:48	Search Exit
2007/08/01 12:31:39	Search Enter
2007/08/01 12:19:09	Playback Exit
2007/08/01 11:35:26	Network Disconnected
2007/08/01 11:31:03	Setup Enter
2007/08/01 10:56:43	Setup Exit
1 / 8 ( 61 )	

- Please refer 'SETUP>SYSTEM>System Log' to learn different events listed on the System Log and see how to delete the System Log.

### 5.1.7 Key Lock


- Press **AUDIO>FF>FORWARD** keys in sequence to operate the key lock function. This function is indicated by  icon in the lower portion on the right-hand side of the screen.
- Once the Key Lock function is on, you cannot use any key. If you want to use a key, please enter the correct password to release the key lock function. If Password is not required, simply press ENTER  key.

### 5.1.8 Emergency Recording

- When you press **EMERGENCY** key, recording starts right away regardless of preset recording mode.
- Emergency recording is not operated while **SETUP**.
- Press Emergency key one more time to stop the emergency recording.

## 5.2 Search

- This involves searching recorded video to playback the wanted video of a specific date and time.
- Press **SEARCH** key on the viewing screen, or Click Search menu at “Function Keys” and the following Search menu will appear.

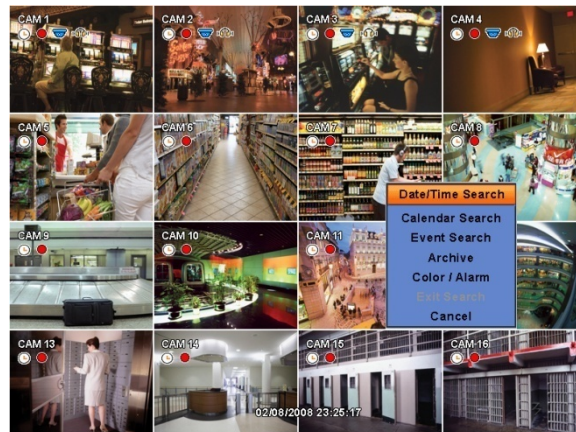

- There are three ways to search video, i.e., by date/time and by calendar.
  - **Date/Time Search:** search by inputting date/time.
  - **Calendar Search:** search by using calendar.
  - **Event Search:** search by event.

### 5.2.1 Date/Time Search


- Please click (↵) Date/Time Search in SEARCH menu and the following input box will appear.

**Date/Time**  
  
**Enter Date/Time**  
  
Date   
Time


- Follow the procedure below to search video by date/time.
  - ① Click (↵) the date and/or time whichever you need to change and block the item. The designated item will be marked in a square.
  - ② Click ▲, ▼ buttons on the right-hand side to adjust the values.
- Choose 'Search' to confirm the setting. Then, the selected video will be played back.
- Playback continues from the designated time until the last recording time.

### 5.2.2 Calendar Search

- Please click (↵) Calendar Search in SEARCH menu and the following input box will appear.

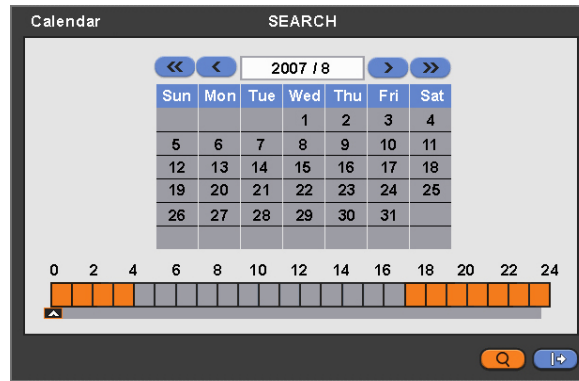

- Dates and Time with recorded data available will be high-lighted.
- Follow the procedure below to search video by calendar.
  - ① Select Year and Month by using the arrow buttons in the calendar.
    - ►►: search subsequent 'Year'
    - ◀◀: search previous 'Year'
    - ►: search subsequent 'Month'
    - ◀: search previous 'Month'
  - ② Click (↔) a date you want. The date will be displayed in black color.
  - ③ Click (↔) ▲ symbol below the time indication bar. The date will turn to orange color and ▲ symbol to ▲.
  - ④ Use ◀ and ► keys to move the ▲ symbol to the start time of the video playback.
  - ⑤ Click (↔) ▲ button to show pop-up window on the screen, If there is a recorded data.

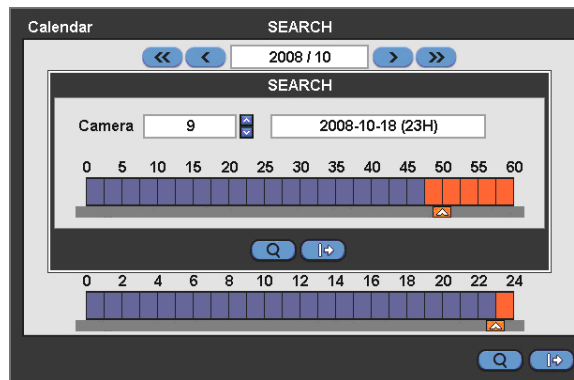

- ⑥ The screen will show selected date/time.
  - ⑦ Click ▲▼ button for selecting cameras.
  - ⑧ Selected camera will show the time bar 0-60 and It will be marked on 2.5minutes basis during selected time zone.
  - ⑨ Use ◀ and ► keys to move the ▲ symbol to the start time of the video playback.
- Click (↔) Search to start playing back the selected video.
  - Playback continues from the designated time until the last recording time.


(NOTE)

- ④ Click (↔) search button for showing entire channel search based on different time frames.

### 5.2.3 Event Search

- Please click (↔) Event Search in SEARCH menu and the following input box will appear.
- This involves searching recorded video to playback the selected video of a specific date and time.
- Press **SEARCH** key on the viewing screen, or use the mouse wheel (central button) and the following Search menu will appear.




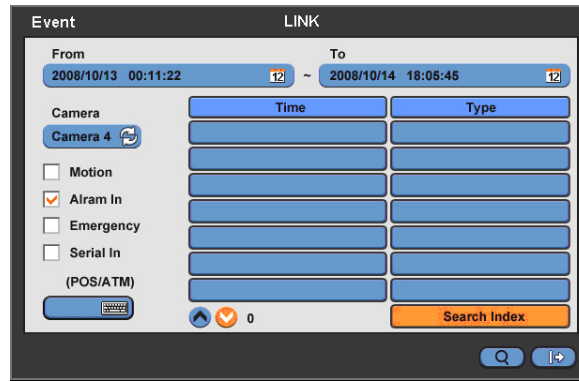

- ① Designate Event Search start time.
- ② Designate Event Search end time.
- ③ Select camera (video) to search data.
- ④ Check a check box (Motion / Alarm In / Emergency / Serial In) Check box.
- ⑤ Click on Search Index button to recorded search event data.

### 5.3 Playback

- This involves searching recorded video to playback the wanted video of a specific date and time in search mode.
- Press **SETUP** key or please press the mouse right button and click in Playback mode. Then, the following screen will appear.

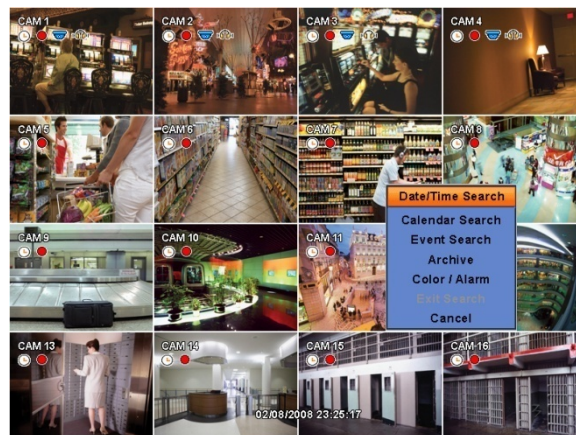

- There are three ways to search video, i.e., by date/time and by calendar.
  - Date/Time Search: search by inputting date/time.
  - Calendar Search: search by using calendar.
  - Event Search: search by event.
- There are three other functions in playback mode;
  - Archive: The Archive function will allow you to copy the recorded video (moving images and still images) from a storage device (USB memory stick, DVD-RW).
  - Exit Search: From playback display to live display.
  - Cancel: Hide menu in playback mode.
- Playback mode runs in the available maximum number of split screen format. To change the viewing mode, please press **DISPLAY** key or **Camera Select** key (1~16).



**(NOTE)**

Using a mouse: Double click to view the corresponding camera image in full view format and click one more time to back to Split Screen.

- Move the cursor of the mouse and the keypad control will appear at the bottom near the center of the screen.
- Every time you press the **PLAY/PAUSE** key during playback mode, it is changed to '1X PLAY' and 'PAUSE'. The displayed sign on the screen also changes from ► to II.
- Following is the key usage found in playback mode. You may also use the keypad provided on the screen.

<b>Go to Start</b>	I◀	• Go to start of recorded data
<b>REW</b>	◀◀	• Fast reverse playback (changes to x2, x4, x8, x16, x32, x64 and Extreme with each press)
<b>BACKWARD</b>	◀I	• Frame-by-frame reverse still image playback
<b>PLAY</b>	►	• Playback mode: 1X PLAY
<b>PAUSE</b>	II	• PAUSE
<b>FORWARD</b>	I►	• Frame-by-frame forward still image playback
<b>FF</b>	►►	• Fast forward playback (changes to x2, x4, x8, x16, x32, x64 and Extreme with each press)
<b>Go to End</b>	►I	• Go to end of recorded data


- Press **SEARCH** key to stop playing back video.


## 5.4 One-touch Playback

- Press the **PLAY/PAUSE** key or click the mouse wheel (central button) in the viewing mode. Then, you will be able to view the wanted recorded video right away without going through the search procedure. The video plays back the recorded video from the last one minute. To stop playing back the video, please press **SEARCH** key.

## 5.5 Archive

- The Backup function will allow you to copy the recorded video (moving images and still images) from a storage device (USB memory stick, DVD-RW).
- Please execute Backup Live or playback.
- Follow the backup procedure.
  - ① Press **ARCHIVE** key. In case of using a mouse, please press the mouse right button and click in Archive. Then, the following screen will appear.

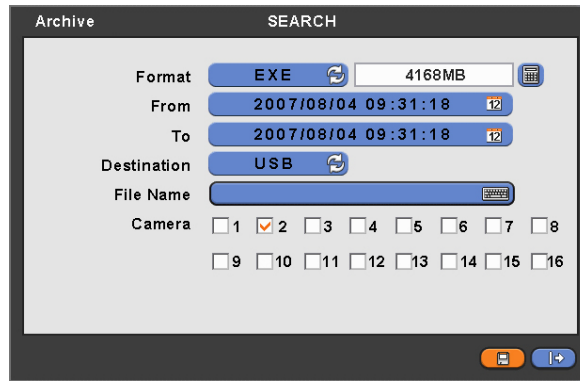

- ② Click (⌨) Format frame to select EXE or JPEG. Choose EXE for storing moving images; and JPEG for still images.
- ③ Click (⌨) the keyboard display on the right-hand side of FROM frame to set the storage start time.
- ④ Click (⌨) the keyboard display on the right-hand side of TO frame to set the storage end time.
- ⑤ Click (⌨) Destination frame to select a storage device out of USB and DVD-RW.
- ⑥ Click (⌨) the keyboard display on the right-hand side of File Name frame to input a file name. You do not need to input extension (exe, jpeg). Please note that the file is not going to be stored unless you input a name.
- ⑦ Check ☒ a check box next to a camera with the video you want to store. You can archive multichannel at the same time.
- ⑧ Click (⌨) the Calculator button  on the rightmost side of Format line to check the data capacity for backup. The capacity will show only for EXE Archive.
- ⑨ Click (▶) Start button. Then, Progress bar will appear and the storage process proceeds. The progress bar does not show actual progress time. Depending on to the file size, it will appear again even after it shows 100%. It is important not to detach storage device until DVR displays "Archive Success" message.
- ⑩ If the storage is done properly, Archive Success message will pop up. Please choose 'OK' to confirm. If the storage fails, Archive Fail message will pop up. In this case, you must try again.



(NOTE)

PLEASE DO NOT USE JPEG FORMAT SELECTING WHILE ARCHIVING IN LIVE MODE.

(NOTE)

PLEASE DO NOT CHANGE THE SETTINGS BY DVR OR CMS, WHILE BACKUP.

(NOTE)

WHEN THE TARGET FILE SIZE IS OVER 2GB, PRESS "  " BUTTON ON THE RIGHT AGAIN AFTER THE FIRST "ARCHIVE SUCCESS". AND DVR WILL CONTINUE TO ARCHIVE TO ANOTHER FILE WITH THE EXTENSION OF "-002" AUTOMATICALLY ADDED. IN CASE OF DVD MEDIA, CHANGE IT AFTER THE FIRST FILE IS FINISHED AND PRESS "  " TO CONTINUE TO THE REST OF PROGRESS.

#### CAUTION

PLEASE DO NOT USE THE SPACE IN BACKUP'S FILE.

#### CAUTION

WHILE BACKUP, PLEASE DO NOT DETACH STORAGE DEVICE OR POWER OFF THE DVR. OTHERWISE, IT MAY CAUSE PERMANENT DAMAGE TO THE DVR OR THE STORAGE DEVICE. IN SUCH CASE, YOU MUST REBOOT THE DVR. IF THE DVR DOES NOT OPERATE PROPERLY, YOU MIGHT NEED FILE SYSTEM RECOVERY PROGRAM OR YOU MUST FORMAT HDD.

## 5.6 Color Control and Position

- Please click (⌨) **Color /Alarm** in SEARCH menu and the following input box will appear.

(NOTE)

THIS FUNCTION IS ENABLED ONLY WHEN **LIVE MODE** AND **1 CHANNEL MODE**





- If you click (**Default**), proper number of Color Control or HSTART/VSTART will appear automatically. Please choose 'OK' to confirm the setting.
- Click (←) ▲, ▼ direction buttons on the right-hand side of Brightness/Contrast/Saturation to set adjust color of the screen (i.e. 0 ~ 255)
- Click (←) ▲, ▼ direction buttons on the right-hand side of HSTART / VSTART to set adjust display position.
- If you want every camera to have the same mode, please click (←) Copy to All Camera.
- Choose 'OK' to confirm the setting.

## 5.7 Alarm Out Control


- Please click (←) **Color / Alarm** in SEARCH popup menu or in front panel and the following input box will appear.

(NOTE)

THIS FUNCTION IS ENABLED ONLY WHEN **LIVE MODE** AND **4 SPLIT SCREEN MODE OR HIGHER**.

(NOTE)

ONLY 4 ALARM CONTROLS ARE AVAILABLE FOR **Type A** MODEL.

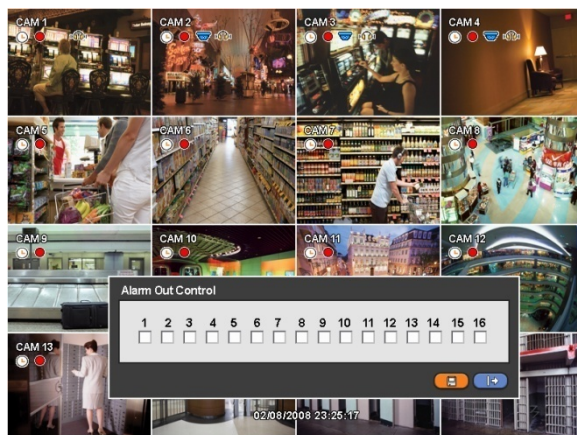

- Check ☒ a check box next to a alarm control you want to on/off alarm out control.
- Choose 'Close' to confirm the setting.

## CMS (Central Monitoring Station) User's Manual



## 6. PROGRAM INSTALLATIONS

### 6.1 System Recommendations

- The followings are our recommendations for system configurations/specifications used with CMS.
  - **Processor:** Intel Pentium(R) (at 2.8GHz or higher)
  - **Memory:** 1.00GB or more
  - **Video:** 128 MB AGP VGA card, 1024 x 768 Resolution, 32-bit Color, DirectX® 8.1 version or later
  - **HDD Space:** 500 MB of space
  - **Monitor:** SVGA or XGA, 1024 x 768 Resolution, 32-bit Color
  - **OS:** Windows® 2000 (SP4) or Windows XP only

### 6.2 Program Installation Method

- Please follow the program installation procedures below.
  - ① If an old version of CMS program was installed, completely remove or delete the old version.


#### CAUTION

YOU SHOULD COMPLETELY REMOVE CMS PROGRAM OF AN OLD VERSION BEFORE INSTALLING NEW VERSION TO REDUCE COLLISION.


- ② Insert CD in your DVD-RW.
- ③ Run the CMSSetup.exe file.
- ④ When the following screen appears, click Next.




- ⑤ When the following screen appears, select folder and click Next.

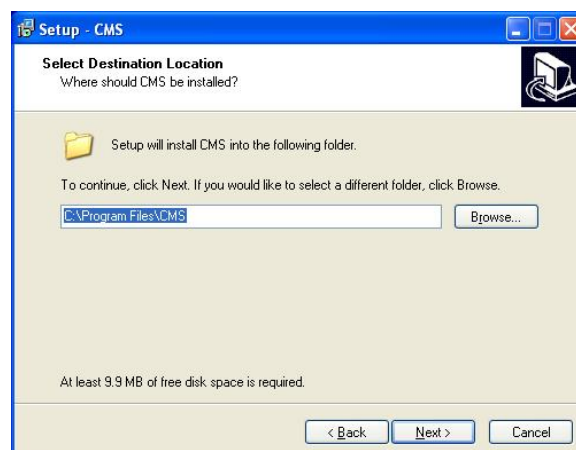

- ⑥ When the following screen appears, check what you need and click Next.

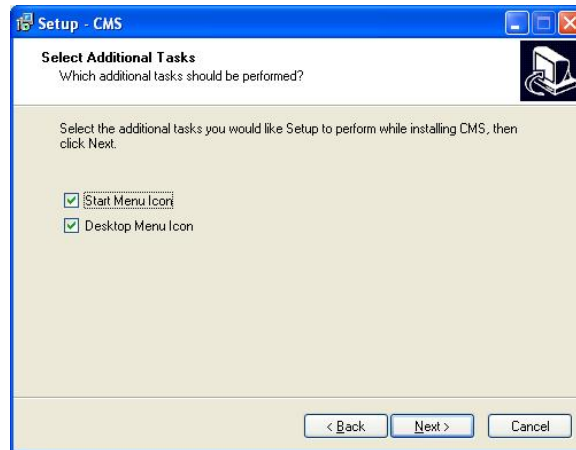

⑦ When the following screen appears, click Install.

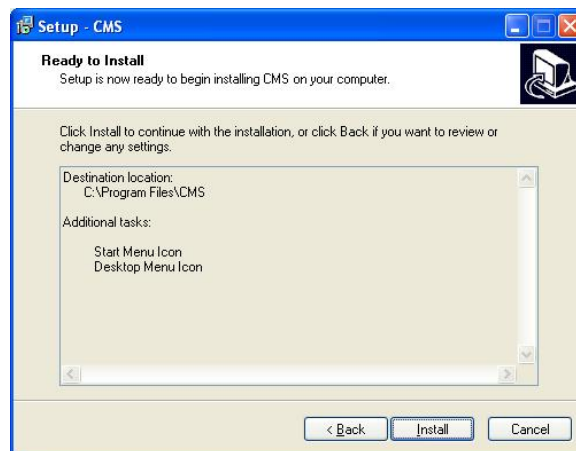

⑧ When the following screen appears, click Finish to complete the installation.



## 6.3 Login

- After you install CMS software, CMS icon below appears on your desktop.











CMS

- Please double click on the icon to execute the program.

## 7. FUNCTION AND INSTRUCTIONS

- Below lists are functions of the program.

ICON	ICON NAME	WATCH MODE	SEARCH MODE	REMARKS
		System Log		DVR System Log
		PTZ Control		DVR PTZ Control
		System Health Check		DVR System Health Check
			DVR Data Playback	DVR Data Playback
			CMS(PC) Data Playback	CMS(PC) Data Playback
			DVR Event Record Data	DVR Event Record Data
	REMOTE WATCH		Changed to Watch Mode	
	REMOTE SEARCH	Changed to Search Mode		
	LOCAL SETTING	Local Setting		CMS Setting
	REMOTE SETTING	Remote Setting		DVR Setting
	ARCHIVE		Archive(Moving Image)	Playback Image Archive
	E MAP	View E map image		
	DVR(Name)	DVR Activation		DVR Select
	REMOTE CONNECT	DVR Connection		Network Connection
	REMOTE DISCONNECT	DVR Disconnection		Network Disconnection
	Exit CMS	DVR Disconnection		Network Disconnection
	INSTANT RECORD	Instant Record		Watch Screen Recording
	IMAGE PRINT		Print	Playback Image Print
	IMAGE SAVE		Save(Still Image)	Playback Image Save
		Full Screen		
		Quad Screen		
		9-Split Screen		
		16-Split Screen		
		36-Split Screen		
		64-Split Screen		
		Zoom Mode (Setup screen disappears and the image is zoomed) (Cancel: click the right mouse button)		

## 8. WATCH MODE

### 8.1 Login Screen

- When you login CMS, the following screen will appear. This screen is of Watch mode.



- Because it is not connected to DVR, images do not show.
- Please do Local Setting first before connecting to DVR.


### 8.2 Local Setting




- Please click LOCAL SETTING button of Toolbar and the following screen will appear.
- This menu is for CMS (PC) and Network setup.

#### 8.2.1 System Setup

- This menu is for CMS (PC) setup.

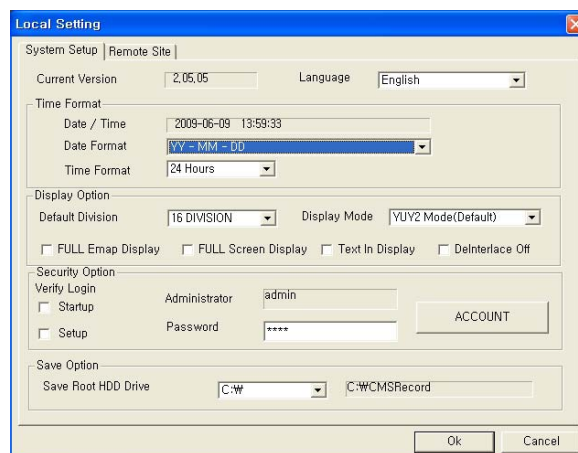

- **CMS VERSION:** displays current version of CMS.
- **Time Format:** displays current time and allow user to set date and time.
- **Display Option:**
  - Default Division: default displays division.
  - Display Mode: (Default: YUV2 Mode (Default)).
  - FULL E Map Display: full E Map displays (page 68).
  - FULL Screen Display: display in Full Screen depending on to the resolution of PC.
- **Security Option:** Set up user's ID, Password and attribution for login CMS.  
Click Account and will display following.

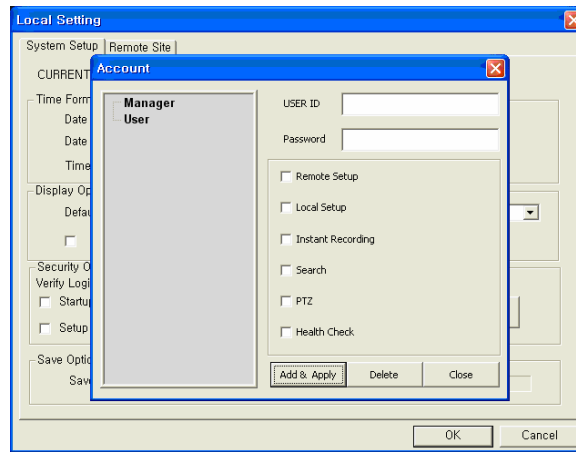


– Manager/User: allow user to authority.

- **Save Option:** allow user to select Drive(C, D) and folder to save data.
- Choose 'OK' to confirm the setting.

### 8.2.2 Remote Site

- This menu is for Network setup.
- Make CMS IP address and Port coincide with DVR.

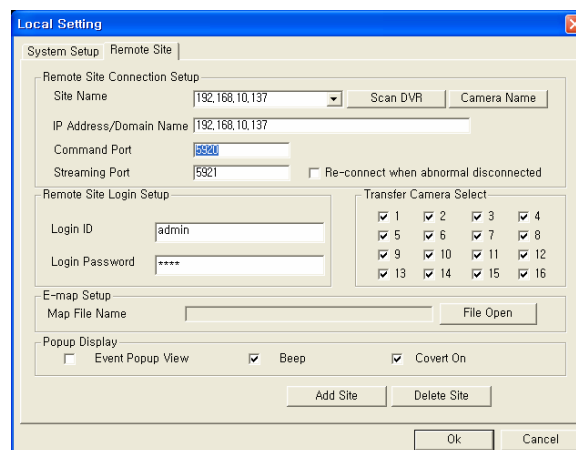


#### • Remote Site Connection Setup

- Site Name: input DVR site name to be displayed on the right-hand side of DVR icon. Please note that this name has nothing to do with the ID registered in DVR. User may create a name that is fairly easy to distinguish.
- IP Address/Domain Name: input IP address or Domain Name of DVR (check with SETUP>DEVICES>Network in your DVR).
- Command Port: input Administrator's number among port numbers set in DVR (check with SETUP>DEVICES>Network in your DVR).
- Stream Port: INPUT Video/Audio number among port numbers set in DVR (check with SETUP>DEVICES>Network in your DVR).
- Re-connect when abnormal disconnected: When the CMS has abnormally disconnected, it automatically verifies the network condition, then tries reconnecting to designated site.


#### • Scan DVR

- This function automatically detects and registers units currently connected to local networks.
- Click "Scan DVR", then following will pop up.



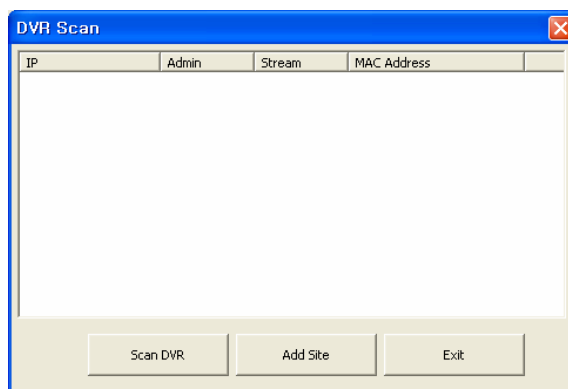

- Click "Scan DVR" button then IP address of DVR will be listed which is currently connected with PC in the network.
- Select the IP address and click "Add site" then the connected DVR is automatically registered in the CMS.
- **Camera Name**
  - It helps to set the camera name in CMS program other than DVR camera name.
  - Click "Camera Name" then follow will appear

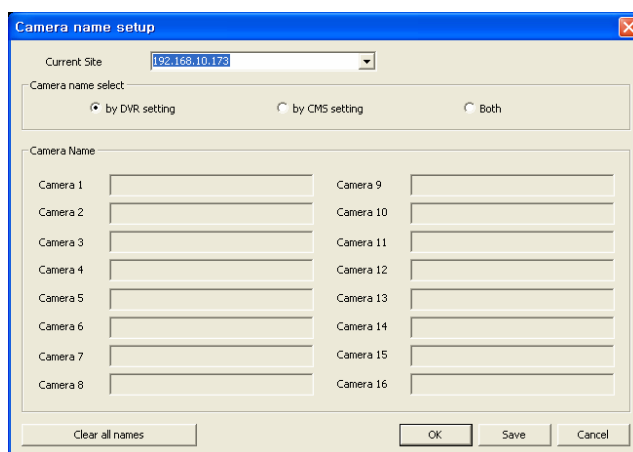




- Select one site by clicking "Current Site".
- Choose camera name between DVR and CMS setting or both.
  - By DVR setting : Display camera name of DVR.
  - By CMS setting : Display Camera name of CMS.
  - Both : Display both as [DVR name]-[CMS name].
- Type the name of each cameras in "Camera Name" item. It is not available when select displaying DVR name only.
- It is possible to erase all names by clicking "Clear all names".
- Click "Save" to save the setting.
- Save and close the setting panel by clicking "OK".
- Exit without saving by clicking "Cancel".
- **Remote Site Login Setup:** Input ID and Password.
  - Please do not input ID and Password if you want a popup window for logon ID and password to appear at the time of connection to CMS.
  - Please input ID and Password if you want to connect directly to CMS without ID and password verification.
  - ID and Password should be coincident with those of DVR. If Password for DVR has not been set up, enter ID only (check with DVR: SETUP>SYSTEM>Account>User in your DVR).
  - Transfer Camera Select enables you to set the kind of channel(s) that show during the initial connection.
- **Add Site:** Click this button to add DVR site. You are allowed to register up to 256 DVR site.
- **Delete Site:** use this button to delete the already registered DVR site(s).
- **E-map Setup:** Use this to upload saved E-map image file (see 10.2 E-map).
- **Popup Display:** Setup for beep and popup displays when event input.
- **Beep:** Beep when event occur.
- **Covert On:** Tick the box off, then it shows the covert screen.
- Please choose 'OK' to confirm the setting.



## 8.3 Live Video

### 8.3.1 Network Connection


- As the setup is completed, you are now ready to connect CMS to DVR over Network.
-  Please click in REMOTE DVR on the screen.
-  It will turn to blue, while being activated.
-  Please click REMOTE CONNECT button.
- If a popup window for ID/Password appears, please input ID/Password. The window may not show up at all depending on Remote Site Login Setup.



(NOTE)


If there is no Admin Password set up in DVR, you may log-in to Admin for CMS and enter without Password.

(NOTE)

Before network connection, be sure that HDD is installed. Otherwise, the DVR will not be connected over network.

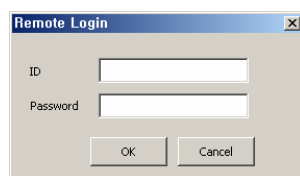

- If video does not display, please check Local Setting again.
- Site Tree of DVR will show with the video. Site Tree lists DVR sites being currently connected to the CMS.
- This is Live video of the connected DVR.
- You can connect maximum 16 sites simultaneously
- If you click Remote Disconnect, interface with a site is disconnected.
-  To connect another DVR, please press REMOTE DISCONNECT button to disconnect the current DVR and connect the new DVR.
-  If you want to exit CMS program, click on Exit CMS button.

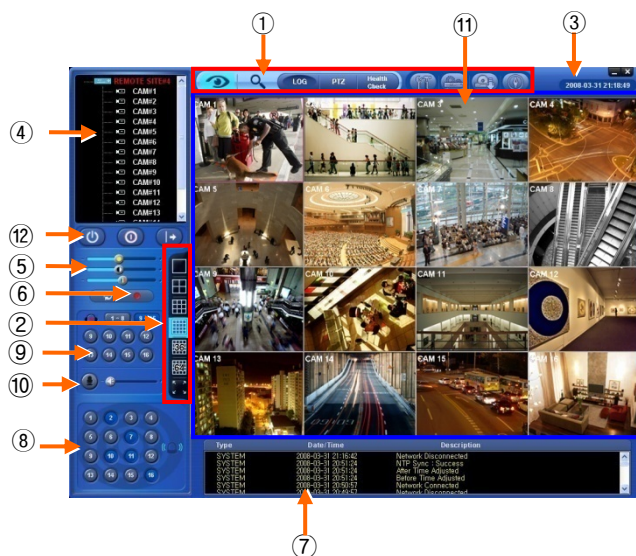

- The list below describes functions of each part of the screen.

1	Tool Bar
2	Watch Mode

3	Date/Time LED
4	Site Tree (DVR and Channels)
5	Color Control Bar
6	Instant Record Button
7	System Log
8	Alarm Out Channels
9	Audio Channels
10	Two way Audio
11	Video Display Screen
12	Network Connect/Disconnect Button/Exit CMS

### 8.3.2 Watch mode

The first image (or the initial image) shows the available maximum split screen format, but you can choose a watch mode you want.



- **Full Screen Mode:** Select a channel and click on FULL SCREEN button. Then, the corresponding channel will display in Full Screen.

(NOTE)

A selected channel is outlined in red.



- **Quad Screen Mode:** Click on QUAD SPLIT button and a quad screen will display. The quad screen is in combination of 1~4, 5~8, 9~12 and 13~16. If you select Channel No. 7 and click the button, 5~8 quad screen will display. Similarly, if you select Channel No. 16, 13~16 quad screen will display.



- **9-Split Screen Mode:** Click on 9-SPLIT button and 9-split screen will display. The 9-split screen is in combination of 1~9 and 8~16. If you select Channel No. 9 and click the button, 1~9 split screens will display. Similarly, if you select Channel No. 10, 8~16 split screens will display.



- **16-Split Screen Mode:** Click on 16-SPLIT button and 16-split screens will display.



- **36-Split Screen Mode:** Click on 36-SPLIT button and 36-split screens will display.



- **64-Split Screen Mode:** Click on 64-SPLIT button and 64-split screens will display.



- **Zoom Mode:** Click on Zoom button. Then, the setup screen will disappear and only the video image will be zoomed (scaled to fit the screen). To cancel, please press the right mouse button.



- **E Map: load and close E Map image program.**
- **Mouse Double Click:** If you double click the mouse on a split screen, it will turn to full screen mode. Double click the mouse to back to the previous watch mode.

### 8.3.3 Multi Screen

- CMS supports multi remote site connections simultaneously.
- **Server Drag & Drop:** Drag & Drop Remote Site of site tree to any screen. Then all cameras of the site will display sequentially.
- **Camera Drag & Drop:** Drag & Drop a camera of Remote Site to any screen. Then the camera will display.



### 8.3.4 Screen Color Adjustment

- Adjust color of the screen using three bars (Brightness / Contrast / Saturation). Selecting a channel and dragging the bar(s) with your mouse. Color will change in about 7 seconds.



Click on UNDO button to return to the original colors.



### 8.3.5 Audio

- Click an audio channel to listen to the corresponding channel.
- You may adjust the audio volume with your mouse.
- Click a MIC Icon to use to two way audio.



### 8.3.6 System LOG



- Click on LOG button on Watch screen. This will allow you to check System Log of Remote Site (DVR).


Type	Date/Time	Description
SYSTEM	2007-08-01 15:48:33	Network Disconnected
SYSTEM	2007-08-01 14:31:51	Network Disconnected
SYSTEM	2007-08-01 14:31:10	Network Connected
SYSTEM	2007-08-01 14:29:53	Network Connected
SYSTEM	2007-08-01 14:23:50	Network Disconnected
SYSTEM	2007-08-01 12:33:45	Network Disconnected

### 8.3.7 Alarm Out

- This is for operating Alarm Out of a selected DVR from a remote distance.
- Click a channel number and Alarm Out of the corresponding channel will operate.
- If you see an intruder, use this function to turn on a siren in an area where the DVR is installed.




### 8.3.8 One Touch Recording

-  Click on INSTANT RECORD button to save video of every channel in HDD of Local System (PC with CMS installation).

## 8.4 PTZ Control

- This is for the control of Pan/Tilt of DVR.

-  Click on PTZ button in Watch mode and the following screen will appear.



- Buttons on the screen have the following functions.

① Up/Down/Left/Right direction buttons



② Zoom/Focus/Iris Control buttons



### ③ Preset Control button

PRESET NO	TITLE
01	Office1
02	Office2
03	Office3
04	Room1
05	Meeting Room1

The completed Preset

- Click on Preset Control button and the following screen will appear. Please input Title and Preset Number.

Preset Control dialog box:

TITLE

Preset NO

Delete

OK Cancel

- When you completed input, please choose 'OK' to confirm.
- Press LOG button to go back to Live video.

## 8.5 Health Check

- This function allows you to check operating status of each unit in DVR connected to CMS.



- Click on Health Check button in Watch mode and the following screen will appear.







- The list below describes functions of each part of the screen.

1	CMS connections (up to 4)
2	Camera connections and operating status
3	HDD connection and its operating status
4	Recording status
5	Motion recording status






6	Alarm In connection and operating status
7	Alarm Out connection and operating status
8	Version
9	Recording start/end date and time




### 8.5.1 Camera Connections and Operating Status

-  Camera is in normal operation.
-  Camera is not in use.
-  Camera is not connected or Video Loss.
-  Camera is Covert status.




### 8.5.2 HDD Connections and Operating Status

-  HDD is in normal operation.
-  HDD is not connected (up to 4).
-  HDD has an error.




### 8.5.3 Recording Status

-  In recording.
-  Recording is stopped.
-  Above the maximum number of cameras allowed.




### 8.5.4 Motion Recording Status

-  In motion recording.
-  No motion recording is available.
-  Above the maximum number of cameras allowed.

### 8.5.5 Alarm In Connection and Operating Status

-  Alarm In is On.
-  Alarm In is Off.
-  Above the maximum number of Alarm In allowed.

### 8.5.6 Alarm Out Connection and Operating Status

-  Alarm Out is On.
-  Alarm Out is Off.
-  Above the maximum number of Alarm Out allowed.

## 8.6 Remote Setting

- You may change DVR's Menu setup through CMS.
- Remote Setting works only in Watch mode.



- Click on REMOTE SETTING button in Watch mode and the following SETUP menu same as DVR's will appear on CMS screen.



- The setup procedure is same as that of DVR.
- When the setup is completed, do not click Exit button on the SETUP screen, but click OK or Cancel button on the Remote Setup screen.


## 9. SEARCH MODE

### 9.1 Search screen

- This menu is for playing back recorded data.



- Click on REMOTE SEARCH button in Watch mode and the following Screen mode screen will appear.
- Search mode provides three search functions. One is for searching DVR video by clicking REMOTE SEARCH button and another is for searching video stored in CMS (HDD of PC) by clicking LOCAL REARCH button and the other is for searching event recorded data stored in DVR by clicking REMOTE EVENT button.

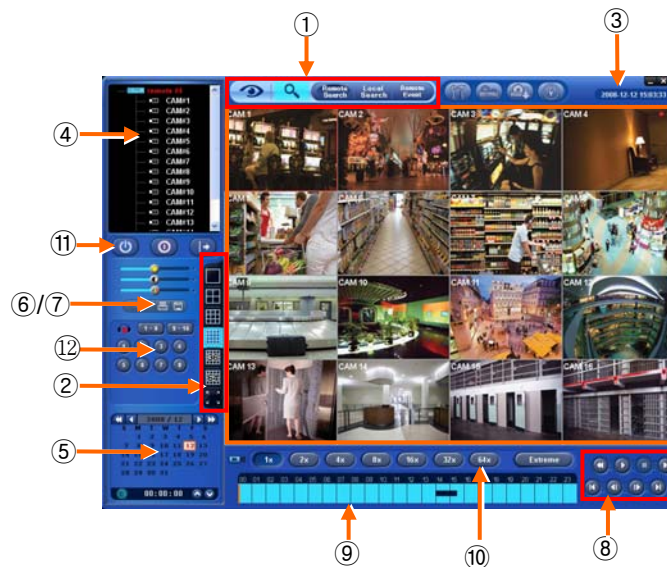

- The list below describes functions of each part of the screen.


1	Tool Bar
2	Watch Mode
3	Date/Time LED
4	Site Tree (DVR and Channels)
5	Calendar
6	IMAGE PRINT button
7	IMAGE SAVE button
8	Playback control button
9	Time Select Bar
10	Fast Forward/Backward & Playback (Click to increase the speed by x1, x2, x4, x8, x16, x32, x64 and Extreme)
11	Network Connect/Disconnect button
12	Audio Channel (Display selected Audio channel)

### 9.2 Remote Search




- The REMOTE SEARCH button allows you to playback recorded video of DVR.
- Select Date
  - In Calendar, dates with recorded data are marked in red.
  - Click the wanted date among the dates marked in red. In background of Time Select Bar, data recorded time is displayed in bar shape.
- Select Time
  - Click the time you want to playback, then Time Select Bar will move. You may drag the Time Select Bar with your mouse.



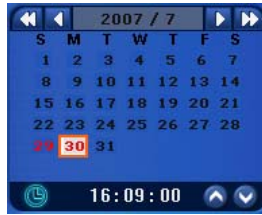

◀◀	Search previous 'Year'
▶▶	Search subsequent 'Year'
◀	Search previous 'Month'
▶	Search subsequent 'Month'

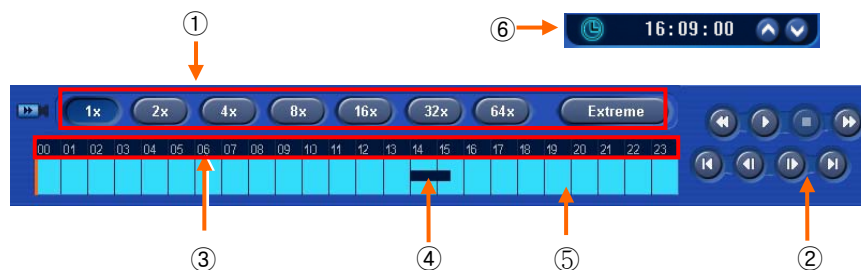

1	Fast Forward/Backward & Playback (Click to increase the speed by x1, x2, x4, x8, x16, x32, x64 and Extreme)
2	Select Camera to be played back
3	Time LED (24 Hour)
4	Data Bar (Recorded data)
5	Time Select Bar
6	Start Time (Time for starting playback)

- When Date/Time search is completed, please click Playback control button to begin playback.

### 9.3 Local Search



- The LOCAL SEARCH button allows you to playback recorded data in CMS (HDD of PC).
- Date/Time search procedures are same as Time Search.
- When Date/Time search is completed, please click Playback control button to begin playback.

### 9.4 Event Search



- The REMOTE SEARCH button allows you to search event recorded data of DVR.



- ① Designate Event Search start time.
- ② Designate Event Search end time.
- ③ Select camera (video) to search data.
- ④ Check a check box (Motion/Alarm In/Emergency/Serial in) Check box
- ⑤ Click on Search Index button to recorded search event data.

## 9.5 Playback

### 9.5.1 Playback Control Button

- Select time and click Fast Forward/Backward button.



- Click ► button to begin playback.
- Use the control buttons below while playback.



⏮	Fast Backward Play
⏭	Fast Forward Play
▶	Play
■	Stop
⏮	Go to the First Image
⏭	Go to the Last Image
⏮	Go to the Previous Image
⏭	Go to the Next Image

#### CAUTION


Make sure that you use control buttons after STOP button. For example, if you want to change from Play mode to Fast Forward Play mode, press STOP button first, select the speed and then Fast Forward Play button. This applies equally when you use other buttons.

### 9.5.2 Print

- This is for printing a selected image (within the red outline).



- Click IMAGE PRINT button and the following screen will appear.
- Choose 'OK' to confirm the setting. Then, the printing proceeds.

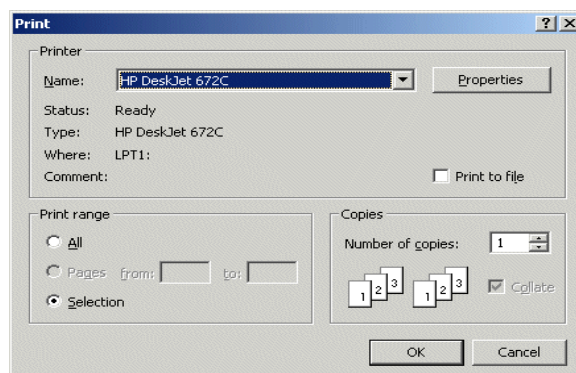


### 9.5.3 Save

- This is for saving still image(s) in Bitmap or JPEG file.



- Click IMAGE SAVE button and the following screen will appear.
- Input the name of the file to save and execute Save.

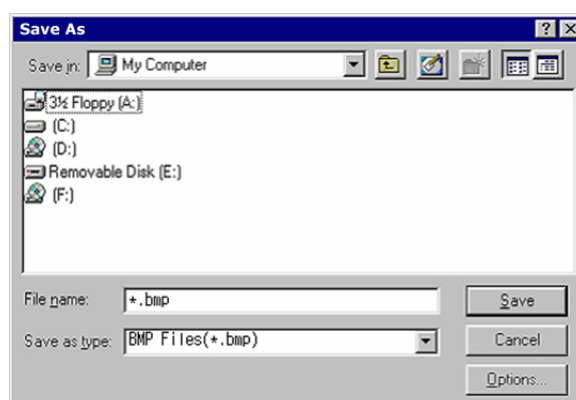

#### CAUTION

If images are not saved properly, click UNDO button and save again.

### 9.5.4 Archive


- This is to back up the DVR's moving image data to EXE file in PC(CMS).
- Work only in playback mode.



- Press STOP button first to make sure the playback is stopped and then press ARCHIEVE button.



- Click ARCHIVE button and the following screen will appear.

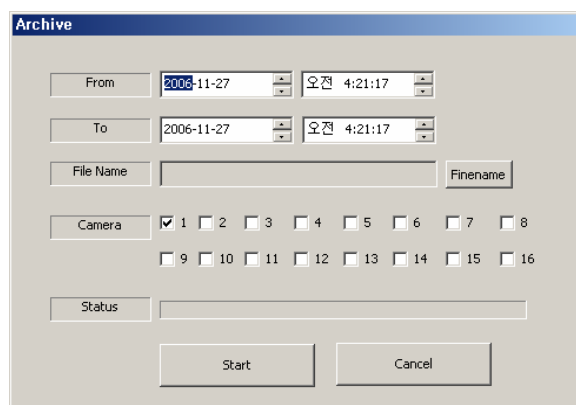


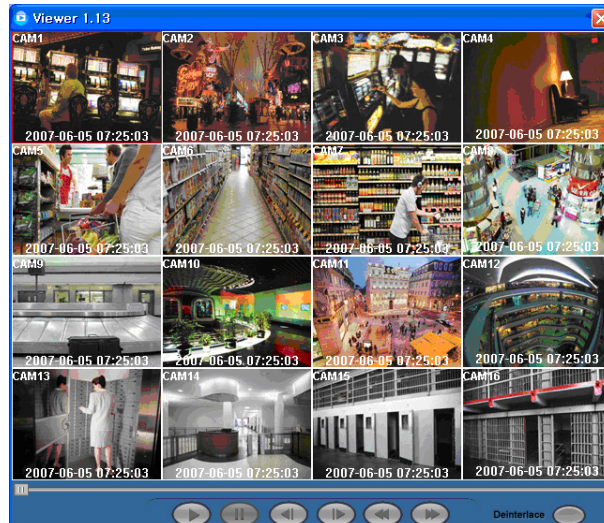
- Designate Archive start time.








- ② Designate Archive end time.
- ③ Designate file name.
- ④ Select camera (video) to save.
- ⑤ Click on Start button to begin Archive.

## 10. Others


### 10.1 Viewer

- The Format of archive file is .exe(executable file).
-  Please double click on the icon to execute the program.










PLAY		• Playback mode: 1X PLAY
PAUSE		• Playback mode: PAUSE
BACKWARD		• Frame-by-frame backward still image playback
FORWARD		• Frame-by-frame forward still image playback
REW		• Fast reverse playback
FF		• Fast forward playback
DEINTERLACE		• Deinterlace On / Off


### 10.2 E MAP

- You can find emap.exe program following directory (Default: C:\Program Files\CMS\emap.exe).
- Please double click  on the **emap.exe** to execute the program.




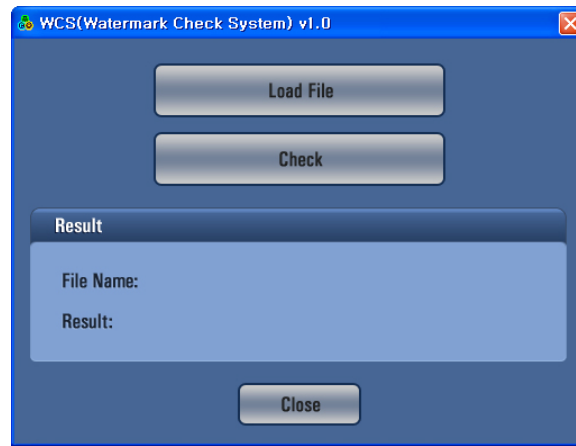
-  Please click on the icon to load the image file.
-    To move the icon just drag and drop.
- You can also rotate the icon.
-  Please click on the icon and input the name of the E Map file to save and execute.
-  Please click on the icon to exit program.
- Please click on CMS (PC) setup and select remote site tab and the following screen will appear.

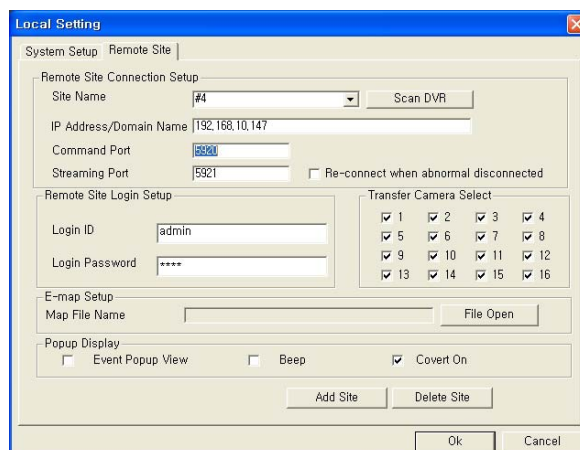

- Please click on file open button and select the E Map file to load.
- Please click on OK button to exit program.
- Click  button and you can use E Map function.  
(You cannot use E Map function in the Search Mode, Health Check Mode)
- To move an E Map image, just click the image after connected the DVR.

### 10.3 Watermark Check System

- Mouse double click  WCS.exe program in the CMS program folder (Default: C:\Program Files\CMS\WCS.exe).



- To open the check .exe or .jpg or .bmp file just click Load File button.
- To click the check button, you will get following message;

**Result:**


**Verification OK !**

**Corrupted or Modified**

## 10.4 Estimator

- When you set up CMS program, the application, Estimator will set up additionally.
- The operation screen is as follows.



- At Setup>Record>Settings, by changing settings, you can estimate data size, maximum recording days in advance.
- Set DVR channel, video type, hard disk size you use.
- After setting FPS per channel, video size, video quality, click  button. Then the maximum recording days and data size will show.

# Keyboard Controller

## CP1200A

# User's Manual





## 11.1 Keyboard Controller

- CP1200A(hereinafter CP) has two modes. (Direct Connect mode, Relay mode)



- “Mouse” button
  - Short click: Control mode of keyboard is changed. (Direct connection, Relay)
  - Long click: Mouse functions are performed through USB port.
- Direct Connect Mode: PTZ camera is connected directly to CP.
- Relay Mode: DVR is first connected to CP and PTZ camera is connected to DVR.

- **Set CP1200A in Relay mode.** You will then see the screen shown below.

DVR WKEY 9.6K ID : 001

- This indicates that CP is currently in relay mode and operates at transfer speed of 9600bps and control ID is 1.
- **ID here is not of DVR, but of camera to control.**
- All IDs, i.e., Camera jumper ID, ID given from DVR setup >DEVICES >CAM/PTZ and ID controlled at CP should be identical.

## 11.2 PTZ / DVR Control Mode

- After system configuration is done in a relay mode, you may control DVR through rs485 line.
- **DVR control mode:** You can control DVR by using keyboard.
- **PTZ control mode(default):** You can use PTZ functions of camera by using keyboard.
- How to set mode:
  - 1.Check System ID of DVR. (Setup>SYSTEM>Information: System ID)
  2. Input SYSTEM ID numbers in CP1200A and press “CLR”.
  - Input the ID numbers and press “CLR” key, the operation mode is switched to **DVR control mode**.
  - If you do not input 0 or numbers and presses “CLR” key only, the operation mode is switched to **PTZ control mode**.
  - In DVR control mode, a text saying KBD: (SYSTEM ID) appears at a position for DVR recording capacity on the OSD screen.
- If you want to control another DVR while using a DVR in DVR control mode currently, press number keys (SYSTEM ID of a target DVR) + “ENT” key to change DVR to be controlled. Then, the current DVR control mode is automatically switched to PTZ control mode.

If SYSTEM ID is changed on Setup window while you are using a DVR in DVR control mode, you can no longer control the DVR with the keyboard. Therefore, once you have changed System ID, you should immediately press numeric keys ( new SYSTEM ID) + “ENT” key to let the keyboard recognize the DVR.

### 11.2.1 PTZ Control Mode

- In relay mode, Default status indicates a PTZ control mode.
- **Press number keys + “ENT”(Long) key** to change to Camera ID you want to control. If there is a corresponding Camera ID, a camera image will pop up. PTZ control is possible.
- You can control up to 255 devices.
- **PSET:** Preset save – Number keys + PSET (Long on)  
Preset shift – Number keys + PSET
- **Joystick:** PAN/TILT, Zoom In, Zoom Out
- **TELE:** Zoom Out
- **WIDE:** Zoom In
- Please refer to DVR User’s Manual for setup in DVR.

### 11.2.2 DVR Control Mode

- In DVR control mode, all buttons operate according to texts written underneath. The operations are the same as


Front buttons of DVR as follows:

- **DISPLAY**: changes channel split screens in sequence of 1>4>9>16>1.
- **SEQ**: turns on/off Sequence function.
- **SPOT**: changes the channel of a screen connected to the Spot monitor.
- **ARCHIVE**: pops up Archive window.
- **AUDIO/ESC**: shuts down window when Setup window appears. Otherwise, it activates the AUDIO function.  
Any setup changes during shutdown are not saved.(same as Cancel)
- **EMERGENCY**: turns on/off Emergency record function.
- **EVENT**: pops up a window to let you see System Log.
- **PIP**: turns on/off PIP screen in case of 1 channel screen. If PIP function is on, user **number key(s) + ENT** key to change the PIP channel.  
In case of 4 or 9 channel screen, it changes the screen to a next one in the sequence.
- **FRZ**: freezes a current image.
- **SETUP**: pops up Setup window.
- **PLAY/PAUSE**: plays/pauses recorded data in play mode.
- **SEARCH**: pops up Search window, or switches play mode to search mode.
- **ZOOM**: zoom in a current image.
- **JOYSTICK (REW)**: rewinds in sequence of 2X, 4X, 8X, 16X, 32X, 62X, Extreme in play mode.
- **JOYSTICK (FF)**: fast forwards in sequence of 2X, 4X, 8X, 16X, 32X, 62X, Extreme in play mode.
- **JOYSTICK(SETUP)**: operates with direction keys if Setup window is popped up. (up/down/left/right)
- **ENT**: operates with Select key if Setup window is popped up.

(If Setup window is not popped on, you can select a channel of interest by using **number key(s) + "ENT"(short) key**.)

### 11.3 Keyboard Controller Setup

- If you press number key 2 on CP1200A(hereunder CP) + **"SET"** (Long on), you can set up the main menu of CP.  
Set up as followings.(Joystick: ↓ next, ←, → change)

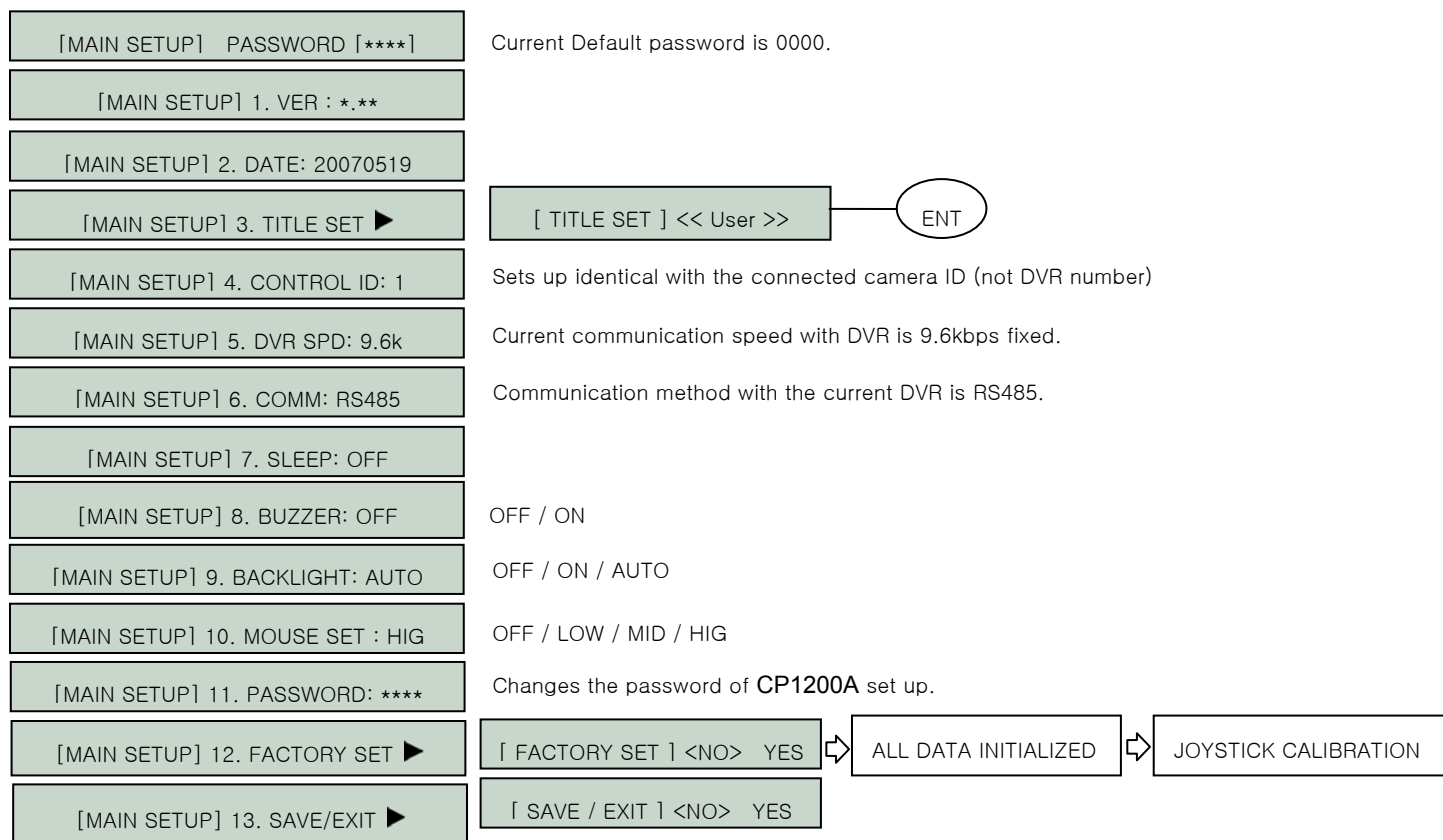

## 11.4 Q / A

### 11.4.1 When a Key does not Work after Set up


- If the communication speed of DVR and CP are not identical, it may not work.  
Please make sure the baud rate of CP sets on 9.6kbps.
- Press the button to enter PTZ mode and switch to DVR mode again.
- Please reboot the DVR.

### 11.4.2 When Tx Blinks Continually on the LED Window

- If Tx blinks continually without any operation, it may be mistakenly set up for Joystick.
  - OFFSET of the Joystick may not appropriately set up.
  - Please touch the Joystick and position it on the center.

If the problem still remains, select YES on FACTORY SET of the CP main setup and set up the Joystick again.

## 11.5 Keyboard System Connections

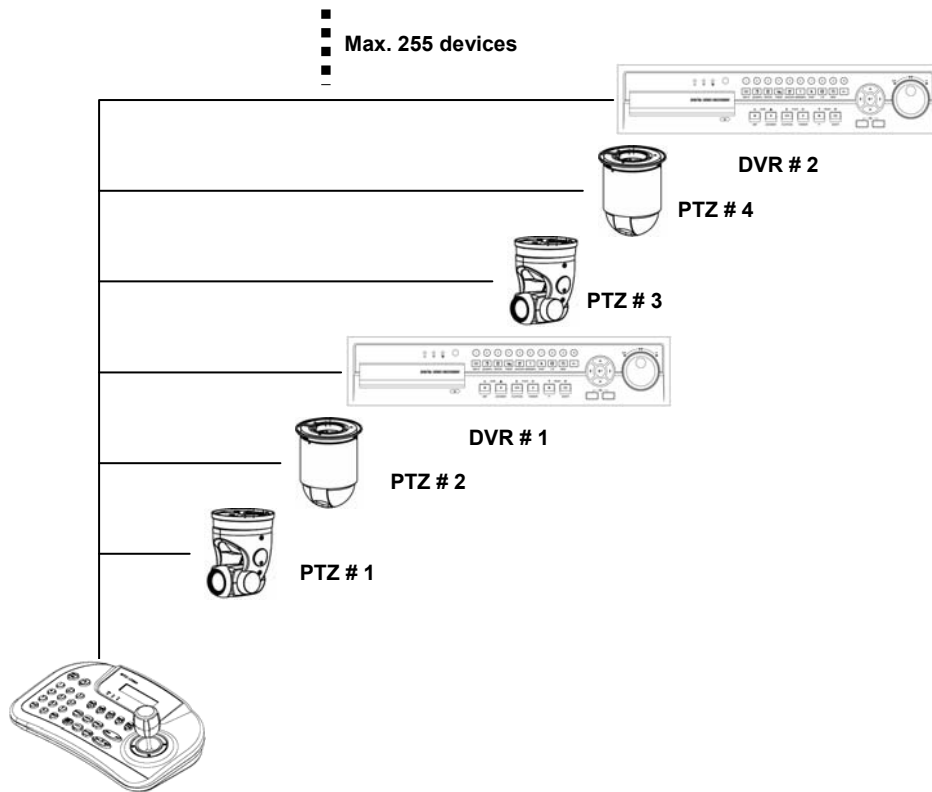


## 11.6 Considerations

- **SYSTEM ID:** DVR identification number. It can be set up on SYSTEM ID of SETUP>SYSTEM>Information page.
- **Camera ID:** Camera identification number defined by the Camera jumper setting
  - It should be set up with the identical ID on SETUP>DEVICES>Cam/PTZ page.
  - Camera jumper ID, ID given from DVR setup ->DEVICES->CAM/PTZ and ID controlled at CP1200A should be identical.
- Please use the number key on left side of the Keyboard for number input ("short key")
  - It may not operate appropriately because it is used to select Device.
- The **Set** key is used for entering Keyboard menu.(long on key)


## 11.7 Display Channel Change

- The numbers to be selected are different according to the DVR control mode and PTZ control mode.
- **DVR control mode**  
When KBD : (SYSTEM ID) displays on OSD screen, it is DVR control mode.  
The applicable channel pops up if you press the Channel number + "ENT"(short) key.  
You can select the channel number of 1 to 16 according to the DVR model.
- **PTZ control mode**  
When a disk recording capacity displays on OSD screen, it is PTZ control mode.(Default)  
If you press Camera ID + "ENT"(Long) key, camera image of the applicable ID pops up. PTZ control is available.  
You can select the Camera ID number of 1 to 255 according to the camera ID set up.
- The method to input the number follows as;  
ex)Ch. 8 => 8 and "ENT"      Ch.16 => 1, 6 and "ENT"  
    ID 8 => 8 and "ENT"      ID 255 => 2, 5, 5 and "ENT"
- The key combination should be recognized on the DVR of receiving mode.

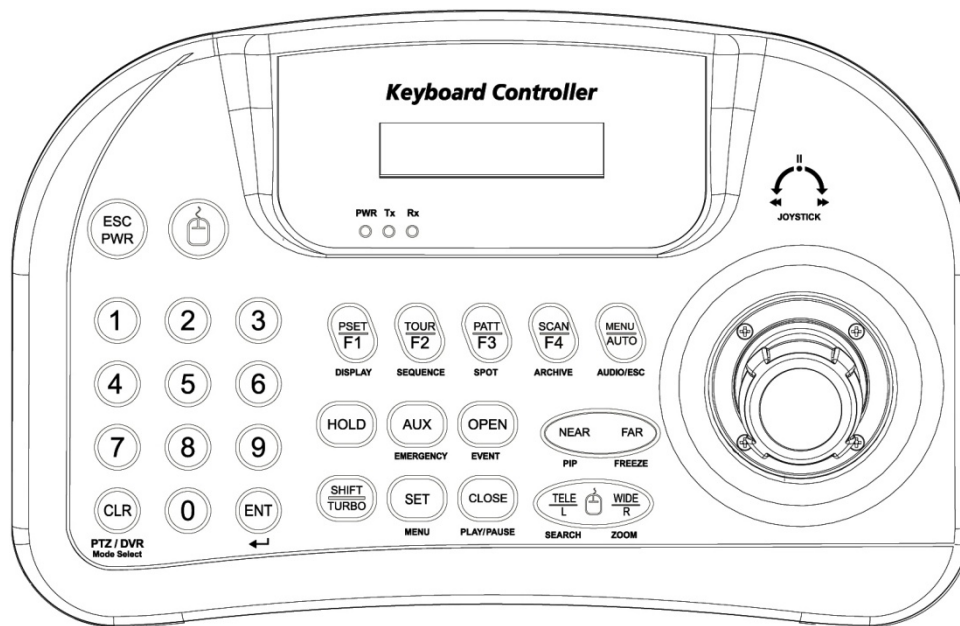


## 11.8 System Configuration Diagram


### 11.8.1 Configuration Diagram I

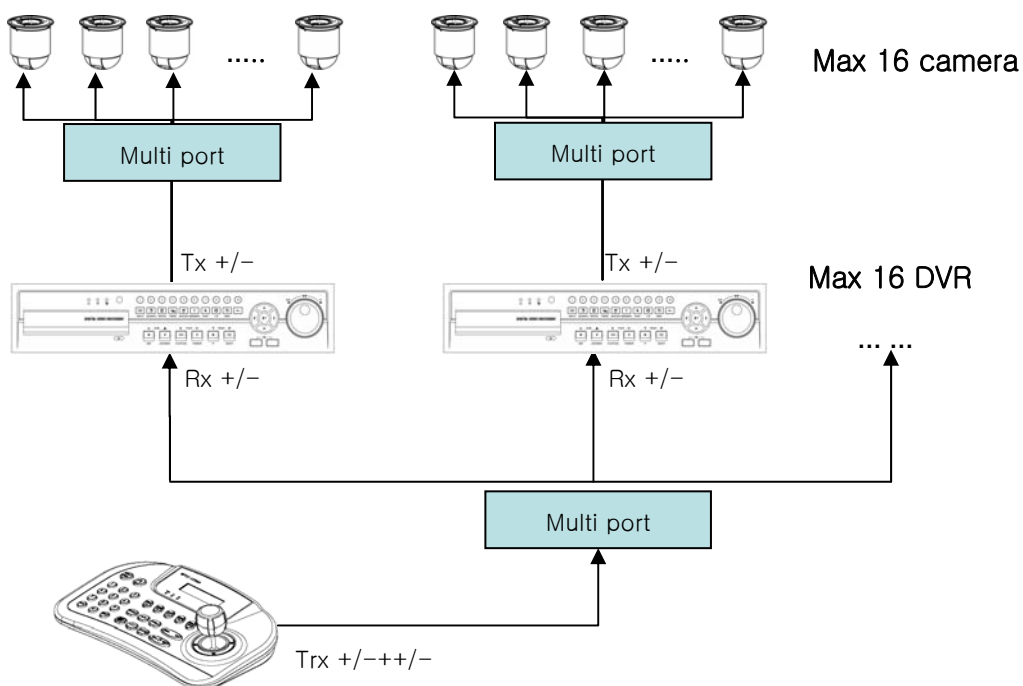

### 11.8.2 Configuration Diagram II – Single System Configuration (Camera 1, Keyboard 1, DVR 1)

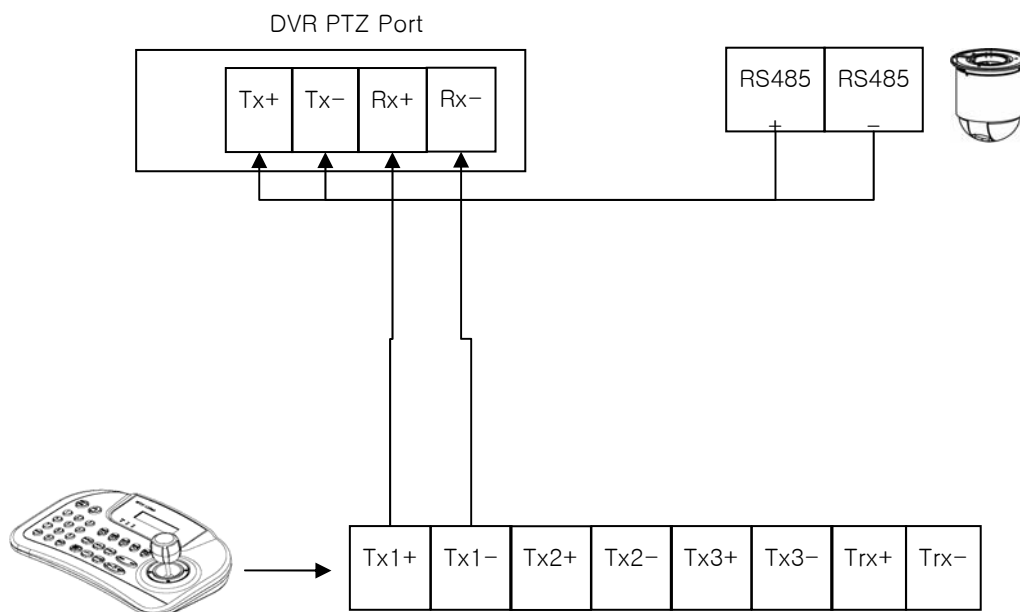


### 11.8.3 Configuration Diagram III – Multiple System Configuration

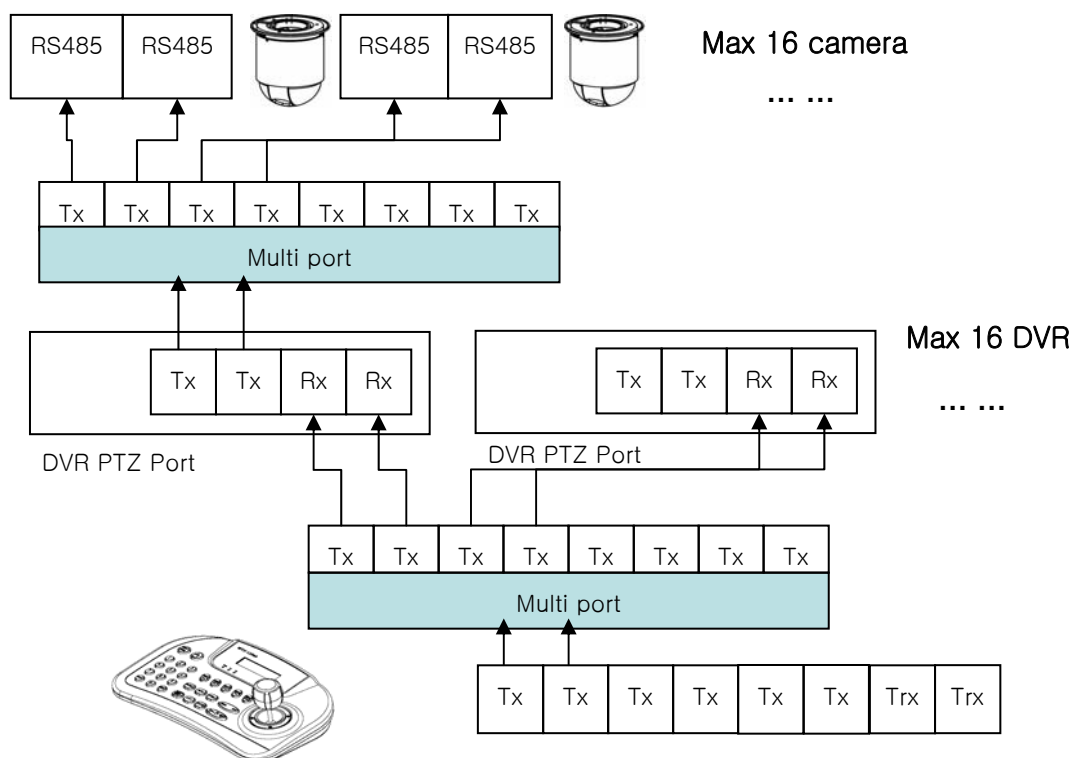

# Serial In (POS / ATM)

## User's Manual


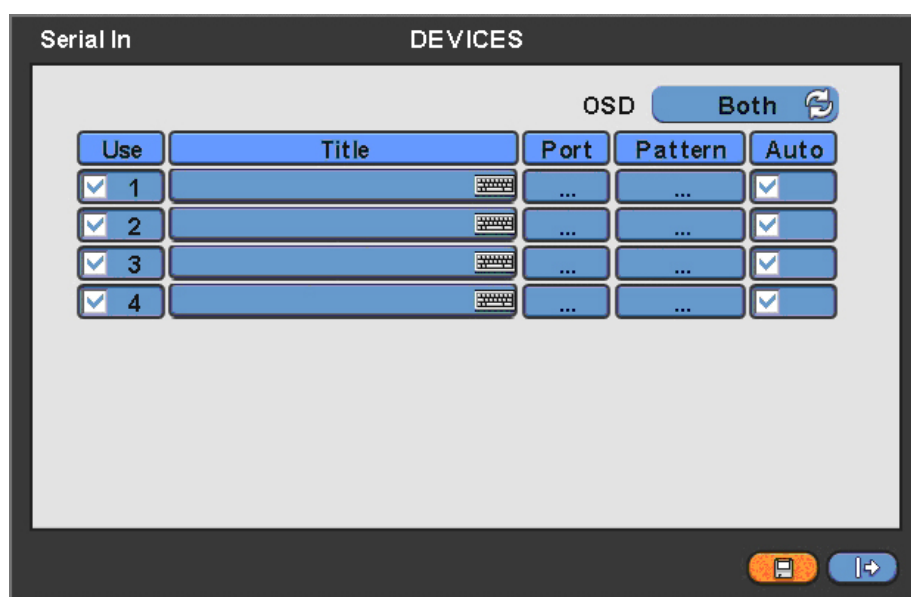


## 12.1 Usage of Serial-In Function

- Enables to record/search/display all transactions on monitoring screen by connecting POS/ATM/Cash Register.
- User can choose the data whether to record/display on their taste without limitedly designated protocols

## 12.2 Connection method

- This model has one ATM/POS channel and it is available to expand its connections up to four channels(Optional).
- Connect the RS232 port of Serial-in application to USB slot of DVR by using USB to RS-232 Converter Cable and it is available to connect up to 4 serial-in devices by using the converter.
- Applicable converters as follows
  - FTDI chipset included converter
  - Prolific PL2303 / PL2303X / PL2303HX chipset included converter
  - Winchiphead chipset included converter
- When use a converter, please connect USB slot of DVR first, then restart in order to the DVR recognizes the USB converter.
- When use a multi-converter, the port recognizes as Number 1 as its shortest line of converter consequently.
- When use both single and multi-converters, single converter is recognized as Port Number 1.

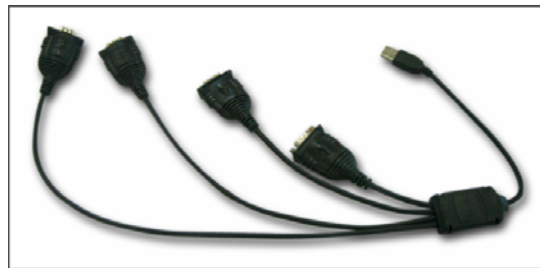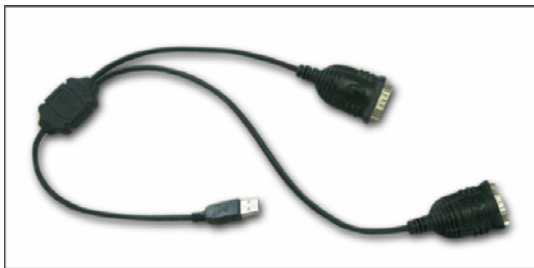


### (Note)

It is available to connect 1 Serial-In application without additional option.

## 12.3 Connection Diagram

- Using USB: Connect RS-232 port to USB port at front/rear of DVR by using a converter

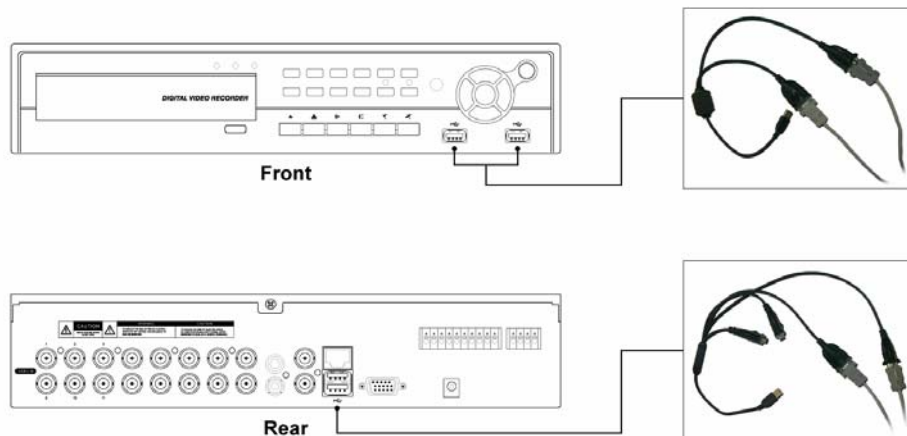




## 12.4 Link

### 12.4.1 Link Setup


- Click "Setup>Link>" then shows as below

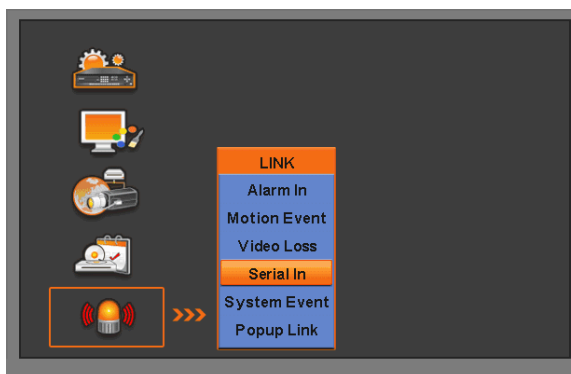

**(Note)**

The above menu is only available on the DVR model with Serial-In function.

- Click "Serial In" to appear following screen.

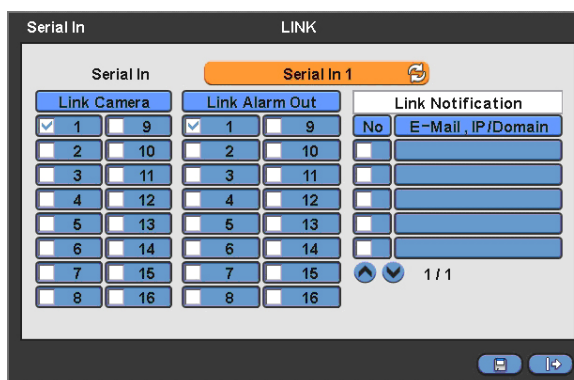

- Select POS/ATM port by clicking 'Serial In' button.
- Assign the port to display/record channel by clicking a "Link Camera".
- Select "Link Alarm Out" item to run alarm output when the serial in events occur.
- Designate the E-Mail address or IP/Domain name at "Link Notification" box when the serial in events occur.

**(NOTE)**

E-Mail address or IP/Domain configuration is possible to set in 'Setup>Network>Notification' menu.

- Set other POS/ATM port as above.
- Click "OK" to save the configuration.


## 12.4.2 Schedule Setup

- Click "Record>Schedule>" then shows as below

- Tick the box(☐) item AlarmIn
- Click the Time/Date that wish to activate ATM/POS function on schedule.
- It is possible to activate all the time by clicking top-right side of table.
- Click "OK" to save the schedules.

## 12.5 Setup

- Please click (←) "System>Devices>Serial-In", then you will see the display below.

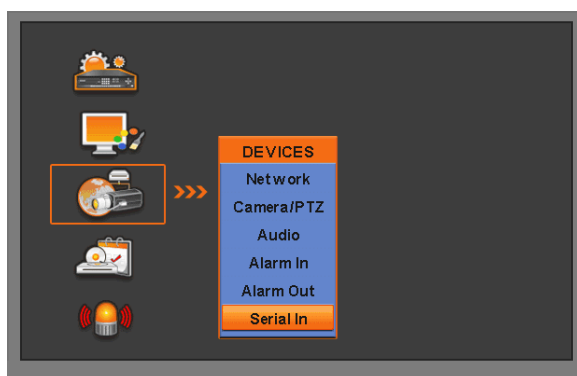

### (Note)

This [Serial In] section does not show without additional Serial-in option.


Use	Title	Port	Pattern	Auto
<input checked="" type="checkbox"/>	1	...	...	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/>	2	...	...	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/>	3	...	...	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/>	4	...	...	<input checked="" type="checkbox"/>

### 12.5.1 Title

- Click "Title" item then virtual keyboard will appear.
- Input the title then click (←) to save.

### 12.5.2 Port Setting

- Press (↵) the “Port Setting” button in order to set up the port. Default values are Baud rate 2400 bps, Data Bit 5 bit, Stop Bit 1 bit, Parity None.

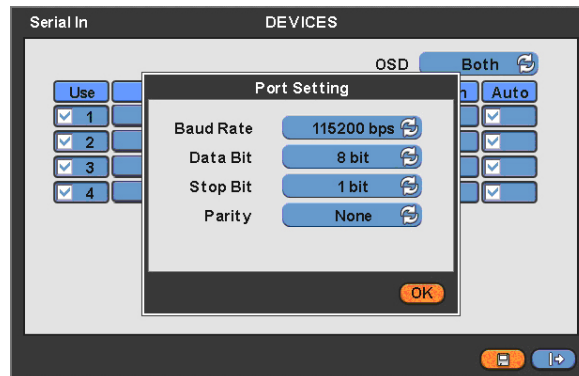

- When the setup is done, press enter (↵) to save the setting.

### 12.5.3 OSD Display


- OSD items are to decide whether to display the information from the serial port connected to the rs232 port on OSD screen. They have 4 menus as followings:
  - None: displays nothing on the OSD screen.
  - Live: displays incoming information from the serial port in real time on the OSD screen.
  - Playback: displays the saved information on the OSD screen during replay.
  - Both: displays all the information on both Live and Playback mode.

### 12.5.4 Pattern Setting

- You can select the name of serial device if you click (↵) the keyboard button of Title.
- When “Use” items of Numbers 1-4 are checked ☒ on Serial-In page, it receives the data from the applicable serial device.
- Check ☒ the “Auto” item so as to capture automatically all the data which includes unnecessary dummy data out of serial device as below.



- Analyze among the automatically captured data which will be displayed or discarded then enter Pattern Setting.
  - Unless you check “Auto” item, make sure to set up “Start Pattern” and “End Pattern”
  - “Discard Pattern”, “Line Delimiter” and “MCPL” are utilized independently, not relation to “Auto” mode.
- It is possible to input and analyze the serial data by clicking “Pattern” after tick the “Auto” box(☐) off.

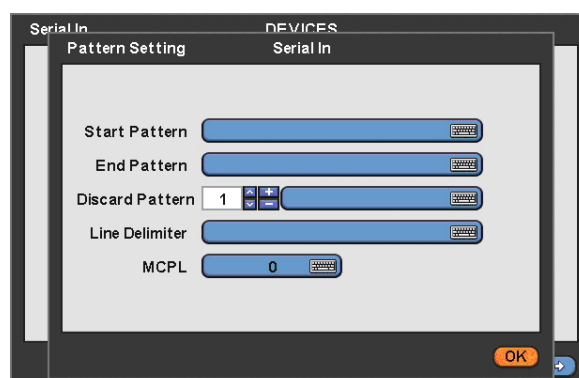

- Each item explains below:


- Start Pattern : Indicates the beginning of the new data when new designated data are received from a serial device.
- End Pattern : Indicates the end of the data when designated data are received from a serial device.
- Discard Pattern : Does not show the designated data on OSD screen. Sets up in order to designate dummy data or characters which is not favorably to be displayed. Can be designated up to 64 of discard patterns in total.
- Line Delimiter : Inputs characters to be used as delimiter between lines.
- MCPL(Minimum Character Per Line) : Sets up the number of the minimum strings each line. Does not show the characters on OSD screen if there is a character of which number is below the designated number in each line divided by the line delimiter.

Example)


- When it firstly connected, the data will be displayed as below



- Input a certain repeated string to “Line Delimiter”.

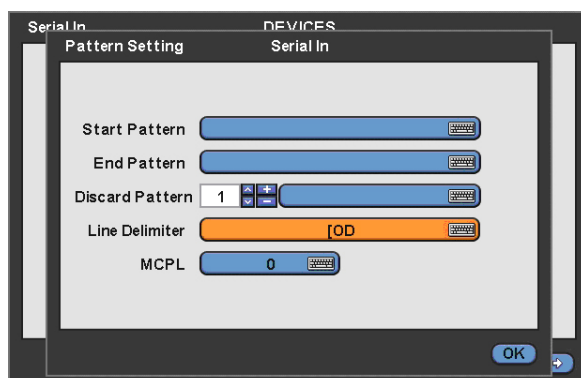

- Decide the number of minimum characters in “MCPL” item to hide data under the designated number of characters.

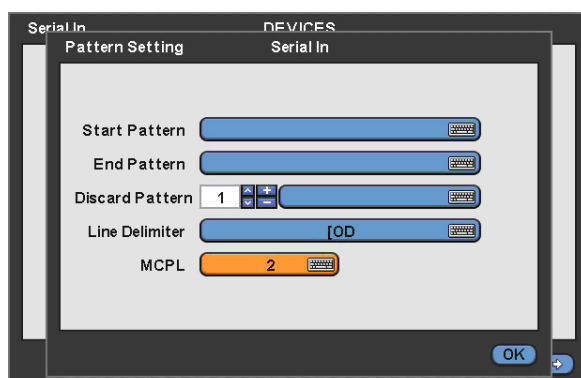

- Input the pattern of dummy data to Discard Pattern.

Serial In

DEVICES

Pattern Setting

Serial In

Start Pattern

End Pattern

Discard Pattern

1

[3D

Line Delimiter

]OD

MCPL

2

OK



- Choose the data which willing to display and enter the Start Pattern and End Pattern.

Serial In

DEVICES

Pattern Setting

Serial In

Start Pattern

start

End Pattern

end

Discard Pattern

1

[3D

Line Delimiter

]OD

MCPL

2

OK

Serial In

DEVICES

OSD

Both

Use

Title

Port

Pattern

Auto

1

OK

- Then tick the Auto box off in order to make the DVR recognizes the data between the Start and End patterns.



- Finally, test again and adjust data to remove missed dummy data.

## 12.6 Search

- Using event search function.
- Please click (⇐) the “Search>Event Search” menu on the pop-up menu of the wallpaper, then you will see the following screen.

Time	Type
2007/08/02 10:44:37	Espresso \$3.25
2007/08/02 10:45:50	Cappuccino \$4.75
2007/08/02 10:46:55	Caffe latte \$4.75
2007/08/02 10:48:10	Americano \$4.00
2007/08/02 10:56:21	Cappuccino \$4.75
2007/08/02 11:05:30	Espresso \$3.25
2007/08/02 12:10:17	Espresso \$3.25

- It is possible to search the recorded data which is set up on Serial In and Linking pages.
- The keyboard button for setting up the characters to be searched activates only when the Serial In item is checked☑.




# CMS Web Client

## User's Manual




## 13.1 Setup and Login

- MS Explorer web browser is required for installation and using this program.
- Open a browser and type the IP address of DVR.
- It is required to install ActiveX in the first connection.
- Basically, Explorer limits automatic ActiveX installation.
- Click the message above in the screen, then following menu box will appear.

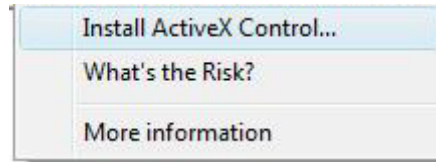

- Click "Install ActiveX Control..." and start installation.
- Installation box will appear and click "Install" for next step.
- After complete installation, Login panel will appear.
- Enter User ID and password of registered DVR then click ➡

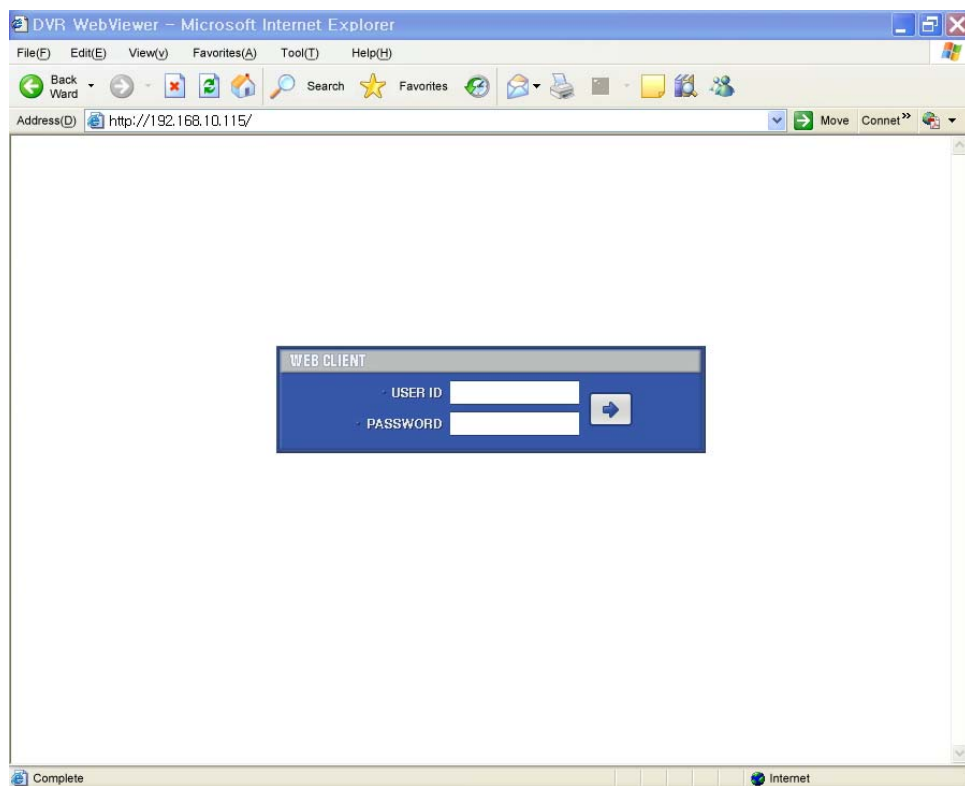


**(Note)**

Before network connection, be sure that HDD is installed. Otherwise, the DVR will not be connected over network.

## 13.2 Live Display.

- After Login, following screen will appear.





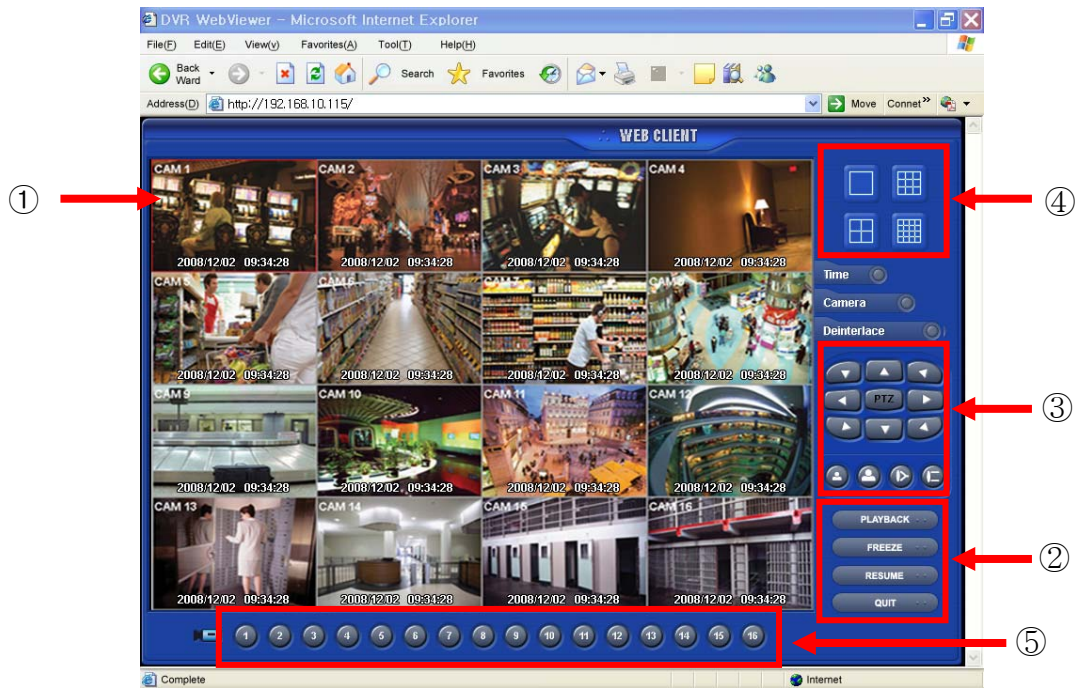

- The screen contains following features:

1. Display current live video
2. Setting display mode
  - Playback : Transferring search mode.
  - Freeze : Pause current display.
  - Resume : Resume paused display.
  - Quit : Finish program and close browser.
3. PTZ controller – Must complete the control setting on its DVR and Cameras first.




- Pan/Tilt direction button.
-  Zoom In / Zoom Out control button.
-  Focus Near / Focus Far control button.

4. Select display split mode. You can choose 1,4,9,16 split display consequently  
Check boxes for hiding/showing text from OSD.
5. Channel selection button - available to check the channel (camera) number of current display.

### 13.3 Playback Screen

- Click [Playback] then following screen will appear.

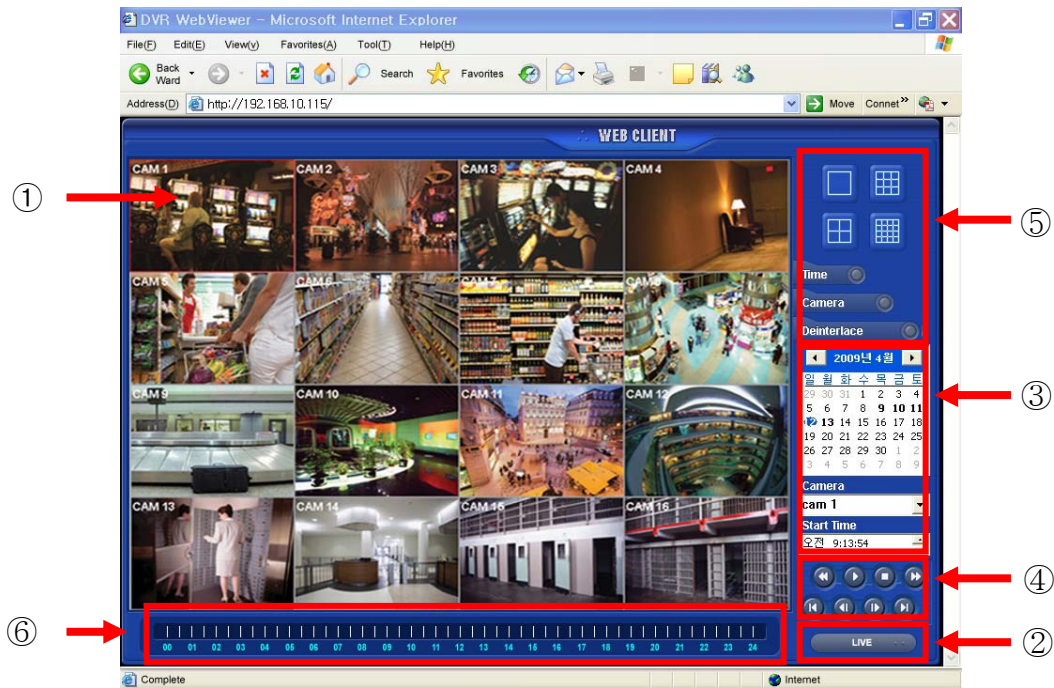

• The screen contains following features:


1. Searched playback video displays
2. Transferring Live mode
3. Setting Date/Time to search
  - Click a date in calendar, then recorded data will be showed up in Time bar
  - Start Time : Setting start time
  - Camera : Choosing camera number from 1~16 individually or all channels.
4. Play functions for playback .

⏮	Fast Backward Play
⏭	Fast Forward Play
▶	Play
■	Stop
⏮	Go to the First Image
⏭	Go to the Last Image
⏮	Go to the Previous Image
⏭	Go to the Next Image

5. Select display split mode. You can choose 1,4,9,16 split display consequently  
Check boxes for hiding/showing text on OSD.
6. Indicate the recorded data in Time bar figure.

# Mobile CMS

## User's Manual

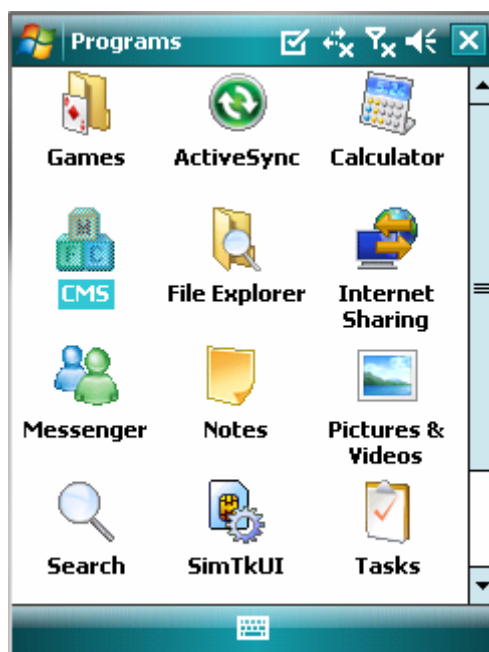


## 14.1 Requirements


- OS : Windows Mobile 6.1 or higher version.
- Memory : 512Kb or Higher.
- Device : Smartphone
- Network : Available all wireless networking method. I.e. Wi-fi, HSDPA, Wibro.

## 14.2 Installation


- Prepare ActiveSync program to user's PC.
  - Available download at following link.
  - <http://www.microsoft.com/downloads/details.aspx?FamilyID=9e641c34-6f7f-404d-a04b-dc09f8141141&DisplayLang=en>
  - ActiveSync enable users manage documents, calendars, contact lists and email between their PC and mobile device through a Cradle or a USB connection.
- Connect mobile device to PC then double click "Setup\_MobileCOM.exe" to start installation.
- The following screen will appear:

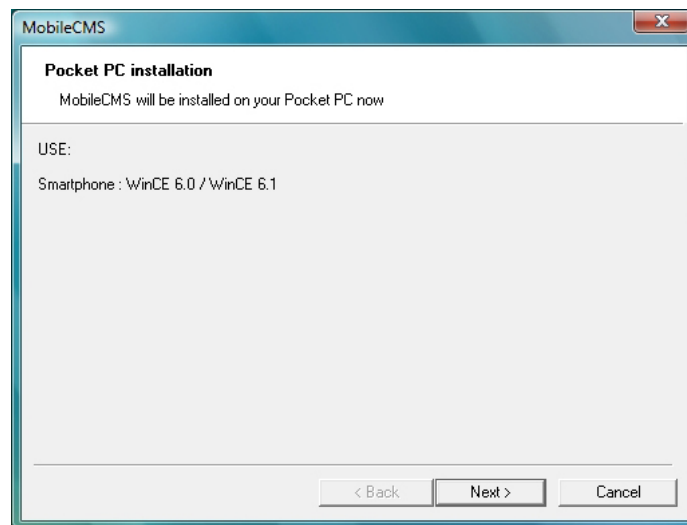

- Click "Next" button.

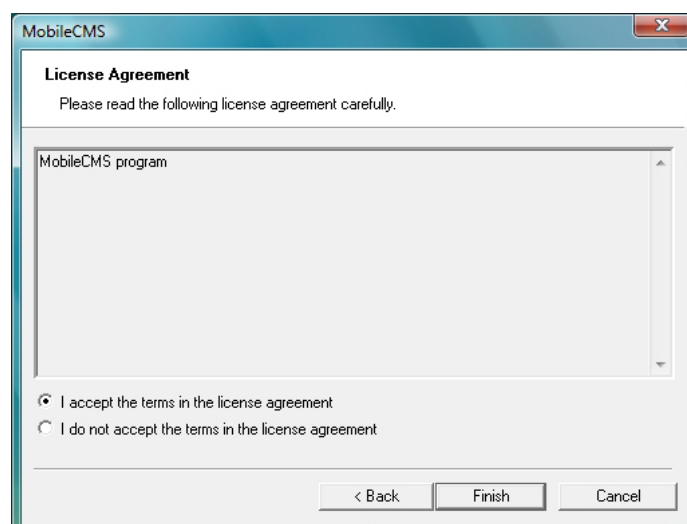

- Click accepting the license agreement, then click "Finish" button.

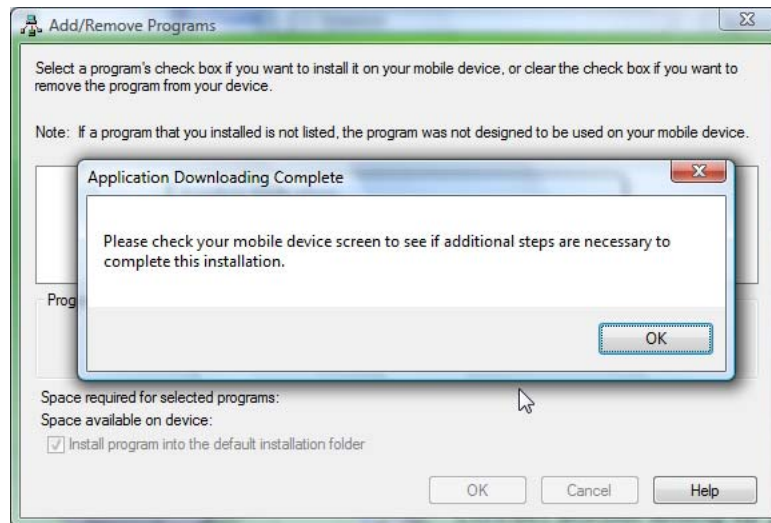


- Installation box will appear
- Click [OK] to start installation.
- When installation completed, following pop-up will appear.
- Click [OK].
- If following message appeared, it has successfully installed.



**(Note)**


Depending on mobile device, successful installation message may not appear.  
Click [OK] when license agreement message appear.

- Move to [Programs] page to check whether CMS has installed.

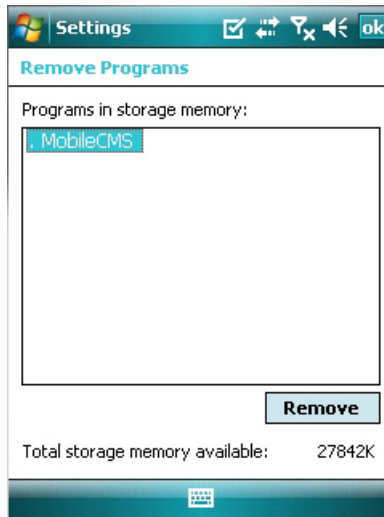


### 14.3 Site configuration

- Start CMS, following screen will appear.

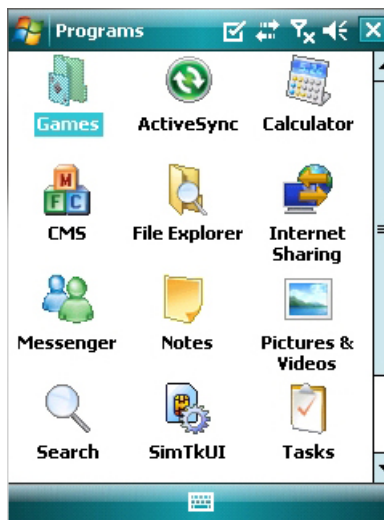

**Add**

- Click [Add] to appear following screen.

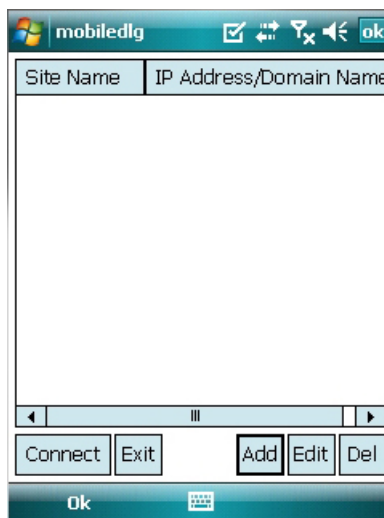

- Fill in correct information.
  - Site Name : Insert the name of site.
  - IP/Domain : Insert the IP address or Domain name of the site.
  - ID : Input the registered ID of the site.
  - Password : Input the password of the registered ID.
  - Command Port : Insert Command Port of the site.
  - Stream Port : Insert Stream Port of the site.
- Click [Save] then following screen will appear with registered site.

The screenshot shows a mobile application window titled 'mobiledlg'. It contains a table with two columns: 'Site Name' and 'IP Address/Domain Name'. The first row of the table has the values 'office' and '192.168.10.135'. Below the table, there are five buttons: 'Connect', 'Exit', 'Add', 'Edit', and 'Del'. At the very bottom, there is an 'Ok' button and a small 'ERROR' button.

#### Edit

- Select a site and click [Edit] then following screen will appear.


The screenshot shows the 'Edit' screen of the 'mobiledlg' application. It features several input fields: 'Site Name' (office), 'IP/Domain' (192.168.10.135), 'ID' (admin), 'Password' (\*\*\*\*), 'Command Port' (5920), and 'Stream Port' (5921). At the bottom, there are 'Save' and 'Cancel' buttons. The window also has a title bar with 'mobiledlg' and standard mobile UI icons.

- Correct items then click [Save].

#### Delete

- Select a site and click [Del].
- Confirmation message will pop up.




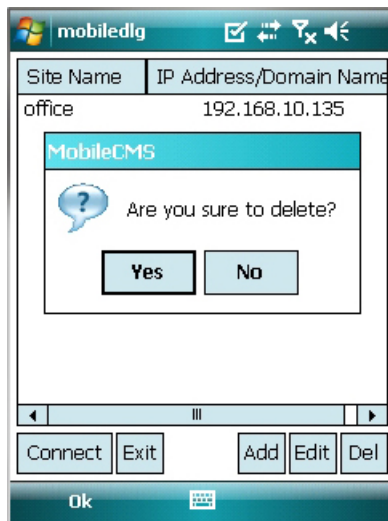

- Click [Yes] then the site information will be removed.

#### 14.4 Connect

- Select a site then click [Connect].

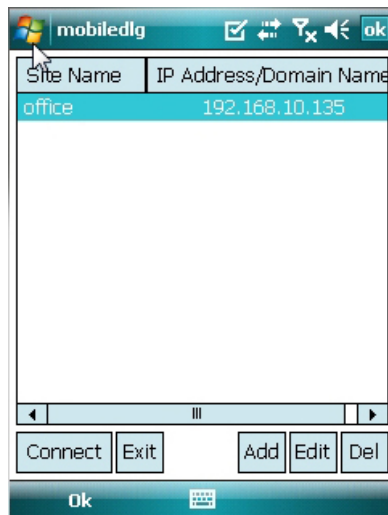

- Live display screen of the site will appear if it is successfully connected.
- Users are able to select a camera by clicking camera button.
- Click [Disconnect] then, live display screen will be closed and Site list box will appear.


#### 14.5 Uninstall

- Move to [Program Menu> System] then click [Remove Programs].
- The currently installed list will show up.





- Choose MobileCMS on the list and click [Remove].

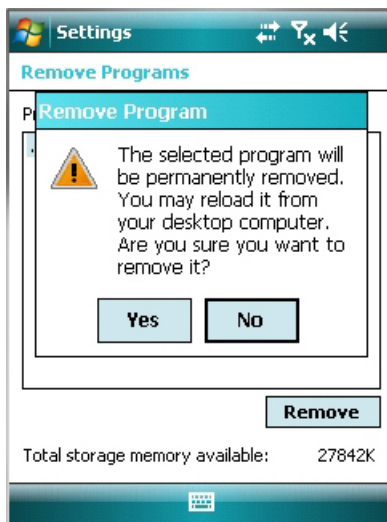

- Confirmation message will pop up
- Click [Yes] to complete uninstall then program will be removed.